ECM-945GSE

3.5” Intel® 945GSE Atom™ N270 Micro Module

User’s Manual

2nd Ed – 30 April 2009

Part No. E2047381601R

FCC Statement

THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

Copyright Notice

Copyright © 2009 Avalue Technology Inc., ALL RIGHTS RESERVED.

No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

Trademark Acknowledgement

Brand and product names are trademarks or registered trademarks of their respective owners.

Disclaimer

Avalue Technology Inc. reserves the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. Avalue Technology assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright, or masks work rights to these products, and makes no representations or warranties that these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. Avalue Technology Inc. makes no representation or warranty that such application will be suitable for the specified use without further testing or modification.

Life Support Policy

Avalue Technology's PRODUCTS ARE NOT FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE PRIOR WRITTEN APPROVAL OF Avalue Technology Inc.

As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into body, or (b) support or sustain life and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:
http://www.avalue.com.tw/

Headquarters and Branch

Avalue Technology Inc.

7F, 228, Lian-cheng Road, Chung Ho City, Taipei, Taiwan

Tel: +886-2-8226-2345 Fax: +886-2-8226-2777

Information: sales@avalue.com.tw Service: service@avalue.com.tw

Avalue USA

Avalue Technology Inc.

200 Tornillo Way, Suite 210, Tinton Falls,

NJ 07712

Tel: +1-732-578-0200

Fax: +1-732-578-0250

Information: sales@avalue-usa.com

Service: support@avalue-usa.com

Avalue Europe

Avalue Europe A/S

Moelledalen 22C, 3140

Aalsgaarde, Denmark

Tel: +45-7025-0310

Fax:+45-4975-5026

Information: sales.europe@avalue.com.tw

Service: service.europe@avalue.com.tw

BCM Advanced Research

BCM Advanced Research

an Avalue Company

7 Marconi, Irvine, CA92618

Tel: +1-949-470-1888

Fax: +1-949-470-0971

Information: BCMSales@bcmcom.com

Web: www.bcmcom.com

Avalue China

Avalue Technology Inc.

Room 805, Building 9,No.99 Tianzhou Rd.,

Caohejing Development Area,

Xuhui District, Shanghai

Tel: +86-21-5169-3609

Fax:+86-21-5445-3266

Information: sales.china@avalue.com.cn

Service: service@avalue.com.tw

Product Warranty

Avalue warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Avalue, or which have been subject to misuse, abuse, accident or improper installation. Avalue assumes no liability under the terms of this warranty as a consequence of such events. Because of Avalue's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If any of Avalue's products is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time, and freight. Please consult your dealer for more details. If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU type and speed, Avalue's products model name, hardware & BIOS revision number, other hardware and software used, etc.) Note anything abnormal and list any on-screen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information available.
3. If your product is diagnosed as defective, obtain an RMA (return material authorization) number from your dealer. This allows us to process your good return more quickly.
4. Carefully pack the defective product, a complete Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

If you still cannot find the answer, gather all the information or questions that apply to your problem, and with the product close at hand, call your dealer. Our dealers are well trained and ready to give you the support you need to get the most from your Avalue's products. In fact, most problems reported are minor and are able to be easily solved over the phone.
In addition, free technical support is available from Avalue's engineers every business day. We are always ready to give advice on application requirements or specific information on the installation and operation of any of our products. Please do not hesitate to call or e-mail us.

Contents

1. Getting Started 11
1.1 Safety Precautions 11
1.2 Packing List 11
1.3 Document Amendment History 12
1.4 Manual Objectives 13
1.5 System Specifications 14
1.6 Architecture Overview – Block Diagram 16
2. Hardware Configuration 17
2.1 Product Overview 18
2.2 Installation Procedure 19
2.2.1 Main Memory 20
2.3 Jumper and Connector List 22
2.4 Setting Jumpers & Connectors 24
2.4.1 AT/ATX mode select (PWR_MSEL) 24
2.4.2 Input Power select (PWR_5VSEL) 25
2.4.3 5VSB Power Connector in ATX (PWR_5VSEL) 25
2.4.3.1 Signal Description –AT/ATX mode / Input power type 26
2.4.4 Power Connector (PWRCON) 27
2.4.5 Clear CMOS (JBAT) 27
2.4.6 CF Mode select (JCF) 28
2.4.7 Audio connector (JAUDIO) 28
2.4.8 General purpose I/O connector (JDIO) 29
2.4.8.1 Signal Description – General Purpose I/O Connector (JDIO) 29
2.4.9 Serial port 2 connector (JCOM2) 30
2.4.10 Serial Port 2 in RS-422/485 (J422/485) 31
2.4.11 Serial Port 1 Connector (COM1) 32
2.4.11.1 Signal Description – Serial Port Connector (COM1,JCOM2,J422/485) 32
2.4.12 LCD Inverter Connector (JBKL) 33
2.4.12.1 Signal Description – LCD Inverter Connector (JBKL) 33
2.4.13 LCD backlight brightness adjustment connector (JVR) 34
2.4.14 USB Connector 2, 3, 4 &5 (JUSB2, JUSB3) 35
2.4.14.1 Signal Description – USB Connector 35
2.4.15 LVDS Connector (JLVDS) 36
2.4.15.1 Signal Description – LVDS Connector (JLVDS) 36
2.4.16 DVI Connector (JDVI) 37
2.4.17 Keyboard & mouse connector (JKB/MS) 38
2.4.17.1 Signal Description – PS/2 Keyboard & Mouse Connector (KB1) 38

2.4.18 IDE connector (IDE) 39
2.4.18.1 Signal Description – Primary IDE Connector (IDE) 40
2.4.19 TV connector (JTV) 41
2.4.19.1 Signal Description – TV Out Connecter (JTV) 41
2.4.20 VGA Connector (VGA) 42
2.5 Audio / USB Daughter Board User's Guide 43
2.5.1 Jumper and Connector Layout 43
2.5.2 Jumper and Connector List 43
2.5.3 Setting Jumper and Connector 44
3. BIOS Setup 46
3.1 Starting Setup 47
3.2 Using Setup 48
3.3 Getting Help 49
3.4 In Case of Problems 49
3.5 Main Menu 50
3.5.1 Standard CMOS Features 51
3.5.1.1 Main Menu Selection 51
3.5.1.2 IDE Adapter Setup 52
3.5.2 Advanced BIOS Features 53
3.5.2.1 CPU Feature 53
3.5.2.2 Hard Disk Boot Priority 54
3.5.2.3 Virus Warning 54
3.5.2.4 CPU L1 & L2 & L3 Cache 55
3.5.2.5 Hyper-Threading Technology 55
3.5.2.6 Quick Power On Self Test 55
3.5.2.7 First/Second/Third/Other Boot Device 55
3.5.2.8 Boot Up NumLock Status 55
3.5.2.9 Gate A20 Option 55
3.5.2.10 Typematic Rate Setting 56
3.5.2.11 Typematic Rate (Chars/Sec) 56
3.5.2.12 Typematic Delay (Msec) 56
3.5.2.13 Security Option 56
3.5.2.14 APIC Mode 56
3.5.2.15 MPS Version Control For OS 57
3.5.2.16 OS Select for DRAM > 64MB 57
3.5.2.17 Report No FDD For WIN95 57
3.5.2.18 Small Logo (EPA) Show 57
3.5.3 Advanced Chipset Features 58
3.5.3.1 DRAM Timing Selectable 58
3.5.3.2 CAS Latency Time 58

3.5.3.3 DRAM RAS# to CAS# Delay 59
3.5.3.4 DRAM RAS# Precharge 59
3.5.3.5 Precharge Delay (tRAS) 59
3.5.3.6 System Memory Frequency 59
3.5.3.7 System BIOS Cacheable 59
3.5.3.8 Video BIOS Cacheable 60
3.5.3.9 Memory Hole At 15M-16M 60
3.5.3.10 PCI Express Root 60
3.5.3.11 PCI-E Compliancy Mode 61
3.5.3.12 VGA Setting 62
3.5.4 Integrated Peripherals 63
3.5.4.1 OnChip IDE Device 63
3.5.4.1.1 On-Chip Serial ATA Setting 65
3.5.4.2 Onboard Device 65
3.5.4.3 Super IO Device 66
3.5.4.4 Watch Dog Timer 66
3.5.4.5 USB Device Setting 67
3.5.5 Power Management Setup 68
3.5.5.1 PCI Express PM Function 68
3.5.5.2 ACPI Function 68
3.5.5.3 ACPI Suspend Type 68
3.5.5.4 Run VGABIOS if S3 Resume 68
3.5.5.5 Power Management 69
3.5.5.6 Video Off Method 69
3.5.5.7 Video Off In Suspend 69
3.5.5.8 Suspend Type 69
3.5.5.9 MODEM Use IRQ 69
3.5.5.10 Suspended Mode 69
3.5.5.11 HDD Power Down 69
3.5.5.12 Soft-Off by PWR-BTTN 70
3.5.5.13 Wake Up by PCI Card 70
3.5.5.14 Power On By Ring 70
3.5.5.15 Resume By Alarm 70
3.5.5.16 Date<of Month>/Time<hh:mm:ss> Alarm 70
3.5.5.17 Primary/Secondary IDE 0/1, FDD,COM,LPT PORT, PCI PIRQ[A-D]# 70
3.5.6 PnP / PCI Configuration 71
3.5.6.1 Init Display First 71
3.5.6.2 Reset Configuration Data 71
3.5.6.3 Resources Controlled By 72
3.5.6.4 PCI / VGA Palette Snoop 72

3.5.6.5 INT Pin 1/2/3/4/5/6/7/8 Assignment 72
3.5.6.6 Maximum Payload Size 72
3.5.7 PC Health Status 73
3.5.8 Load Optimized Defaults 74
3.5.9 Set Supervisor / User Password 75
3.5.10 Save & Exit Setup 77
3.5.11 Exit Without Save 78
4. Drivers Installation 79
4.1 Install Chipset Driver (For Intel 945GSE) 80
4.2 Install Display Driver (For Intel 945GSE) 81
4.3 Install Ethernet Driver (For Marvell 88E8053 Gigabit LAN) 82
4.4 Install Audio Driver (For Realtek ALC655) 84
5. Mechanical Drawing 85
Appendix A: AWARD BIOS POST Messages 88
Overview 89
Post Beep 89
Error Messages 89
1. CMOS BATTERY HAS FAILED 89
2. CMOS CHECKSUM ERROR 89
3. DISK BOOT FAILURE, INSERT SYSTEM DISK AND PRESS ENTER 89
4. DISKETTE DRIVES OR TYPES MISMATCH ERROR - RUN SETUP 89
5. DISPLAY SWITCH IS SET INCORRECTLY 90
6. DISPLAY TYPE HAS CHANGED SINCE LAST BOOT 90
7. EISA Configuration Checksum Error PLEASE RUN EISA CONFIGURATION UTILITY 90
8. EISA Configuration Is Not Complete PLEASE RUN EISA CONFIGURATION UTILITY 90
9. ERROR ENCOUNTERED INITIALIZING HARD DRIVE 90
10. ERROR INITIALIZING HARD DISK CONTROLLER 90
11. FLOPPY DISK CNTRLR ERROR OR NO CNTRLR PRESENT 90
12. Invalid EISA Configuration PLEASE RUN EISA CONFIGURATION UTILITY 91
13. KEYBOARD ERROR OR NO KEYBOARD PRESENT 91
14. Memory Address Error at 91
15. Memory parity Error at 91
16. MEMORY SIZE HAS CHANGED SINCE LAST BOOT 91
17. Memory Verify Error at 91
18. OFFENDING ADDRESS NOT FOUND 91
19. OFFENDING SEGMENT: 91
20. PRESS A KEY TO REBOOT 91
21. PRESS F1 TO DISABLE NMI, F2 TO REBOOT 92
22. RAM PARITY ERROR - CHECKING FOR SEGMENT 92
23. Should Be Empty But EISA Board Found PLEASE RUN EISA CONFIGURATION UTILITY 92

24. Should Have EISA Board But Not Found PLEASE RUN EISA CONFIGURATION UTILITY 92
25. Slot Not Empty 92
26. SYSTEM HALTED, (CTRL-ALT-DEL) TO REBOOT 92
27. Wrong Board In Slot PLEASE RUN EISA CONFIGURATION UTILITY 92
28. FLOPPY DISK(S) fail (80) → Unable to reset floppy subsystem. 93
29. FLOPPY DISK(S) fail (40) → Floppy Type dismatch. 93
30. Hard Disk(s) fail (80) → HDD reset failed. 93
31. Hard Disk(s) fail (40) → HDD controller diagnostics failed. 93
32. Hard Disk(s) fail (20) → HDD initialization error. 93
33. Hard Disk(s) fail (10) → Unable to recalibrate fixed disk. 93
34. Hard Disk(s) fail (08) → Sector Verify failed. 93
35. Keyboard is locked out - Unlock the key. 93
36. Keyboard error or no keyboard present. 93
37. Manufacturing POST loop. 93
38. BIOS ROM checksum error - System halted. 93
39. Memory test fail. 93
40. POST Codes 93
40.1 Normal POST Code 94
40.2 Quick POST Codes 100
40.3 S4 POST Codes 102
40.4 BootBlock POST Codes 103

1. Getting Started

1.1 Safety Precautions

Warning!

Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!

Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

Before you begin installing your single board, please make sure that the following materials have been shipped:

- 1 x Intel® 945GSE Micro Module
- 1 x Quick Installation Guide for ECM-945GSE
- 1 x AUX-021 daughter board
- 1 x DVD-ROM contains the followings:
  - User's Manual (this manual in PDF file)
  - Ethernet driver and utilities
  - VGA drivers and utilities
  - Audio drivers and utilities
- 1 x Cable set contains the followings:
  - 1 x IDE HDD cable (44-pin, pitch 2.0mm)
  - 1 x Audio cable (10pin, 2.0mm pitch)
  - 1 x USB cable (10P/2.54mm-10P/2.0mm)
  - 1 x Serial ATA cables (7-pin, standard)
  - 1 x PS/2 Keyboard & mouse Y cable (7-pin, Mini-DIN)

If any of the above items is damaged or missing, contact your retailer.

1.3 Document Amendment History

Revision	Date	Comment
1st	Mar. 2009	Initial Release
2nd	Apr. 2009	1.AUX-021 modification 2.Add PWR_SB, signal descrioption of PWR_5VSEL&PWR_MSEL

1.4 Manual Objectives

This manual describes in detail the Avalue Technology ECM-945GSE Single Board.

We have tried to include as much information as possible but we have not duplicated information that is provided in the standard IBM Technical References, unless it proved to be necessary to aid in the understanding of this board.

We strongly recommend that you study this manual carefully before attempting to interface with ECM-945GSE series or change the standard configurations. Whilst all the necessary information is available in this manual we would recommend that unless you are confident, you contact your supplier for guidance.

Please be aware that it is possible to create configurations within the CMOS RAM that make booting impossible. If this should happen, clear the CMOS settings, (see the description of the Jumper Settings for details).

If you have any suggestions or find any errors concerning this manual and want to inform us of these, please contact our Customer Service department with the relevant details.

1.5 System Specifications

System	
CPU	Intel® Atom™ processor N270 1.6 GHz CPU
FSB	533 MHz
BIOS	Award 8 Mbit Flash BIOS
System Chipset	Intel® 945GSE / ICH7-M
I/O Chip	ITE 8712F
System Memory	One 200-pin SODIMM socket supports up to 2 GB DDR2 400/533 MHz SDRAM
SSD	One CompactFlash Type I/II socket
Watchdog Timer	Reset: 1~65535 sec./min and 1 min./step
Expansion	1 x Mini PCIe Card
I/O	
MIO	1 x EIDE (Ultra DMA 100), 2 x SATA, 1 x RS-232, 1 x RS-232/422/485,1 x K/B & Mouse
USB	6 x USB 2.0 ports
DIO	16-bit General Purpose I/O for DI and DO
Display	
Chipset	Intel® 945GSE Integrated
Display Memory	Intel® DVMT 3.0 Supports up to 224 MB Shared Video Memory
Resolution	CRT mode: 2048 x 1536 @ 75 Hz LCD/Simultaneous mode (4:3): 1600 x 1200 @ 60 Hz
Dual Display	CRT + LVDS, CRT + TV-out, CRT +DVI
LCD Interface/ DVI	18 - Dual-CH 18-bit LVDS/ Chrontel CH7307 SDVO to DVI transmitter 24 - Optional Dual-CH 18/24 bit LVDS
TV-out	**Intel® 945GSE Integrated TV-out Interface Supports HDTV**
Audio	
Chipset	Intel® ICH7-M
AC97 Codec	Realtek ALC655 supports 5.1 CH Audio
Audio Interface	Mic in, Line in, Line out

Ethernet	
LAN	Dual Marvell 88E8053 Gigabit Ehternet
Ethernet Interface	1000 Base-Tx Gigabit Ethernet Compatible
Mechanical & Environmental	
Power Requirement	+12 V @ 1.38A (with 512MB DDR2 SDRAM), +5 Vsb (for ATX only)
Power Type	Single Power AT / ATX
Operation Temperature	0~60°C (32~140°F)
Operating Humidity	0%~90% relative humidity, non-condensing
Size (L x W)	5.7" x 4.2" (146 mm x 105 mm)
Weight	0.44 lbs (0.2 Kg)

1.6 Architecture Overview – Block Diagram

The following block diagram shows the architecture and main components of ECM-945GSE.

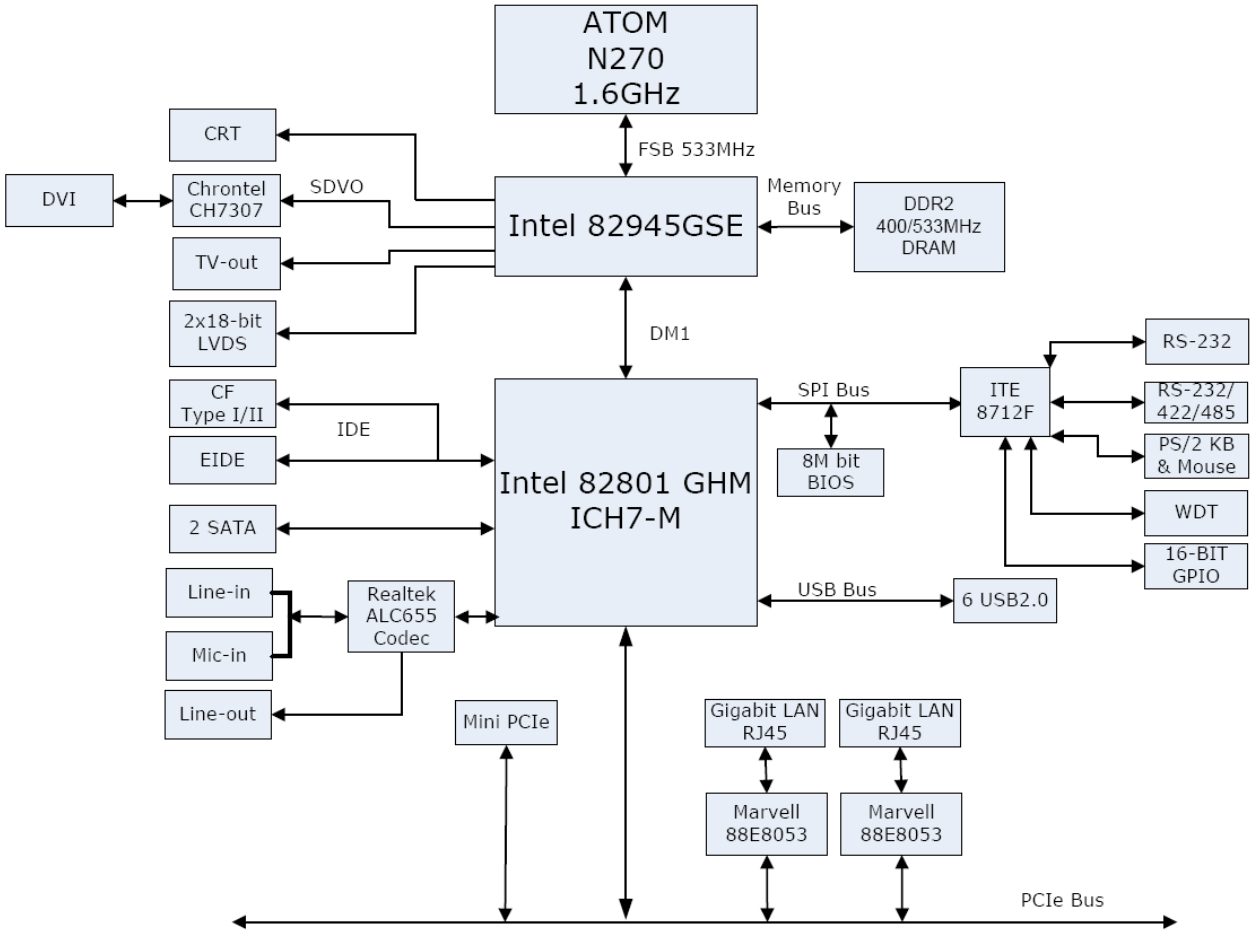

2. Hardware Configuration

2.1 Product Overview

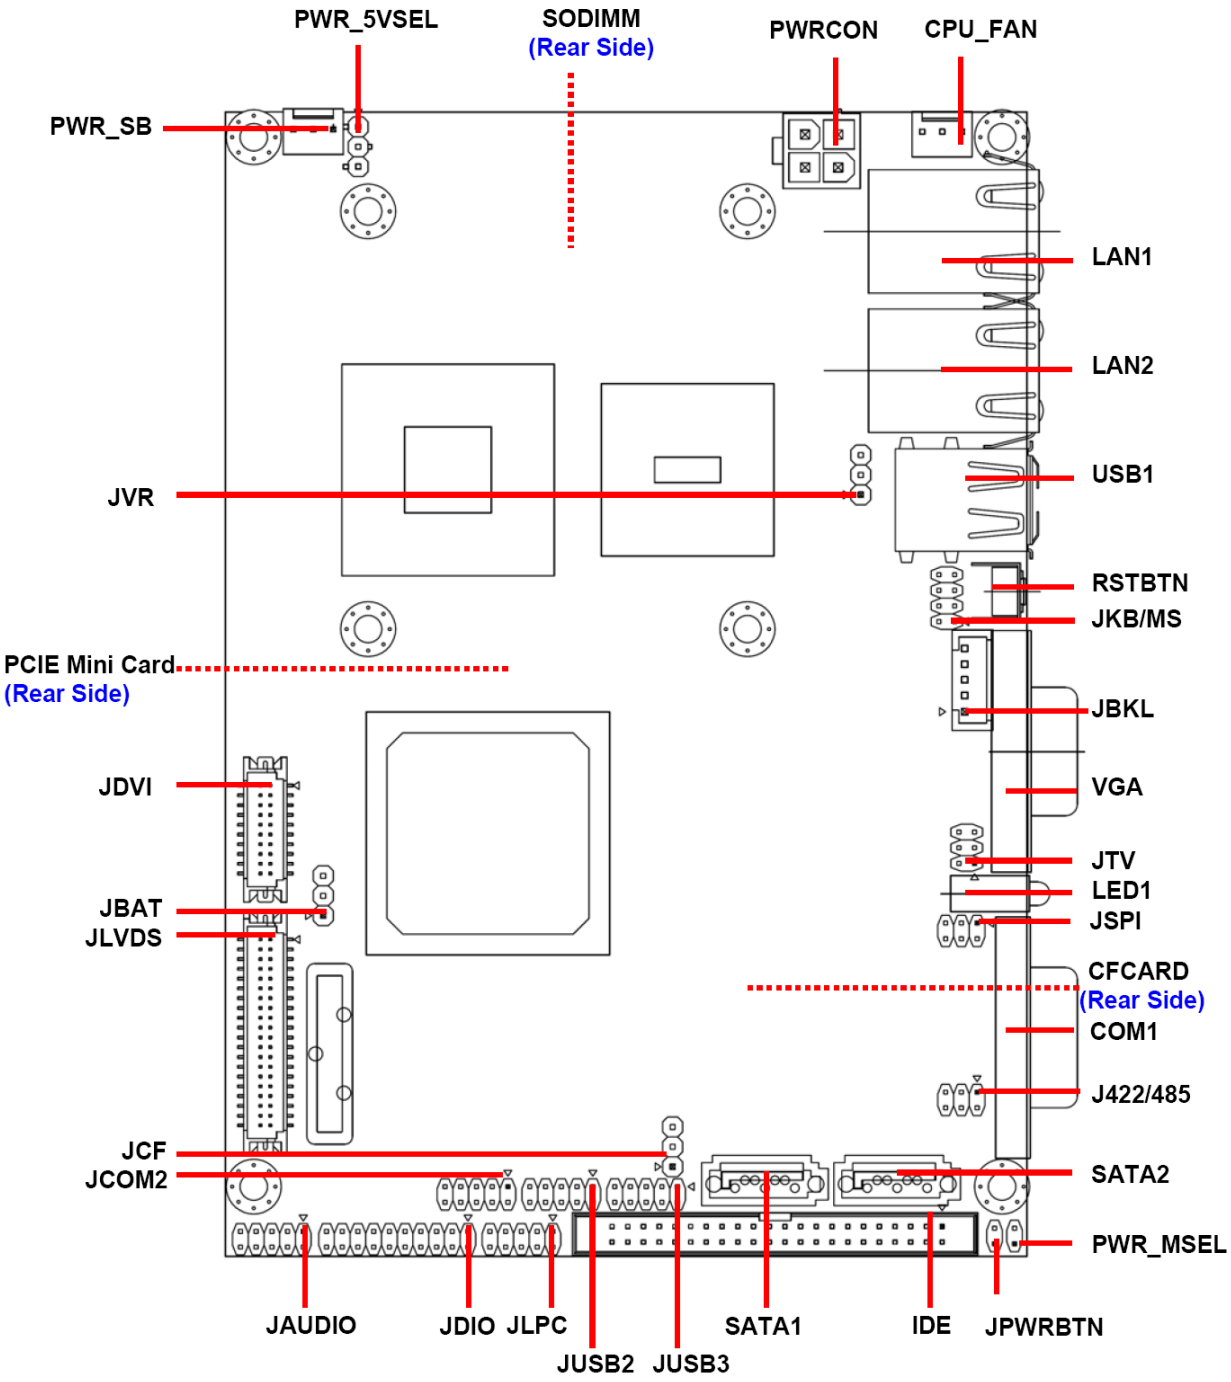

2.2 Installation Procedure

This chapter explains you the instructions of how to setup your system.

1. Turn off the power supply.
2. Insert the SODIMM module (be careful with the orientation).
3. Insert all external cables for hard disk, floppy, keyboard, mouse, USB etc. except for flat panel. A CRT monitor must be connected in order to change CMOS settings to support flat panel.
4. Connect power supply to the board via the ATXPWR.
5. Turn on the power.
6. Enter the BIOS setup by pressing the delete key during boot up. Use the "LOAD BIOS DEFAULTS" feature. The ***Integrated Peripheral Setup*** and the ***Standard CMOS Setup*** Window must be entered and configured correctly to match the particular system configuration.
7. If TFT panel display is to be utilized, make sure the panel voltage is correctly set before connecting the display cable and turning on the power.

2.2.1 Main Memory

ECM-945GM provides one 200-pin SODIMM sockets to support DDR2 SDRAM. The total maximum memory size is 2GB.

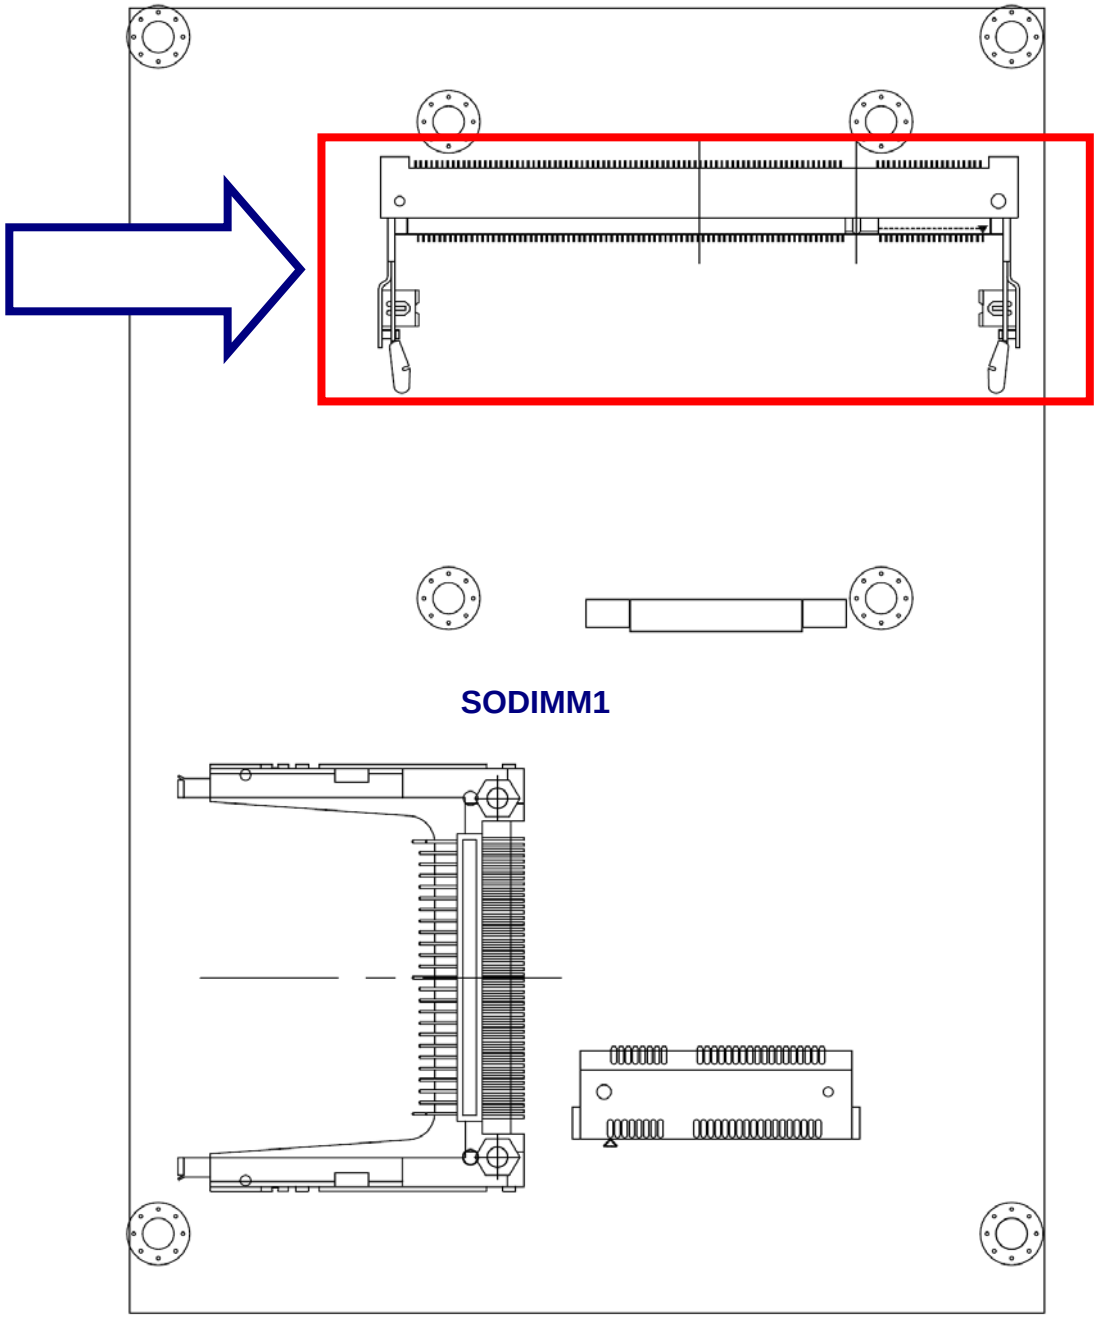

Make sure to unplug the power supply before adding or removing SODIMMs or other system components. Failure to do so may cause severe damage to both the board and the components.

- Locate the SODIMM socket on the board.
- Hold two edges of the SODIMM module carefully. Keep away of touching its connectors.
- Align the notch key on the module with the rib on the slot.
- Firmly press the modules into the socket automatically snaps into the mounting notch. Do not force the SODIMM module in with extra force as the SODIMM module only fit in one direction.

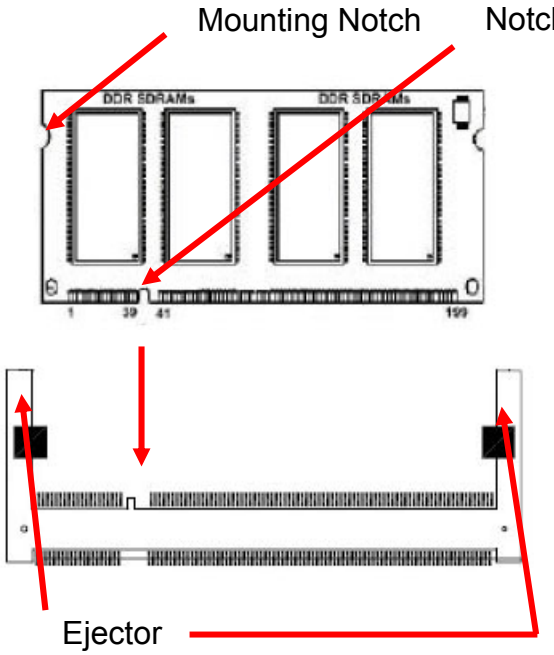

200-pin DDRSODIMM

- To remove the SODIMM modules, push the two ejector tabs on the slot outward simultaneously, and then pull out the SODIMM module.

Note:

(1) Please do not change any DDR2 SDRAM parameter in BIOS setup to increase your system's performance without acquiring technical information in advance.

(2) Static electricity can damage the electronic components of the computer or optional boards. Before starting these procedures, ensure that you are discharged of static electricity by touching a grounded metal object briefly.

2.3 Jumper and Connector List

You can configure your board to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch.

It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip. To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2, and 3. In this case, you would connect either two pins.



Open Closed Closed 2-3

The jumper settings are schematically depicted in this manual as follows:

Open Closed Closed 2-3

A pair of needle-nose pliers may be helpful when working with jumpers.

Connectors on the board are linked to external devices such as hard disk drives, a keyboard, or floppy drives. In addition, the board has a number of jumpers that allow you to configure your system to suit your application.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.

The following tables list the function of each of the board's jumpers and connectors.

Jumpers

Label	Function	Note
JBAT1	Clear CMOS	3 x 1 header, pitch 2.54mm
JCF	CF mode select	3 x 1 header, pitch 2.54mm
PWR_MSEL	AT/ATX mode select	2 x 1 header, pitch 2.0mm
PWR_5VSEL	Input power select	3 x 1 header, pitch 2.54mm

Connectors

Label	Function	Note
CFCARD	Compact Flash card connector	Type I/II x 1
COM1	Serial port 1 connector	D-sub 9-pin, male
CPU_FAN	CPU fan connector	3 x 1 wafer, pitch 2.54mm
IDE	Primary IDE connector	22x2 header, pitch 2.0mm
J422/485	Serial port 2 in RS-422/485 mode	3 x 2 header, pitch 2.0mm
JAUDIO	Audio connector	5 x 2 header, pitch 2.0mm
JBKL	LCD Inverter Connector	5 x 1 wafer, pitch 2.0mm
JCOM2	Serial port 2 in RS-232 mode	5 x 2 header, pitch 2.0mm
JDIO	General purpose I/O connector	10 x 2 header, pitch 2.0mm
JDVI	DVI connector	
JKB/MS	PS/2 keyboard & mouse connector	4 x 2 header, pitch 2.0mm
JLPC	(Reserved for debug)	5 x 2 header, pitch 2.0mm
JLVDS	LVDS connector	
JPWRBTN	Power button connector	1x2 header, pitch 2.00mm
JSPI	(Revered for BIOS programming)	2x2 header, pitch 2.00mm
JTV	TV connector	3 x 2 header, pitch 2.0mm
JUSB2	USB connector 2 & 3	5 x 2 header, pitch 2.0mm
JUSB3	USB connector 4 & 5	5 x 2 header, pitch 2.0mm
JVR	LCD backlight brightness adjustment	3 x 1 header, pitch 2.54mm
LED1	HDD & Power indicator	
PWR_SB	5VSB connector in ATX	3 x 1 wafer, pitch 2.54mm
PWRCON	Power connector	2 x 2 header, pitch 2.0mm
RSTBTN	Reset button	
SATA1	Serial ATA connector 1	
SATA2	Serial ATA connector 2	
USB1	USB connector 0 & 1 (Co-lay with KB/MS)	
VGA	VGA connector	D-sub 15-pin, female

2.4 Setting Jumpers & Connectors

2.4.1 AT/ATX mode select (PWR_MSEL)

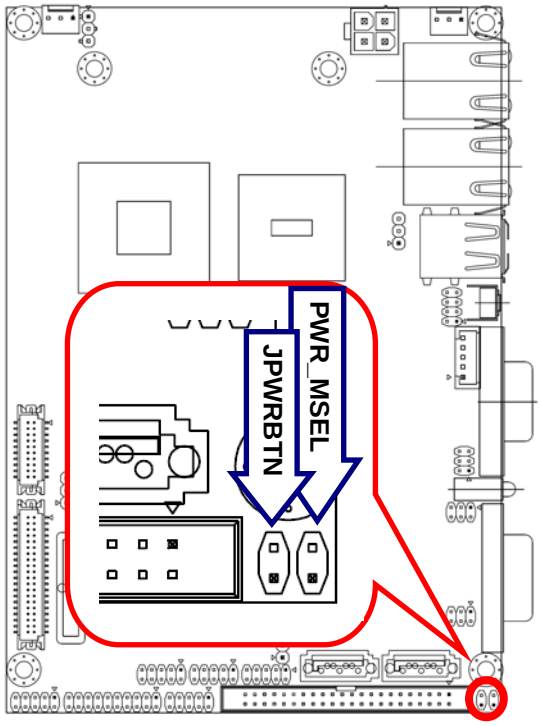

AT*



ATX



*** Default**

ATX connector (JPWRBTN)



Signal	PIN
GND	2
PWR_BT	1

Note: JPWRBTN is available in ATX mode.

2.4.2 Input Power select (PWR_5VSEL)

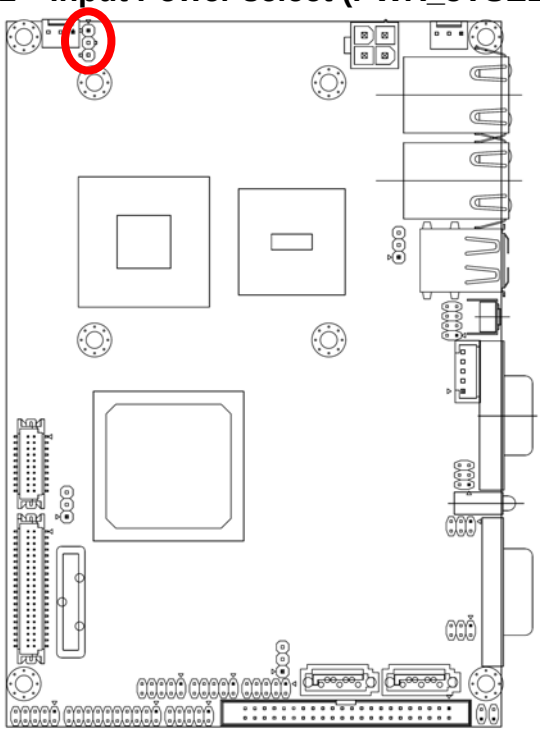

AT Type *



ATX Type



*** Default**

2.4.3 5VSB Power Connector in ATX (PWR_5VSEL)

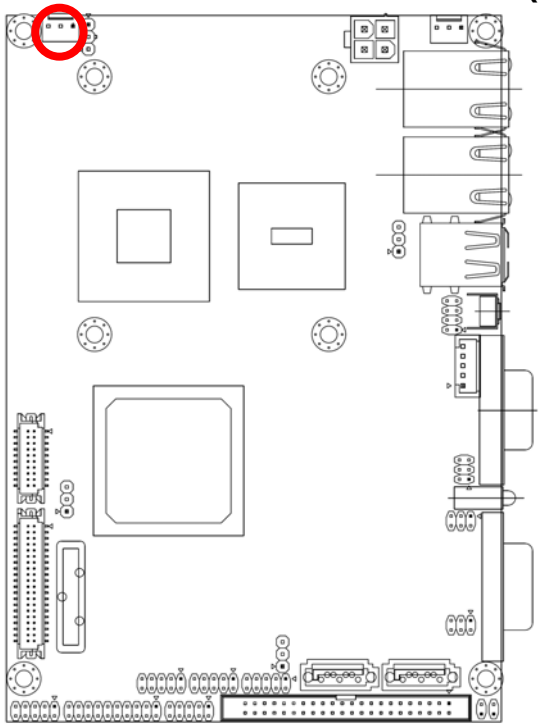



PIN	Signal
1	PSON#
2	GND
3	5VSB

Note: Connect **PWR_SB** with cable in ATX type power input.

2.4.3.1 Signal Description –AT/ATX mode / Input power type

Input type	Power-ON Mode	Description
AT type (PWR_5VSEL) 	**AT Mode** (PWR_MSEL) 	Use AT type power input, and set the board in AT mode.
	ATX Mode (PWR_MSEL) 	Use AT type power input, and set the board in ATX mode.
ATX type (PWR_5VSEL) 	**AT Mode** (PWR_MSEL) 	Use ATX type power input, and set the board in AT mode.
	ATX Mode (PWR_MSEL) 	Use ATX type power input, and set the board in ATX mode.

2.4.4 Power Connector (PWRCON)

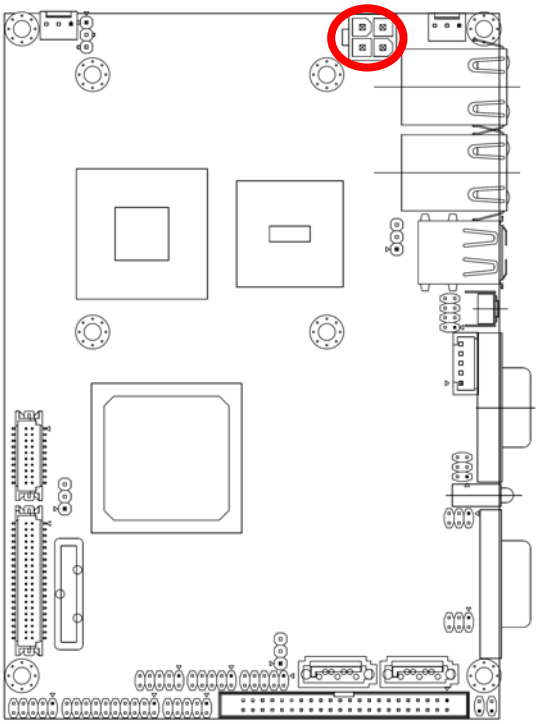

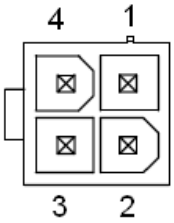

Signal	PIN	PIN	Signal
GND	1	2	GND
VIN	3	4	VIN

*** Default**

2.4.5 Clear CMOS (JBAT)

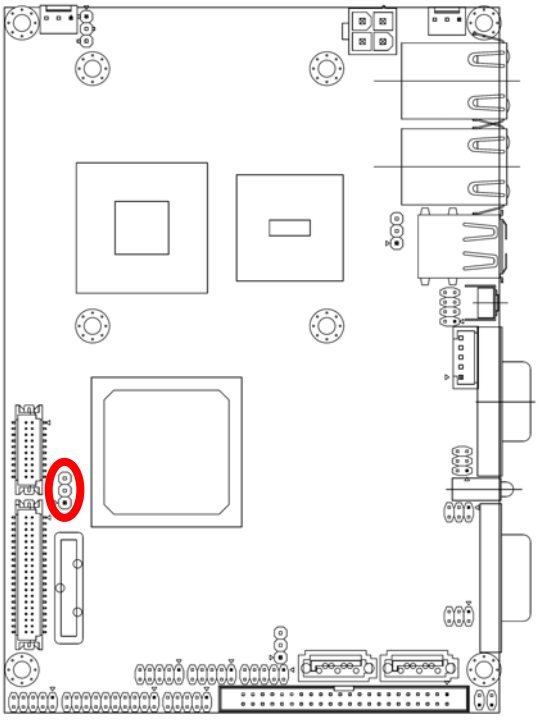

Protect*



Clear CMOS



*** Default**

2.4.6 CF Mode select (JCF)

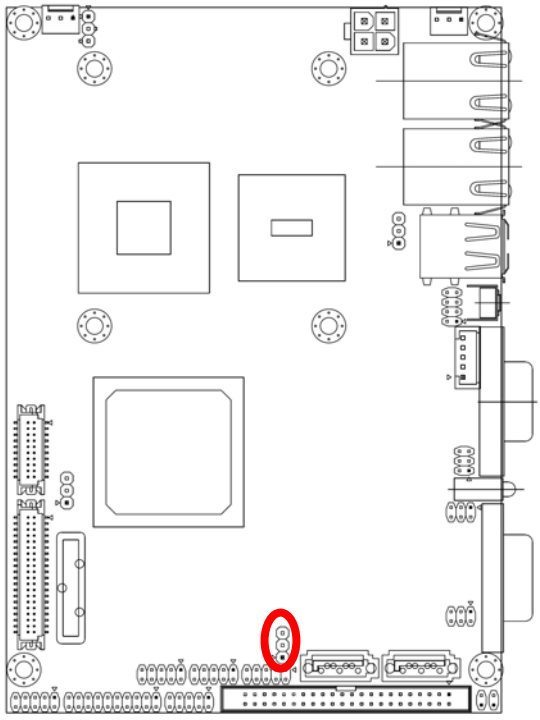

Master*



Slave



*** Default**

2.4.7 Audio connector (JAUDIO)

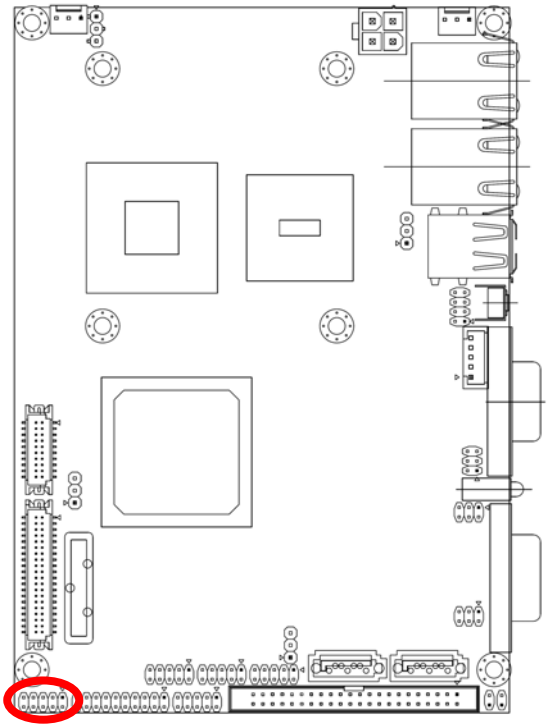

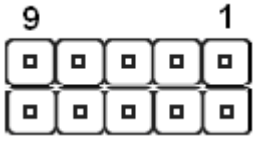

Signal	PIN	PIN	Signal
LIN-OUT_R	1	2	LIN-OUT-L
GND	3	4	GND
LIN-IN-R	5	6	LIN-IN-L
MIC-REF	7	8	MIC-IN
NC	9	10	NC

2.4.8 General purpose I/O connector (JDIO)

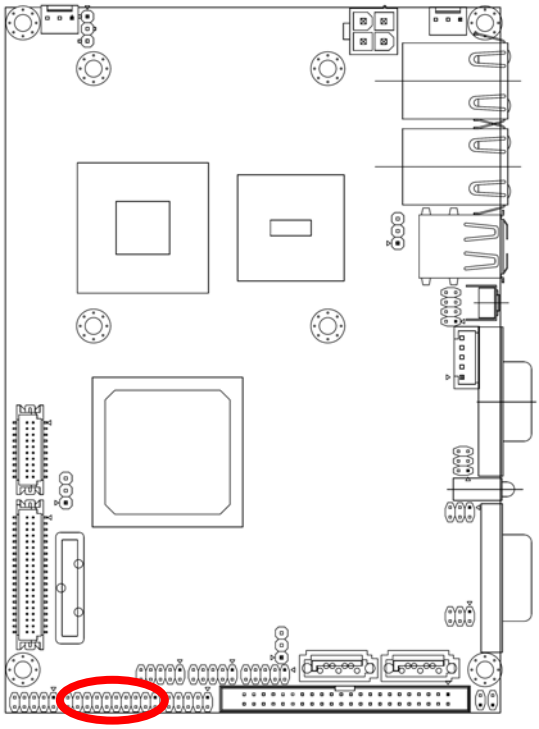



Signal	PIN	PIN	Signal
DO_GP20	1	2	DI_GP30
DO_GP21	3	4	DI_GP31
DO_GP22	5	6	DI_GP32
DO_GP23	7	8	DI_GP33
DO_GP24	9	10	DI_GP34
DO_GP25	11	12	DI_GP35
DO_GP26	13	14	DI_GP36
DO_GP27	15	16	DI_GP37
SMB_CLK	17	18	SMB_DATA
GND	19	20	+5V

2.4.8.1 Signal Description – General Purpose I/O Connector (JDIO)

Signal	Signal Description
GP [20:27]	General purpose I/O port 1 bit 0~7.
SMB_CLK	Data input for I2C input, 5V tolerant
SMB_DATA	Data input for I2C serial input, 5V tolerant

2.4.9 CPU Fan connector (CPU_FAN)

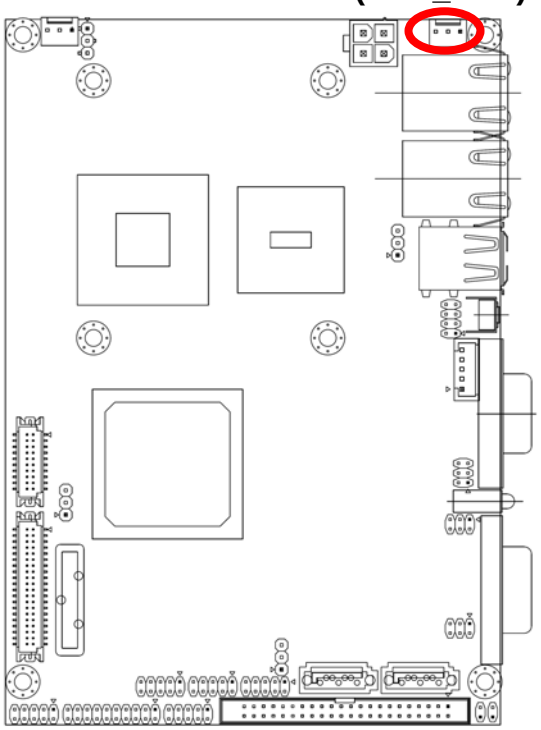



Signal	PIN
GND	1
+12V	2
+5V	3

2.4.10 Serial port 2 connector (JCOM2)

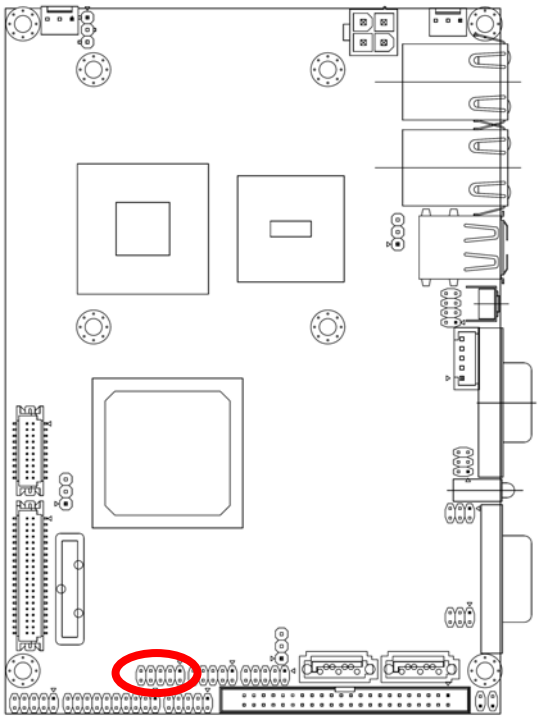

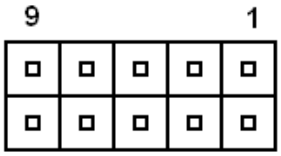

Signal	PIN	PIN	Signal
NC	10	9	RI
CTS	8	7	RTS
DSR	6	5	GND
DTR	4	3	TxD
RxD	2	1	DCD

2.4.11 Serial Port 2 in RS-422/485 (J422/485)

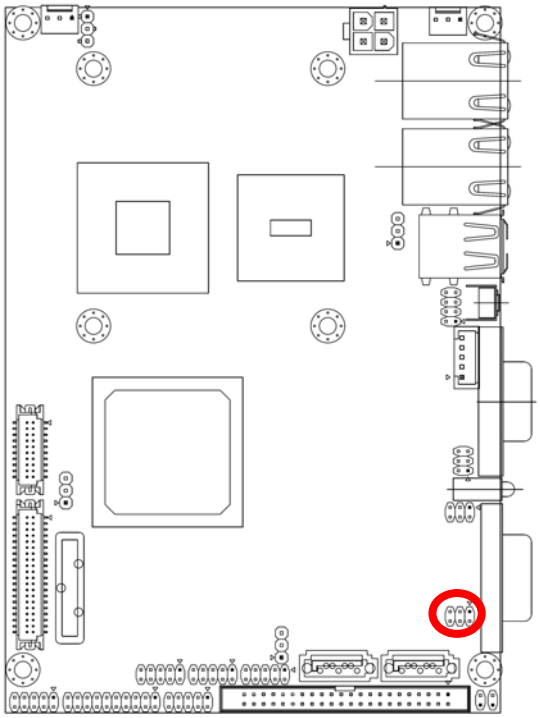

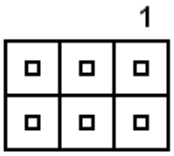

Signal	PIN	PIN	Signal
+5V	5	6	GND
TxD+	3	4	RxD+
TxD-	1	2	RxD-

Note:

J422/485 is available after modifying the mode of COM2 in BIOS setting.

2.4.12 Serial Port 1 Connector (COM1)

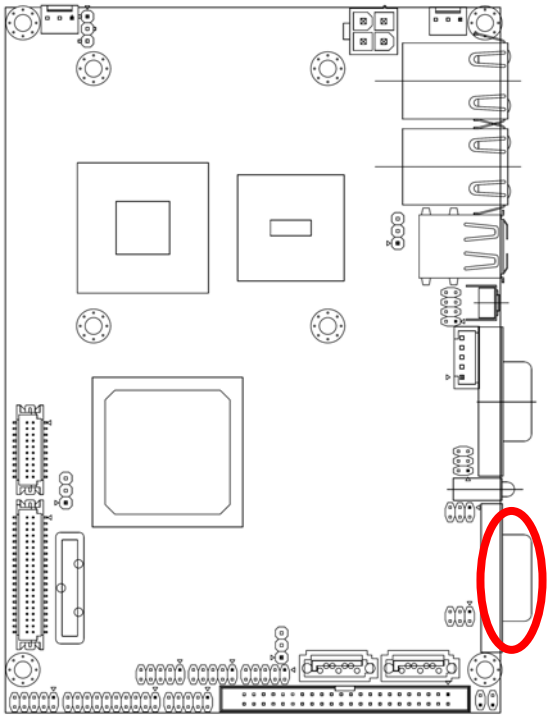

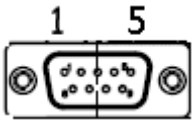

Signal	PIN	PIN	Signal
GND	5		
		9	RI
DTR	4		
		8	CTS
TxD	3		
		7	RTS
RxD	2		
		6	DSR
DCD	1		

2.4.11.1 Signal Description – Serial Port Connector (COM1,JCOM2,J422/485)

Signal	Signal Description
TxD	Serial output. This signal sends serial data to the communication link. The signal is set to a marking state on hardware reset when the transmitter is empty or when loop mode operation is initiated.
RxD	Serial input. This signal receives serial data from the communication link.
DTR	Data Terminal Ready. This signal indicates to the modem or data set that the on-board UART is ready to establish a communication link.
DSR	Data Set Ready. This signal indicates that the modem or data set is ready to establish a communication link.
RTS	Request To Send. This signal indicates to the modem or data set that the on-board UART is ready to exchange data.
CTS	Clear To Send. This signal indicates that the modem or data set is ready to exchange data.
DCD	Data Carrier Detect. This signal indicates that the modem or data set has detected the data carrier.
RI	Ring Indicator. This signal indicates that the modem has received a telephone ringing signal.

2.4.13 LCD Inverter Connector (JBKL)

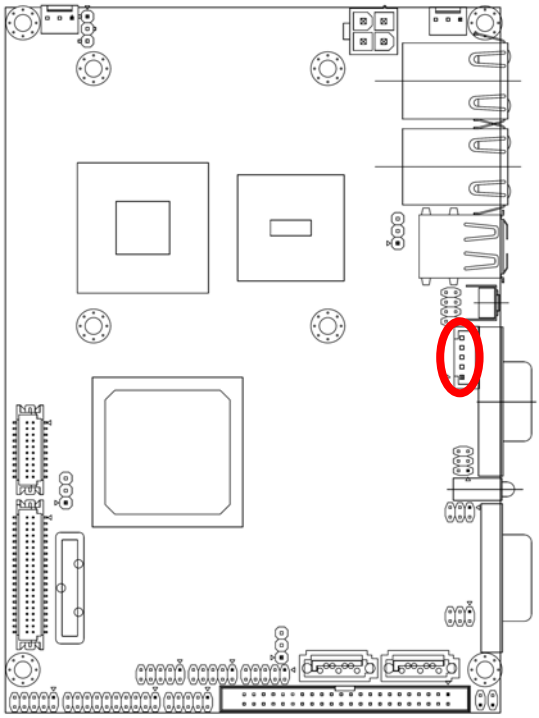



Signal	PIN
+5V	5
VR	4
ENBKL	3
GND	2
+12V	1

Note:
For inverters with adjustable Backlight function, it is possible to control the LCD brightness through the VR signal controlled by **JVR**. Please see the **JVR** section for detailed circuitry information.

2.4.12.1 Signal Description – LCD Inverter Connector (JBKL)

Signal	Signal Description
VR	Vadj = 0.75V ~ 4.25V (Recommended: 4.7KΩ, >1/16W)
ENBKL	LCD backlight ON/OFF control signal

2.4.14 LCD backlight brightness adjustment connector (JVR)

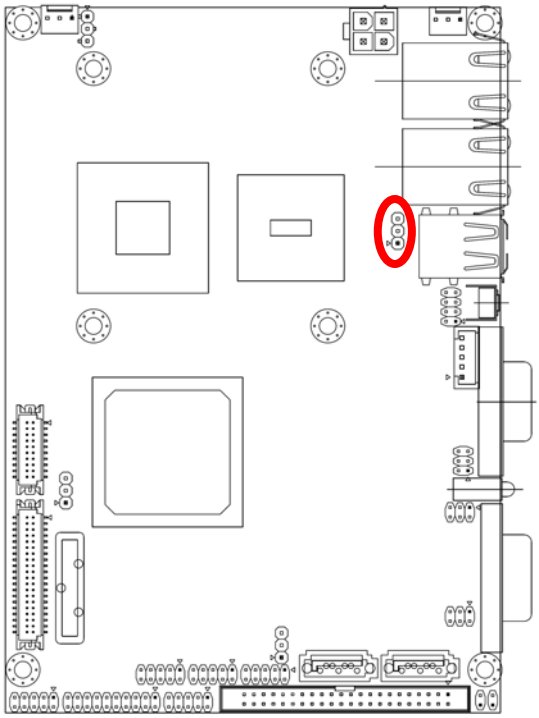

Signal	PIN
GND	3
VR	2
+5V	1

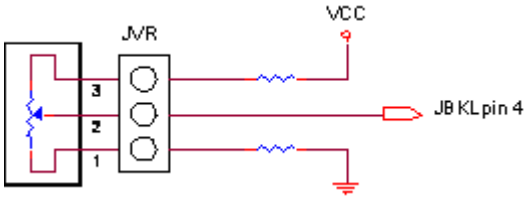

Variation Resistor

(Recommended: 4.7KΩ, >1/16W)

2.4.15 USB Connector 2, 3, 4 &5 (JUSB2, JUSB3)

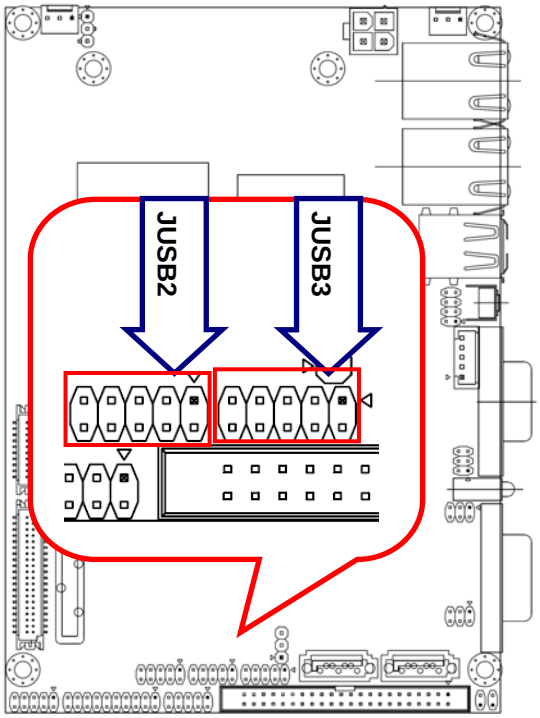

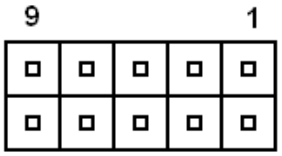

Signal	PIN	PIN	Signal
+5V	10	9	GND
D3-/D5-	8	7	GND
D3+/D5+	6	5	D2+/D4+
GND	4	3	D2-/D4-
GND	2	1	+5V

2.4.15.1 Signal Description – USB Connector

Signal	Signal Description
D2/D3/D4/D5 +/-	Differential bi-directional data signal for USB channel . Clock is transmitted along with the data using NRZI encoding. The signalling bit rate is up to 12 Mbs.

2.4.16 LVDS Connector (JLVDS)

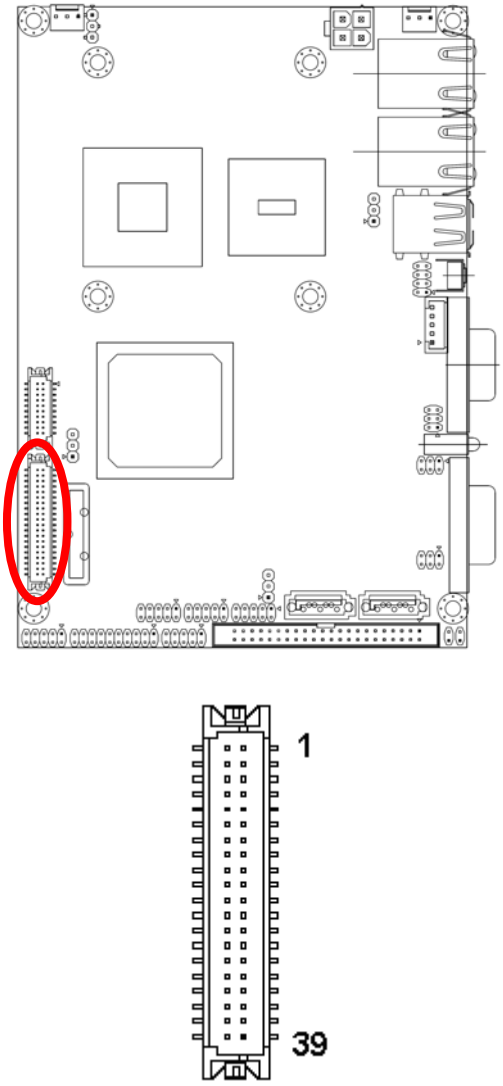

18-bit LVDS

Signal	PIN	PIN	Signal
+5V	2	1	+3.3V
+5V	4	3	+3.3V
I^2C_DAT1	6	5	I^2C_CLK1
GND	8	7	GND
Txout0	10	9	Txout1
Txout0#	12	11	Txout1#
GND	14	13	GND
Txout2	16	15	NC
Txout2#	18	17	NC
GND	20	19	GND
E_Txout0	22	21	E_Txout1
E_Txout0#	24	23	E_Txout1#
GND	26	25	GND
E_Txout2	28	27	NC
E_Txout2#	30	29	NC
GND	32	31	GND
Txclk	34	33	E_Txclk
Txclk#	36	35	E_Txclk#
GND	38	37	GND
+12V	40	39	+12V

24-bit LVDS

Signal	PIN	PIN	Signal
+5V	2	1	+3.3V
+5V	4	3	+3.3V
I^2C_DAT1	6	5	I^2C_CLK1
GND	8	7	GND
Txout0	10	9	Txout1
Txout0#	12	11	Txout1#
GND	14	13	GND
Txout2	16	15	Txout3
Txout2#	18	17	Txout3#
GND	20	19	GND
E_Txout0	22	21	E_Txout1
E_Txout0#	24	23	E_Txout1#
GND	26	25	GND
E_Txout2	28	27	E_Txout3
E_Txout2#	30	29	E_Txout3#
GND	32	31	GND
Txclk	34	33	E_Txclk
Txclk#	36	35	E_Txclk#
GND	38	37	GND
+12V	40	39	+12V

2.4.15.1 Signal Description – LVDS Connector (JLVDS)

Signal	Signal Description
I^2C_DAT, I^2C_CLK	I^2C interface for panel parameter EEPROM. This EERPOM is mounted on the LVDS receiver. The data in the EEPROM allows the EXT module to automatically set the proper timing parameters for a specific LCD panel. I^2C_DAT1, I^2C_CLK1=>DVI (BIOS setting also needs to be updated.) I^2C_DAT2, I^2C_CLK2=>LVDS

2.4.17 DVI Connector (JDVI)

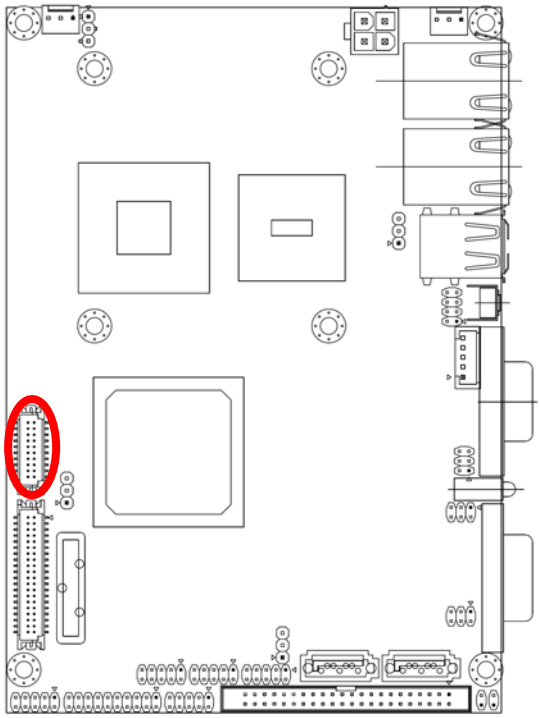

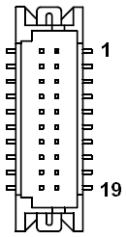

Signal	PIN	PIN	Signal
+5V	2	1	TDC0#
GND	4	3	TDC0
NC	6	5	NC
NC	8	7	NC
HPDET	10	9	TDC1#
DDC_DAT	12	11	TDC1
DDC_CLK	14	13	GND
GND	16	15	GND
TLC#	18	17	TDC2#
TLC	20	19	TDC2

Note:

DVI function is available in 18-bit LVDS version only.

2.4.18 Keyboard & mouse connector (JKB/MS)

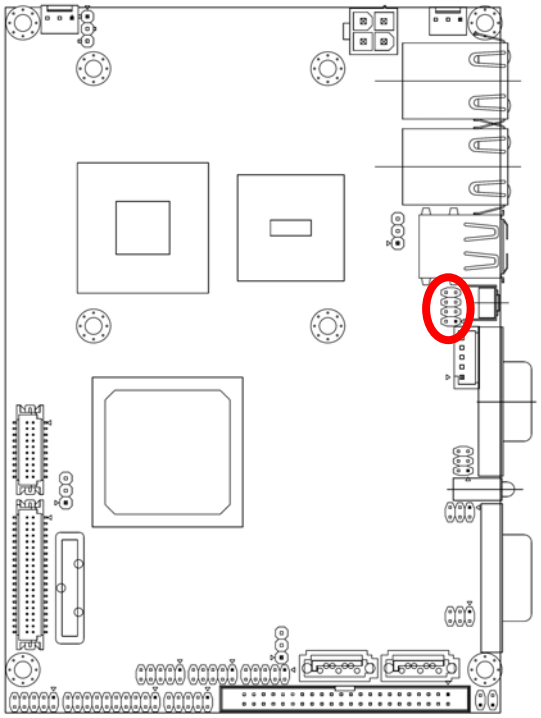

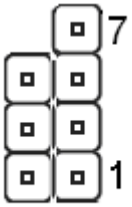

Signal	PIN	PIN	Signal
		7	NC
MCK	6	5	MDT
VDD	4	3	GND
KCK	2	1	KDT

2.4.18.1 Signal Description – PS/2 Keyboard & Mouse Connector (KB1)

Signal	Signal Description
KCLK	Bi-directional clock signal used to strobe data/commands from/to the PC-AT keyboard.
KDAT	Bi-directional serial data line used to transfer data from or commands to the PC-AT keyboard.
MCLK	Bi-directional clock signal used to strobe data/commands from/to the PS/2 mouse.
MDAT	Bi-directional serial data line used to transfer data from or commands to the PS/2 mouse.

2.4.19 IDE connector (IDE)

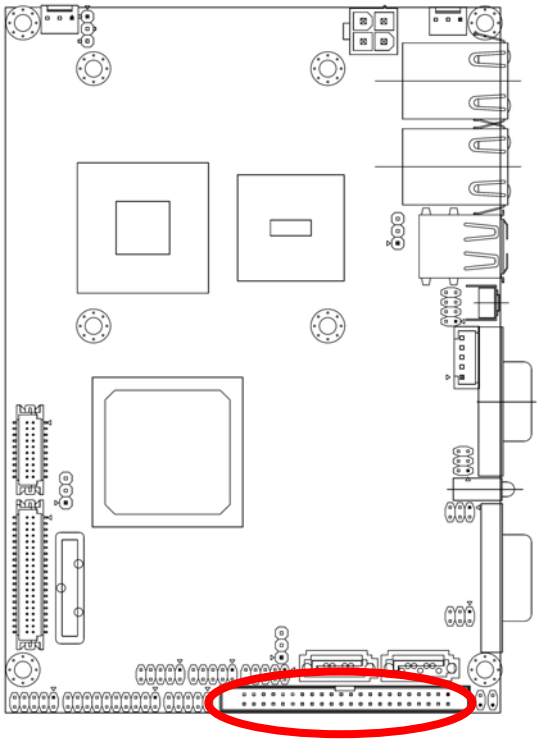

Signal	PIN	PIN	Signal
RESET#	1	2	GND
PDD7	3	4	PDD8
PDD6	5	6	PDD9
PDD5	7	8	PDD10
PDD4	9	10	PDD11
PDD3	11	12	PDD12
PDD2	13	14	PDD13
PDD1	15	16	PDD14
PDD0	17	18	PDD15
GND	19	20	NC
PDREQ	21	22	GND
PDIOW#	23	24	GND
PDIOR#	25	26	GND
PIORDY	27	28	R106
PDACK#	29	30	GND
IRQ15	31	32	NC
PDA1	33	34	LID
PDA0	35	36	PDA2
PDCS1#	37	38	PDCS3#
HD_LED1	39	40	GND
+5V	41	42	+5V
GND	43	44	NC

2.4.19.1 Signal Description – Primary IDE Connector (IDE)

Signal	Signal Description
PDA [2:0]	IDE Address Bits. These address bits are used to access a register or data port in a device on the IDE bus.
DCS1#, DCS3#	IDE Chip Selects. The chip select signals are used to select the command block registers in an IDE device. DCS1# selects the primary hard disk.
PDD [15:0]	IDE Data Lines. D [15:0] transfers data to/from the IDE devices.
PIOR#	IDE I/O Read. Signal is asserted on read accesses to the corresponding IDE port addresses.
PIOW#	IDE I/O Write. Each signal is asserted on write accesses to corresponding the IDE port addresses.
PIORDY	When deasserted, these signals extend the transfer cycle of any host register access when the device is not ready to respond to the data transfer request.
RESET#	IDE Reset. This signal resets all the devices that are attached to the IDE interface.
PIRQ15	Interrupt line from hard disk. Connected directly to PC-AT bus.
PDREQ	The DREQ is used to request a DMA transfer from the South Bridge. The direction of the transfers is determined by the IOR#/IOW# signals.
PDACK#	DMA Acknowledge. The DACK# acknowledges the DREQ request to initiate DMA transfers.
PDACT#	Signal from hard disk indicating hard disk activity. The signal level depends on the hard disk type, normally active low. The signal is routed directly to the LED1.

2.4.20 TV connector (JTV)

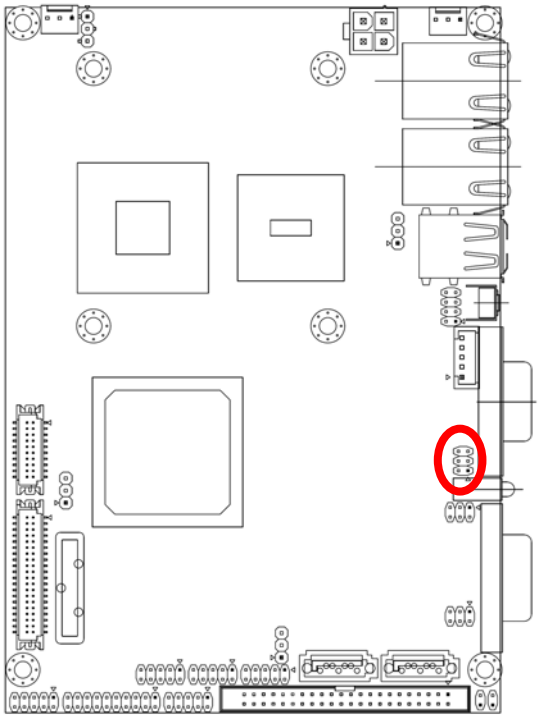

Signal	PIN	PIN	Signal
CVBS/ Pb	1	2	GND
Y	3	4	C/ Pr
GND	5	6	GND

DAC Output Mode			
AV-signal	CVBS		
S-Video	Y	C	
YPbPr	Y	Pb	Pr
YCbCr	Y	Pb	Pr

2.4.20.1 Signal Description – TV Out Connecter (JTV)

Signal	Description
Pb	TVDAC Channel A Output: supports CVBS signal of Composite; Chrominance (Pb) analog signal of Component.
Y	TVDAC Channel B Output: supports Luminance signal of S-Video; Luminance (Y) analog signal of Component.
Pr	TVDAC Channel C Output: supports Chrominance analog signal of S-Video; Chrominance (Pr) analog signal of Component.

2.4.21 VGA Connector (VGA)

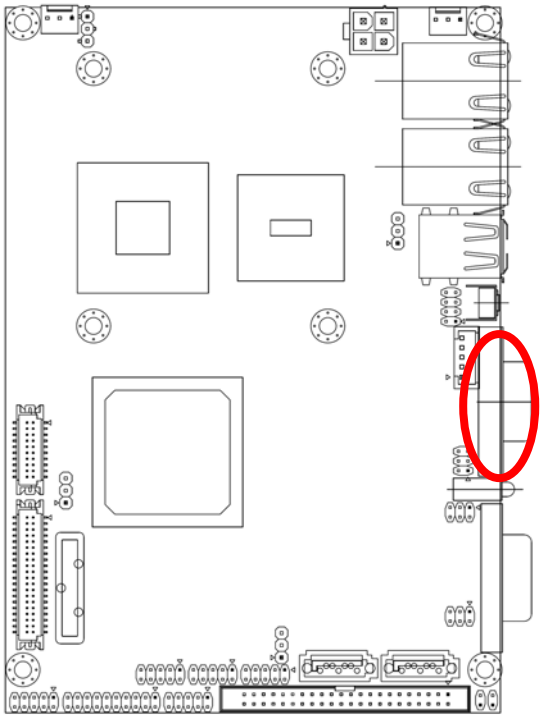



Signal	PIN			Signal
		6		GND
RED	1		11	NC
		7		GND
GREEN	2		12	DAT
		8		GND
BLUE	3		13	HSYNC
		9		VCC
NC	4		14	VSYNC
		10		GND
GND	5		15	DCK

2.4.20.1 Signal Description – VGA Connector (VGA)

Signal	Signal Description
HSYNC	CRT horizontal synchronisation output.
VSYNC	CRT vertical synchronisation output.
DCK	Display Data Channel Clock. Used as clock signal to/from monitors with DDC interface.
DAT	Display Data Channel Data. Used as data signal to/from monitors with DDC interface.
RED	Analog output carrying the red colour signal to the CRT. For 75 Ω cable impedance.
GREEN	Analog output carrying the green colour signal to the CRT. For 75 Ω cable impedance.
BLUE	Analog output carrying the blue colour signal to the CRT. For 75 Ω cable impedance.

2.5 Audio / USB Daughter Board User's Guide

2.5.1 Jumper and Connector Layout

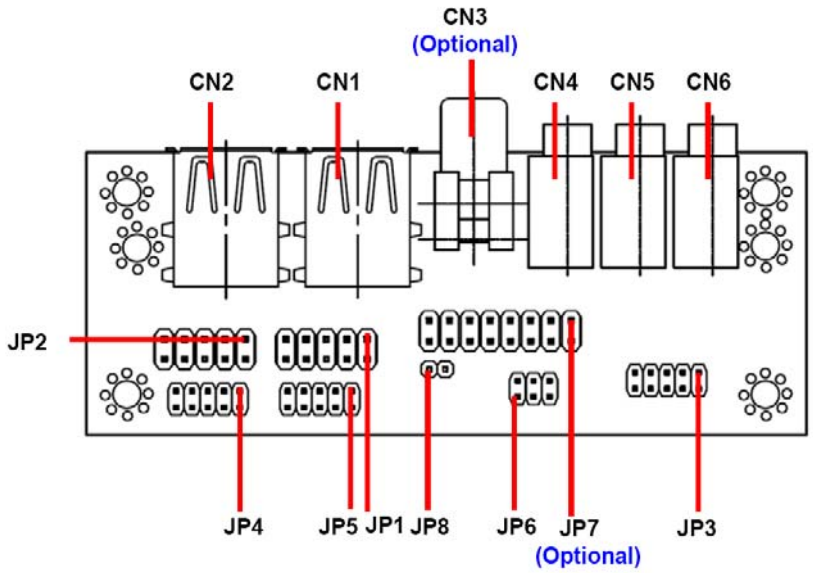

2.5.2 Jumper and Connector List

Jumpers

Label	Function	Note
JP6	Line out / Speaker out select (The speaker out function is only available in combine used of main board)	1-3, 2-4 Speaker out 3-5, 4-6 Line out (Default)

Connectors

Label	Function	Note
CN1, CN2	USB connector	
CN3	TV out connector (Optional)	RCA connector
CN4	Line out connector	Phone Jack
CN5	Line in connector	Phone Jack
CN6	Mic in connector	Phone Jack
JP1	2.54mm USB connector	5 x 2 header, pitch 2.54mm
JP2	2.54mm USB connector	5 x 2 header, pitch 2.54mm
JP3	Audio connector	5 x 2 header, pitch 2.0mm
JP4	2.0mm USB connector	5 x 2 header, pitch 2.0mm
JP5	2.0mm USB connector	5 x 2 header, pitch 2.0mm
JP7	TV / Audio connector (Optional)	8 x 2 header, pitch 2.54mm
JP8	TV out connector	1 x 2 header, pitch 2.0mm

2.5.3 Setting Jumper and Connector

Line out / Speaker out Select (JP6)

Line Out*

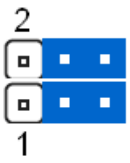

Speaker Out

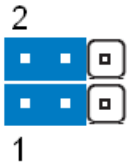

*Default

Signal	PIN	PIN	Signal
SPR1	1	2	SPL1
OUT_R	3	4	OUT_L
OUTR	5	6	OUTL

2.54mm USB Connector (JP1)

Signal	PIN	PIN	Signal
+5V	1	2	GND
D1-	3	4	GND
D1+	5	6	D2+
GND	7	8	D2-
GND	9	10	+5V

Note: Wrong USB cable configuration with your USB devices might cause your USB devices damaged.

2.54mm USB Connector (JP2)

Signal	PIN	PIN	Signal
+5V	1	2	GND
D3-	3	4	GND
D3+	5	6	D4+
GND	7	8	D4-
GND	9	10	+5V

Audio Connector (JP3)

Signal	PIN	PIN	Signal
Line out R	1	2	Line out L
GND	3	4	GND
Line in R	5	6	Line in L
Mic In	7	8	Mic Bais
SPK R	9	10	SPK L

2.0mm USB Connector (JP4)

Signal	PIN	PIN	Signal
+5V	1	2	GND
D3-	3	4	GND
D3+	5	6	D4+
GND	7	8	D4-
GND	9	10	+5V

2.0mm USB Connector (JP5)

Signal	PIN	PIN	Signal
+5V	1	2	GND
D1-	3	4	GND
D1+	5	6	D2+
GND	7	8	D2-
GND	9	10	+5V

TV / Audio Connector (JP7)

Signal	PIN	PIN	Signal
Mic In	1	2	Mic Bais
GND	3	4	GND
Line out L	5	6	Line out R
SPK L	7	8	SPK R
Line in L	9	10	Line in R
GND	11	12	NC
TVGND	13	14	NC
TVGND	15	16	COMP

TV-out Connector (JP8)

Signal	PIN	PIN	Signal
COMP	1	2	TVGND

3. BIOS Setup

3.1 Starting Setup

The AwardBIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the CMOS and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing <Del> immediately after switching the system on, or

By pressing the <Del> key when the following message appears briefly at the bottom of the screen during the POST (Power On Self Test).

Press DEL to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to.

Press F1 to Continue, DEL to enter SETUP

3.2 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
(Shift) F2 key	Change color from total 16 colors. F2 to select color forward, (Shift) F2 to select color backward
F3 key	Calendar, only for Status Page Setup Menu
F4 key	Reserved
F5 key	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
F6 key	Load the default CMOS value from BIOS default table, only for Option Page Setup Menu
F7 key	Load the default
F8 key	Reserved
F9 key	Reserved
F10 key	Save all the CMOS changes, only for Main Menu

- **Navigating Through The Menu Bar**

  Use the left and right arrow keys to choose the menu you want to be in.

Note: Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

  Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A "➢" pointer marks all sub menus.

3.3 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the F1 key again.

3.4 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AwardBIOS™ supports an override to the CMOS settings which resets your system to its defaults.

The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both Award and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

3.5 Main Menu

Once you enter the AwardBIOS™ CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and two exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

Note that a brief description of each highlighted selection appears at the bottom of the screen.

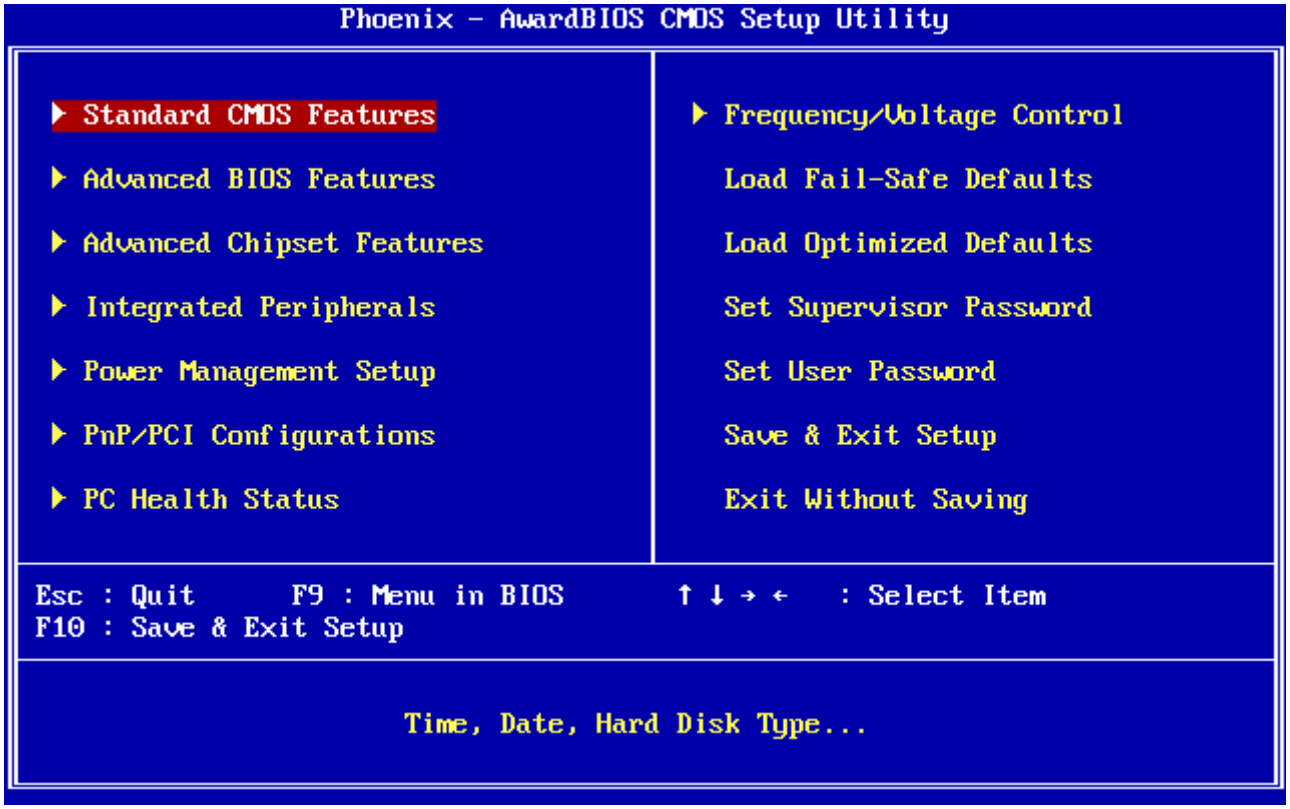
Phoenix - AwardBIOS CMOS Setup Utility
Standard CMOS Features
Advanced BIOS Features
Advanced Chipset Features
Integrated Peripherals
Power Management Setup
PnP/PCI Configurations
PC Health Status
Frequency/Voltage Control
Load Fail-Safe Defaults
Load Optimized Defaults
Set Supervisor Password
Set User Password
Save & Exit Setup
Exit Without Saving
Esc : Quit F9 : Menu in BIOS ↑ ↓ → ← : Select Item
F10 : Save & Exit Setup
Time, Date, Hard Disk Type...

Note: The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen.
Visit the Avalue website (www.avalue.com.tw) to download the latest product and BIOS information.

3.5.1 Standard CMOS Features

The items in Standard CMOS Setup Menu are divided into few categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

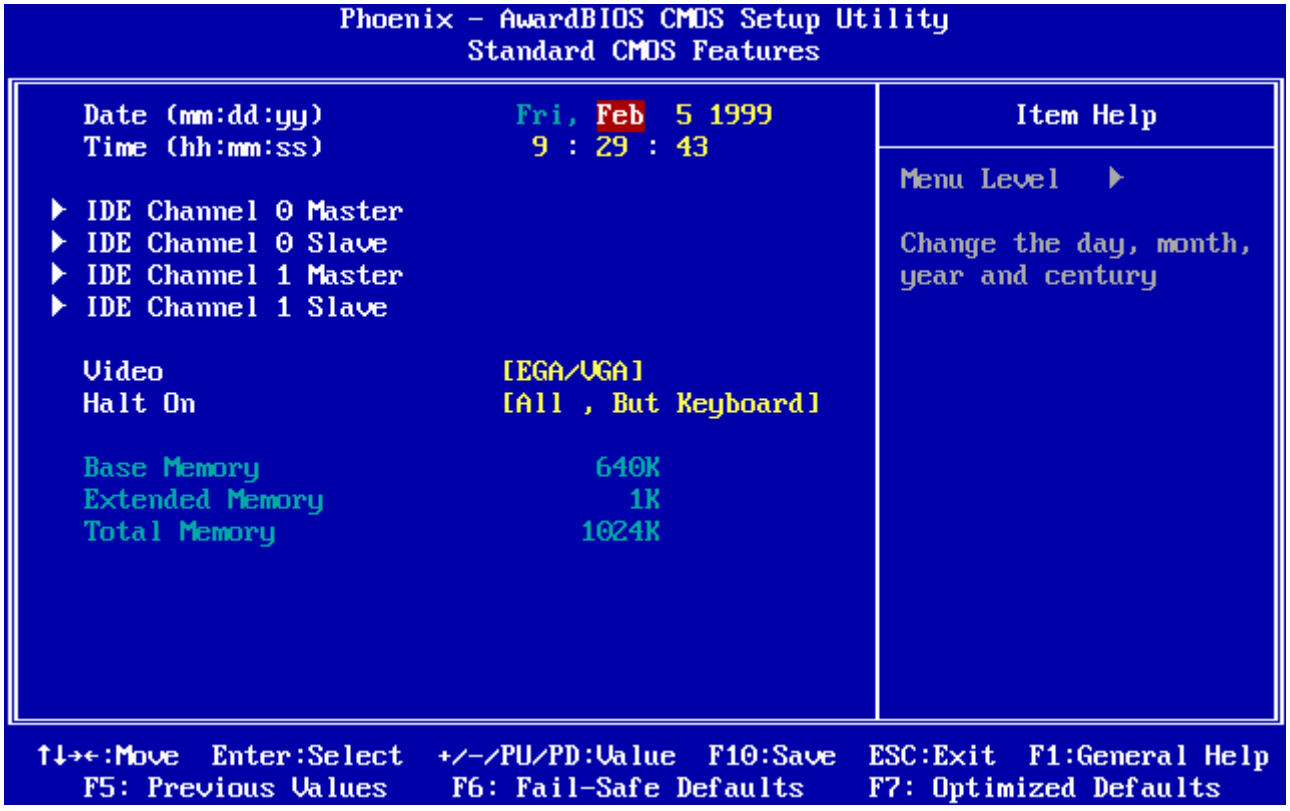
Phoenix - AwardBIOS CMOS Setup Utility
Standard CMOS Features
Date (mm:dd:yy) Fri, Feb 5 1999
Time (hh:mm:ss) 9 : 29 : 43
IDE Channel 0 Master
IDE Channel 0 Slave
IDE Channel 1 Master
IDE Channel 1 Slave
Video [EGA/VGA]
Halt On [All , But Keyboard]
Base Memory 640K
Extended Memory 1K
Total Memory 1024K
Item Help
Menu Level
Change the day, month, year and century
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

3.5.1.1 Main Menu Selection

This reference table shows the selections that you may make on the Main Menu.

Item	Options	Description
Time	HH : MM : SS	Set the system time
IDE Channel 0 Master IDE Channel 0 Slave IDE Channel 1 Master IDE Channel 1 Slave	Options are in 3.5.1.2	Press <Enter> to enter the sub menu of detailed options
Video	EGA/VGA CGA 40 CGA 80 MONO	Select the default video device
Halt On	All Errors No Errors All, but Keyboard	Select the situation in which you want the BIOS to stop the POST process and notify you

3.5.1.2 IDE Adapter Setup

The IDE adapters control the hard disk drive. Use a separate sub menu to configure each hard disk drive. The below table will shows the IDE primary master sub menu.

Item	Options	Description
IDE HDD Auto-detection	Press Enter	Press Enter to auto-detect the HDD on this channel. If detection is successful, it fills the remaining fields on this menu.
IDE Channel 0 Master IDE Channel 0 Slave IDE Channel 1 Master IDE Channel 1 Slave	None Auto Manual	Selecting 'manual' lets you set the remaining fields on this screen. Selects the type of fixed disk. "User Type" will let you select the number of cylinders, heads, etc. Note: PRECOMP=65535 means NONE !
Access Mode	CHS, LBA Large, Auto	Choose the access mode for this hard disk
The following options are selectable only if the 'IDE Channel …' item is set to 'Manual'		
Cylinder	Min = 0 Max = 65535	Set the number of cylinders for this hard disk.
Head	Min = 0 Max = 255	Set the number of read/write heads
Precomp	Min = 0 Max = 65535	**** **Warning**: Setting a value of 65535 means no hard disk
Landing zone	Min = 0 Max = 65535	****
Sector	Min = 0 Max = 255	Number of sectors per track

3.5.2 Advanced BIOS Features

This section allows you to configure your system for basic operation. You have the opportunity to select the system's default speed, boot-up sequence, keyboard operation, shadowing and security.

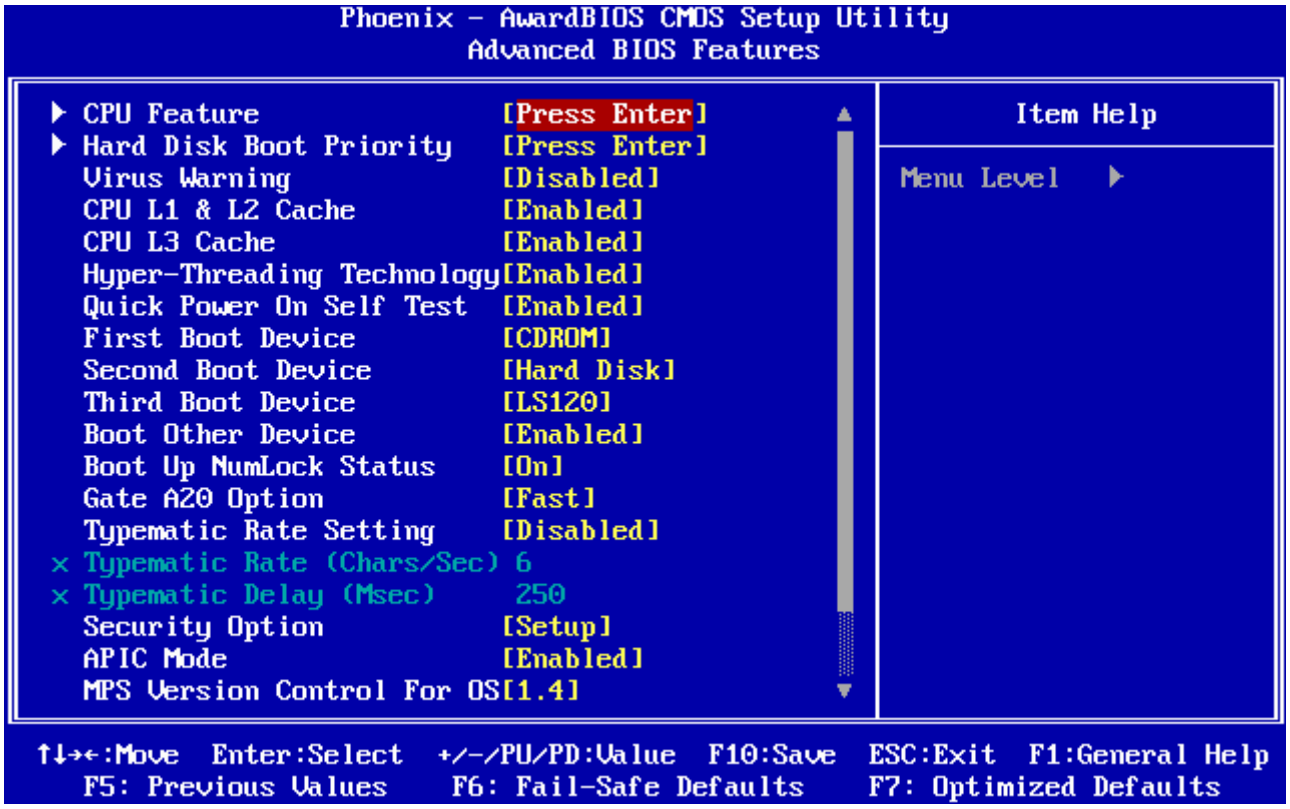
Phoenix - AwardBIOS CMOS Setup Utility
Advanced BIOS Features
CPU Feature [Press Enter]
Hard Disk Boot Priority [Press Enter]
Virus Warning [Disabled]
CPU L1 & L2 Cache [Enabled]
CPU L3 Cache [Enabled]
Hyper-Threading Technology [Enabled]
Quick Power On Self Test [Enabled]
First Boot Device [CDROM]
Second Boot Device [Hard Disk]
Third Boot Device [LS120]
Boot Other Device [Enabled]
Boot Up NumLock Status [On]
Gate A20 Option [Fast]
Typematic Rate Setting [Disabled]
x Typematic Rate (Chars/Sec) 6
x Typematic Delay (Msec) 250
Security Option [Setup]
APIC Mode [Enabled]
MPS Version Control For OS [1.4]
Item Help
Menu Level
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

3.5.2.1 CPU Feature

This item allows you to setup the CPU thermal management function.

Item	Options	Description
Delay Prior to Thermal	4, 8, 16, 32 Min	Allow the Thermal Monitor to be activated of certain minutes in automatic mode after the system boots.
Thermal Management	Thermal Monitor 1 Thermal Monitor 2	Allow to choose the thermal management method of the monitor.
TM2 Bus Ratio	0~255	Represents the frequency. Bus ratio of the throttled performance state that will be initiated when the on-die sensor goes from not hot to hot.
TM2 Bus VID	0.700 ~ 1.708	Represents the voltage of the throttled performance state that will be initiated when the on-die sensor goes from not hot to hot.
Limit CPUID MaxVal	Disable Enable	In order to mask the physical CPUID for Proscott core when running WinNT, Award BIOS provides "Limit CPUID MaxVal" feature. Enabling this feature will make the main board BIOS respond "suitable", "virtual" CPUID to OS kernel. So WinNT or the legacy OS can use the masked CPUID to work

		well with the new CPU design.
C1E Function	Auto, Disabled	The C1E function enables the Core 2 Extreme to throttle back to its standard clock rate under light load
Execute Disable Bit	Enabled, Disabled	It can help prevent certain classes of malicious buffer overflow attacks when combined with a supporting operating system.
Virtualization Technology	Enabled, Disabled	This BIOS feature is used to enable or disable the Intel Virtualization Technology (IVT) extensions that allow multiple operating systems to run simultaneously on the same system.

3.5.2.2 Hard Disk Boot Priority

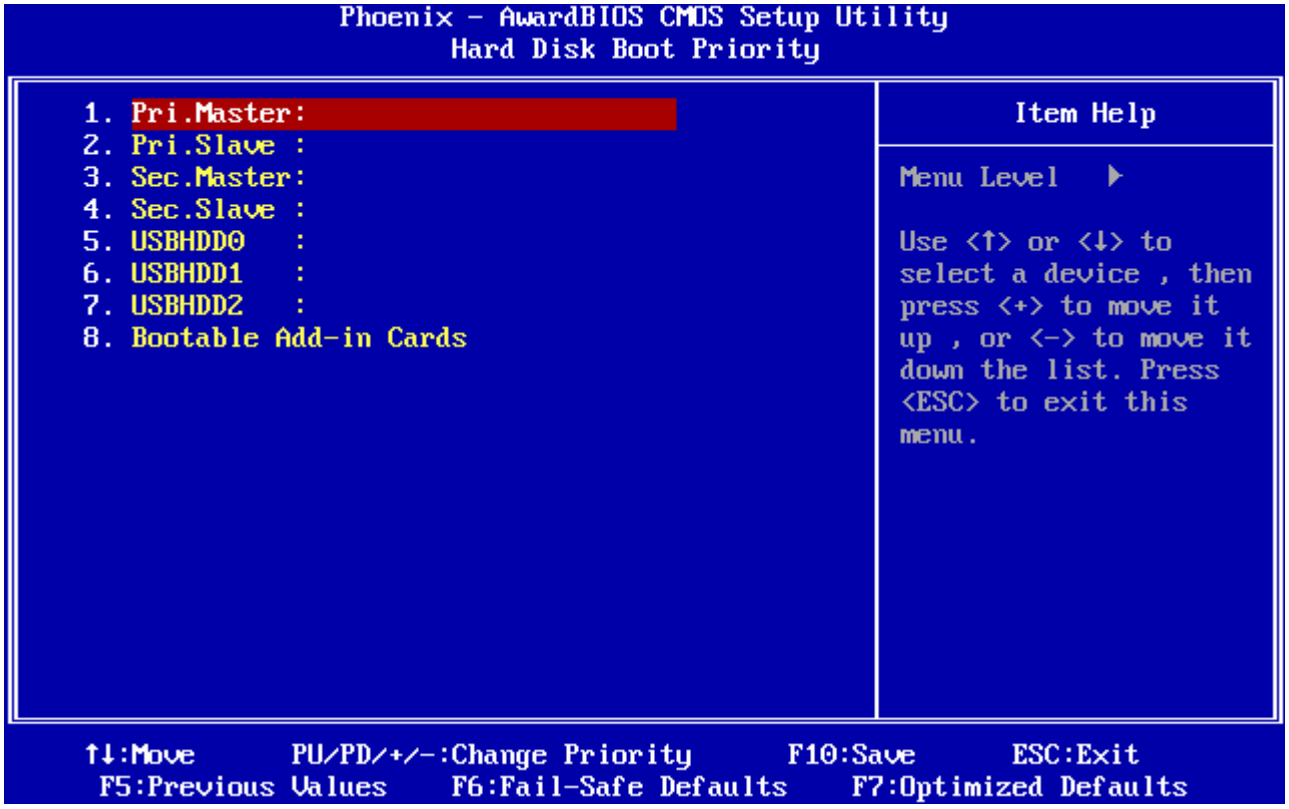
Phoenix - AwardBIOS CMOS Setup Utility
Hard Disk Boot Priority
1. Pri.Master:
2. Pri.Slave :
3. Sec.Master:
4. Sec.Slave :
5. USBHDD0 :
6. USBHDD1 :
7. USBHDD2 :
8. Bootable Add-in Cards
Item Help
Menu Level ▶
Use <↑> or <↓> to select a device , then press <+> to move it up , or <-> to move it down the list. Press <ESC> to exit this menu.
↑↓:Move PU/PD/+/-:Change Priority F10:Save ESC:Exit
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

This item allows you to set the boot priority of the hard drives installed in the system.

Item	Description
Pri./Sec. Master/Slave	Boot up from IDE Primary/Secondary Master/Slave Hard Disk
USBHDD 0/1/2	Boot up from 1st/2nd/3rd USB Hard Disk
Bootable Add-in Cards	Boot up from other Add-In Card Hard Disk Device.

3.5.2.3 Virus Warning

Allows you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

Item	Description

Enabled	Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector or hard disk partition table.
Disabled	No warning message will appear when anything attempts to access the boot sector or hard disk partition table.

3.5.2.4 CPU L1 & L2 & L3 Cache

The item allows you to speed up memory access. However, it depends on CPU design.

Item	Description
Enabled	Enable cache
Disabled	Disable cache

3.5.2.5 Hyper-Threading Technology

The item allows you to enable HT Technology. However, it depends on CPU design.

Item	Description
Enabled	Enable cache
Disabled	Disable cache

3.5.2.6 Quick Power On Self Test

This category speeds up Power On Self Test (POST) after you power up the computer. If it is set to Enable, BIOS will shorten or skip some check items during POST.

Item	Description
Enabled	Enable quick POST
Disabled	Normal POST

3.5.2.7 First/Second/Third/Other Boot Device

The BIOS attempts to load the operating system from the devices in the sequence selected in these items.

Item	Description
LS120	LS120 Device
Hard Disk	Hard Disk Device
CDROM	CDROM Device
ZIP100	ZIP-100 Device
USB-FDD	USB Floppy Device
USB-ZIP	USB ZIP Device
USB-CDROM	USB CDROM Device
LAN	Network Device
Disabled	Disabled any boot device

3.5.2.8 Boot Up NumLock Status

Select power on state for NumLock.

Item	Description
On	Enable NumLock
Off	Disable NumLock

3.5.2.9 Gate A20 Option

Select if chipset or keyboard controller should control Gate A20.

Item	Description
Normal	A pin in the keyboard controller controls Gate A20

Fast	Lets chipset control Gate A20

3.5.2.10 Typematic Rate Setting

This feature enables you to control the keystroke repeat rate when you depress a key continuously. When enabled, you can manually adjust the settings using the two typematic controls (Typematic Rate and Typematic Delay). If disabled, the BIOS will use the default setting.

Item	Description
Enabled	Enable typematic rate/delay setting
Disabled	Disable typematic rate/delay setting

3.5.2.11 Typematic Rate (Chars/Sec)

This is the rate at which the keyboard will repeat the keystroke if you press it continuously. This setting will only work if Typematic Rate Setting is enabled..

Options: 6, 8, 10, 12, 15, 20, 24, 30

3.5.2.12 Typematic Delay (Msec)

This is the delay, in milliseconds, before the keyboard automatically repeats the keystroke that you have pressed continuously. This setting will only work if Typematic Rate Setting is enabled.

Options: 250, 500, 750, 1000

3.5.2.13 Security Option

Select whether the password is required every time the system boots or only when you enter setup.

Item	Description
System	The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
Setup	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt.

Note: To disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything and just press <Enter>, it will disable security. Once the security is disabled, the system will boot and you can enter Setup freely.

3.5.2.14 APIC Mode

The BIOS supports versions 1.4 of the Intel multiprocessor specification. When enabled, The MPS Version 1.4 Control for OS can be activated.

The choice: Enabled/Disabled.

3.5.2.15 MPS Version Control For OS

This feature is only applicable to multiprocessor board as it specifies the version of the Multi-Processor Specification (MPS) that the board will use.
The choice: 1.4, 1.1.

3.5.2.16 OS Select for DRAM > 64MB

Select the operating system that is running with greater than 64MB of RAM on the system.

Item	Description
Non-OS2	Disable OS for over 64 MB DRAM
OS2	Enable OS for over 64 MB DRAM

3.5.2.17 Report No FDD For WIN95

The original Windows95 requires the presence of a floppy. Unless the BIOS tells it to disregard the absence of the drive, it will generate an error message. For other operating systems as Win98 etc this field is without relevance.

Item	Description
No	Don't generate error message
Yes	Generate error message

3.5.2.18 Small Logo (EPA) Show

This item allows you enabled/disabled the small EPA logo show on screen at the POST step.

Item	Description
Enabled	EPA Logo show is enabled
Disabled	EPA Logo show is disabled

3.5.3 Advanced Chipset Features

This section allows you to configure the system based on the specific features of the installed chipset. This chipset manages bus speeds and access to system memory resources, such as DRAM and the external cache. It also coordinates communications between the conventional ISA bus and the PCI bus. It must be stated that these items should never need to be altered. The default settings have been chosen because they provide the best operating conditions for your system. The only time you might consider making any changes would be if you discovered that data was being lost while using your system.

The first chipset settings deal with CPU access to dynamic random access memory (DRAM). The default timings have been carefully chosen and should only be altered if data is being lost. Such a scenario might well occur if your system had mixed speed DRAM chips installed so that greater delays may be required to preserve the integrity of the data held in the slower memory chips.

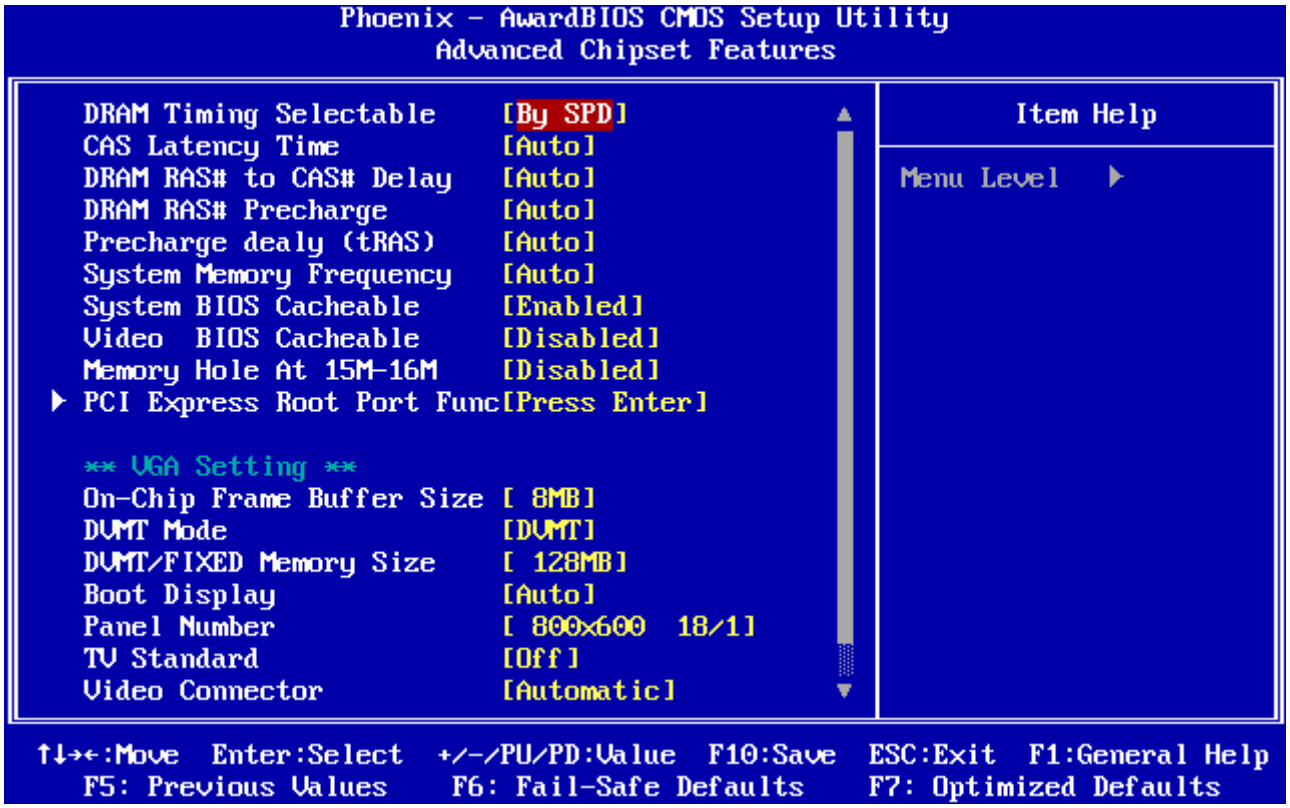
Phoenix - AwardBIOS CMOS Setup Utility
Advanced Chipset Features
DRAM Timing Selectable [By SPD]
CAS Latency Time [Auto]
DRAM RAS# to CAS# Delay [Auto]
DRAM RAS# Precharge [Auto]
Precharge dealy (tRAS) [Auto]
System Memory Frequency [Auto]
System BIOS Cacheable [Enabled]
Video BIOS Cacheable [Disabled]
Memory Hole At 15M-16M [Disabled]
PCI Express Root Port Func [Press Enter]
** VGA Setting **
On-Chip Frame Buffer Size [8MB]
DVMT Mode [DVMT]
DVMT/FIXED Memory Size [128MB]
Boot Display [Auto]
Panel Number [800x600 18/1]
TV Standard [Off]
Video Connector [Automatic]
Item Help
Menu Level
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

3.5.3.1 DRAM Timing Selectable

This item allows you to select the DRAM timing value by SPD data or Manual by yourself. The choices: Manual, By SPD.

3.5.3.2 CAS Latency Time

This item controls the time delay (in clock cycles - CLKs) that passes before the SDRAM starts to carry out a read command after receiving it. This also determines the number of

CLKs for the completion of the first part of a burst transfer. In other words, the lower the latency, the faster the transaction.
The choices: 5, 4, 3, 6, Auto.

3.5.3.3 DRAM RAS# to CAS# Delay

This option allows you to insert a delay between the RAS (**Row Address Strobe**) and CAS (**Column Address Strobe**) signals. This delay occurs when the SDRAM is written to, read from or refreshed. Naturally, reducing the delay improves the performance of the SDRAM while increasing it reduces performance.
The choices: 2, 3, 4, 5, 6, Auto.

3.5.3.4 DRAM RAS# Precharge

This option sets the number of cycles required for the RAS to accumulate its charge before the SDRAM refreshes. Reducing the precharge time to **2** improves SDRAM performance but if the precharge time of **2** is insufficient for the installed SDRAM, the SDRAM may not be refreshed properly and it may fail to retain data
So, for better SDRAM performance, set the **SDRAM RAS Precharge Time** to **2** but increase it to **3** if you face system stability issues after reducing the precharge time.
The choices: 2, 3, 4, 5, 6, Auto.

3.5.3.5 Precharge Delay (tRAS)

It allows controlling the memory bank's minimum row active time (tRAS). This constitutes the time when a row is activated until the time the same row can be deactivated. If the tRAS period is too long, it can reduce performance by unnecessarily delaying the deactivation of active rows. Reducing the tRAS period allows the active row to be deactivated earlier.
If the tRAS period is too short, there may not be enough time to complete a burst transfer. This reduces performance and data may be lost or corrupted.
The choices: Auto, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15.

3.5.3.6 System Memory Frequency

It allows controlling the system memory frequency. The memory frequency will either be equal to or less than the processor system bus frequency.
The choices: Auto, 400MHz, 533MHz.

3.5.3.7 System BIOS Cacheable

This feature is only valid when the system BIOS is shadowed. It enables or disables the caching of the system BIOS ROM at **F0000h-FFFFFh** via the L2 cache. This greatly speeds up accesses to the system BIOS. However, this does **not** translate into better system performance because the OS does not need to access the system BIOS much.
The choices: Disabled, Enabled.

3.5.3.8 Video BIOS Cacheable

This feature is only valid when the video BIOS is shadowed. It enables or disables the caching of the video BIOS ROM at **C0000h-C7FFFh** via the L2 cache. This greatly speeds up accesses to the video BIOS. However, this does **not** translate into better system performance because the OS bypasses the BIOS using the graphics driver to access the video card's hardware directly.
The Choice: Enabled, Disabled.

3.5.3.9 Memory Hole At 15M-16M

Enabling this feature reserves 15MB to 16MB memory address space to ISA expansion cards that specifically require this setting. This makes the memory from 15MB and up unavailable to the system. Expansion cards can only access memory up to 16MB.
The choice: Enable, Disable.

3.5.3.10 PCI Express Root

For the PCI Express root ports, the assignment of a function number to a root port is not fixed. This item allows you to re-assign the function numbers on a port by port basis. You can disable/hide any root port and have still have functions 0 thru N-1 where N is the total number of enabled root ports.

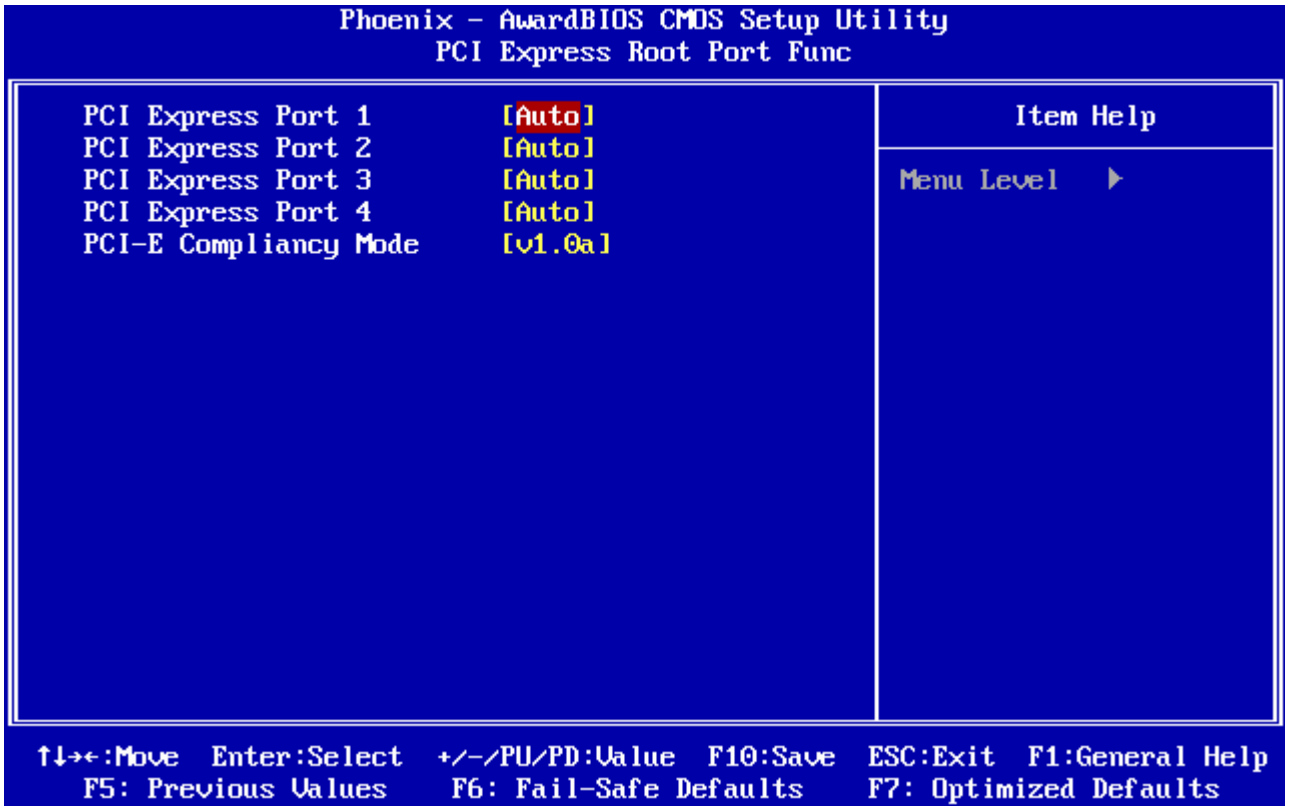
Phoenix - AwardBIOS CMOS Setup Utility
PCI Express Root Port Func
PCI Express Port 1 [Auto]
PCI Express Port 2 [Auto]
PCI Express Port 3 [Auto]
PCI Express Port 4 [Auto]
PCI-E Compliancy Mode [v1.0a]
Item Help
Menu Level
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

The choices: Auto, Enabled, Disabled.

3.5.3.11 PCI-E Compliancy Mode

This feature is used to select the compliancy mode for PCI-E.

The choices: v.1.0a, v1.0

3.5.3.12 VGA Setting

Item	Options	Description
On-Chip Frame Buffer Size	1MB 8MB	This item is to select the amount of system memory that will be utilized as internal graphics device memory.
DVMT Mode	FIXED DVMT BOTH	This feature allows you to select the Dynamic Video Memory Technology (DVMT) operating mode.
DVMT/FIXED Memory Size	64MB 128MB 224MB	This feature allows you to select the memory size of DVMT/BOTH operating mode.
Boot Display	Auto CRT, LCD, CRT+LCD, EFP, TV CRT+EFP,	This feature allows you to select the display device when you boot up the system.
Panel Number	640x480 1x18B, 800x600 1x18B, 1024x768 1x18B, 1280x1024 2x18B, 1400x1050 2x18B, 1440x900 2x18B, 1600x1200 2x18B, 1280x768 1x18B, 1680x1050 2x18B, 1920x1080 2x18B, 1024x768 1x18B, 1366x768 1x18B, 800x480 1x18B, 1280x800 1x18B, 1280x600 1x18B, 2048x1536 2x18B.	This feature allows you to select Panel Resolution that will be displayed depending on the LCD Panel.
TV Standard	Off, NTSC, PAL, SECAM	This feature allows you to select an analog TV standard system.
Video Connector	Automatic, Composite, Component, Both.	This feature allows you to select the output video connector style.
TV Format	Auto, NTSC_M, NTSC_M_J, NTSC_433, NTSC_N, PAL_B, PAL_G, PAL_D, PAL_H, PAL_I, PAL_M, PAL_N, PAL_60, SECAM_L, SECAM_L1, SECAM_B, SECAM_D, SECAM_G, SECAM_H	This feature allows you to select the TV format.

3.5.4 Integrated Peripherals

Use this menu to specify your settings for integrated peripherals.

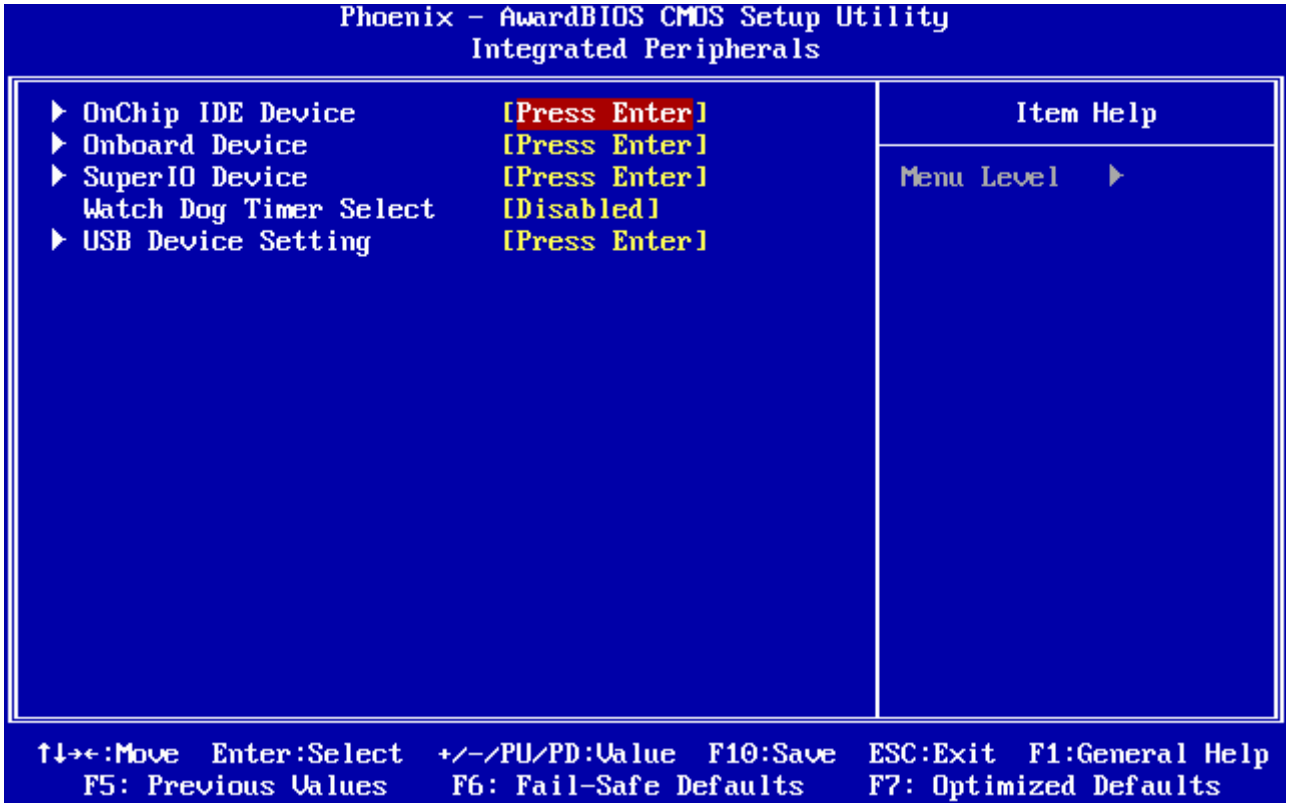
Phoenix - AwardBIOS CMOS Setup Utility
Integrated Peripherals
OnChip IDE Device [Press Enter]
Onboard Device [Press Enter]
SuperIO Device [Press Enter]
Watch Dog Timer Select [Disabled]
USB Device Setting [Press Enter]
Item Help
Menu Level
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

3.5.4.1 OnChip IDE Device

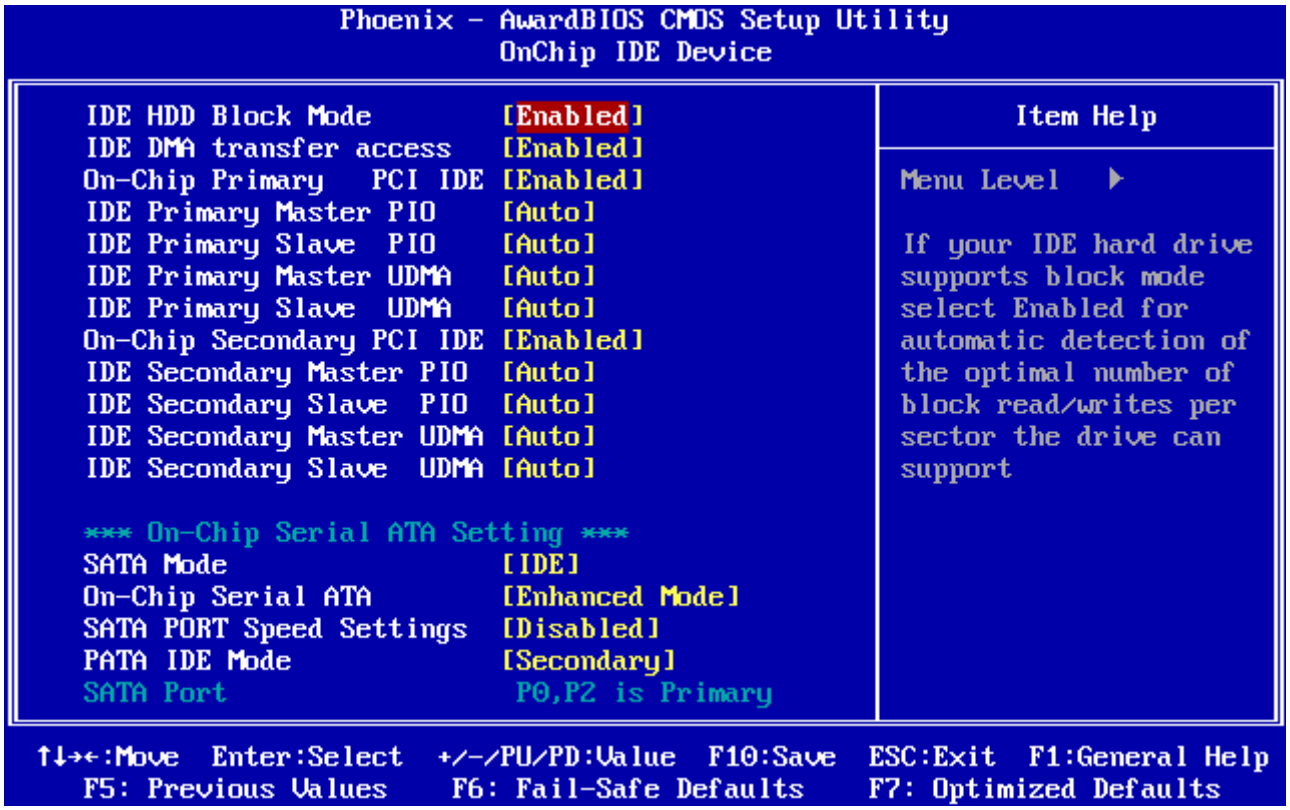
Phoenix - AwardBIOS CMOS Setup Utility
OnChip IDE Device
IDE HDD Block Mode [Enabled]
IDE DMA transfer access [Enabled]
On-Chip Primary PCI IDE [Enabled]
IDE Primary Master PIO [Auto]
IDE Primary Slave PIO [Auto]
IDE Primary Master UDMA [Auto]
IDE Primary Slave UDMA [Auto]
On-Chip Secondary PCI IDE [Enabled]
IDE Secondary Master PIO [Auto]
IDE Secondary Slave PIO [Auto]
IDE Secondary Master UDMA [Auto]
IDE Secondary Slave UDMA [Auto]
*** On-Chip Serial ATA Setting ***
SATA Mode [IDE]
On-Chip Serial ATA [Enhanced Mode]
SATA PORT Speed Settings [Disabled]
PATA IDE Mode [Secondary]
SATA Port P0,P2 is Primary
Item Help
Menu Level
If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

The chipset contains a PCI IDE interface with support for one IDE channel and two SATA

channels. Select Enabled to activate the primary IDE interface. Select Disabled to deactivate this interface.

Item	Options	Description
IDE HDD Block Mode	Enabled Disabled	Speeds up HDD access by transferring data from multiple sectors at once instead of using the old single sector transfer mode if the HDD supports block transfers and configure the proper block transfer settings for it. Up to 64KB of data can be transferred per interrupt with IDE HDD Block Mode enabled. (Virtually all HDDs now support block transfers.)
IDE DMA transfer access	Enabled Disabled	It allows you to enable or disable DMA (Direct Memory Access) support for all IDE devices. If you disable this BIOS feature, the BIOS will disable DMA transfers for all IDE drives. They will revert to PIO mode transfers. If you enable this BIOS feature, the BIOS will enable DMA transfers for all IDE drives. The proper DMA mode will be detected at boot-up. If the drive does not support DMA transfers, then it will use PIO mode instead.
On-Chip Primary/Secondary PCI IDE	Enabled Disabled	The integrated peripheral controller contains an IDE interface with support for two IDE channels. It allows you to activate each channel separately.
IDE Primary Master PIO **IDE Primary Slave PIO** **IDE Secondary Master PIO** **IDE Secondary Slave PIO**	Auto Mode 0 Mode 1 Mode 2 Mode 3 Mode 4	The IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.
IDE Primary Master UDMA **IDE Primary Slave UDMA** **IDE Secondary Master UDMA** **IDE Secondary Slave UDMA**	Auto Disabled	Ultra DMA implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus master driver). If the hard drive and the system software both support Ultra DMA, select Auto to enable BIOS support.

3.5.4.1.1 On-Chip Serial ATA Setting

The field under the SATA setting includes SATA Mode (IDE), On-Chip Serial ATA (Auto), PATA IDE Mode (Secondary) and SATA Port (P0, P2 is Primary).

Item	Options	Description
SATA Mode	IDE AHCI	It allows you to select the operation mode for SATA controller.
On-Chip Serial ATA	Disabled, Auto, Combined Mode, Enhanced Mode, SATA Only	It provides access to set the mode of the On-Chip SATA devices.
SATA PORT Speed Settings	Disabled Force GEN I Force GEN II	This item allows you to select the speed of SATA ports.
PATA IDE Mode	Secondary	This item shows the PATA IDE mode.

3.5.4.2 Onboard Device

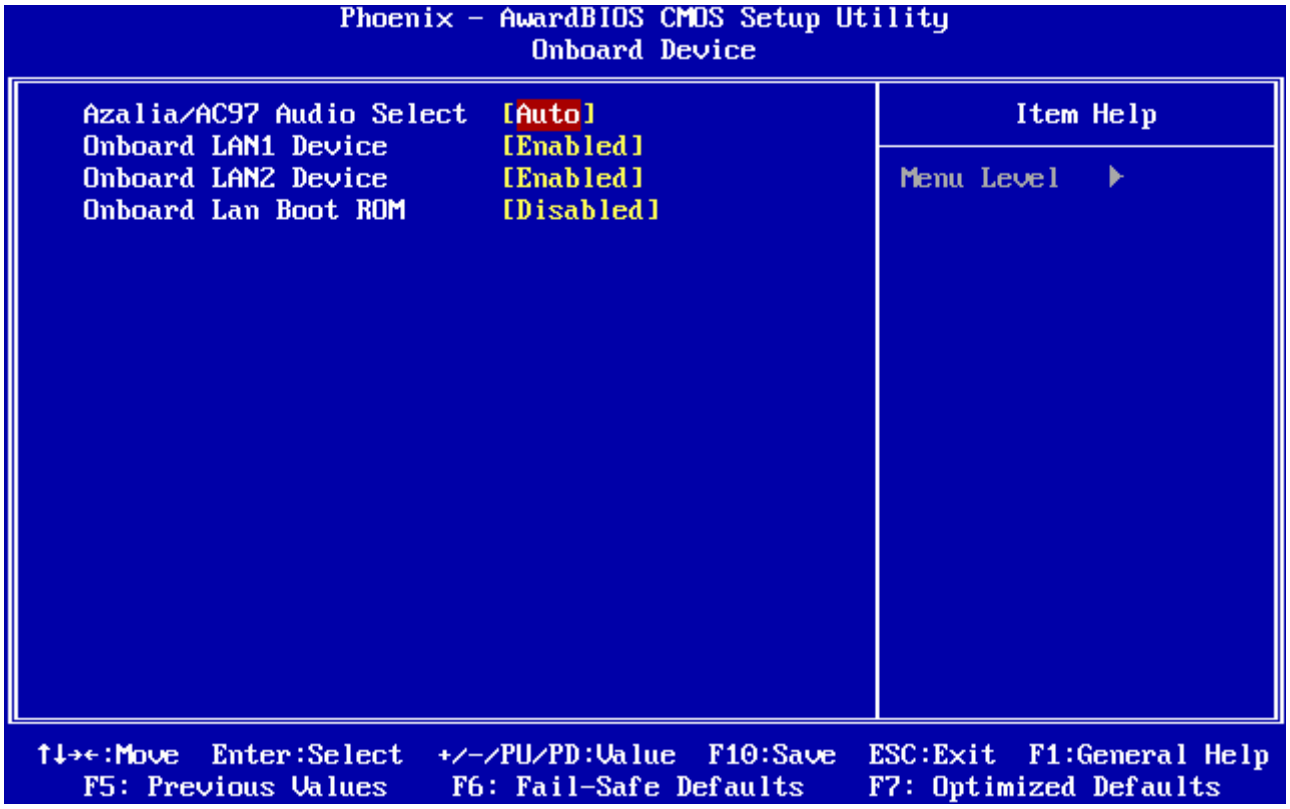
Phoenix - AwardBIOS CMOS Setup Utility
Onboard Device
Azalia/AC97 Audio Select [Auto]
Onboard LAN1 Device [Enabled]
Onboard LAN2 Device [Enabled]
Onboard Lan Boot ROM [Disabled]
Item Help
Menu Level ▶
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

Item	Options	Description
Azalia/AC97 Audio Select	Auto Azalia AC97 Audio All Disabled	This item allows you to select the Audio codec.
Onboard LAN1 Device	Enabled Disabled	This item allows you to enabled the PCIe Lan1 Device.
Onboard LAN2 Device	Enabled Disabled	This item allows you to enabled the PCIe Lan2 Device
Onboard Lan Boot ROM	Enabled Disabled T	This item allows you to enabled the LAN Boot ROM.

3.5.4.3 Super IO Device

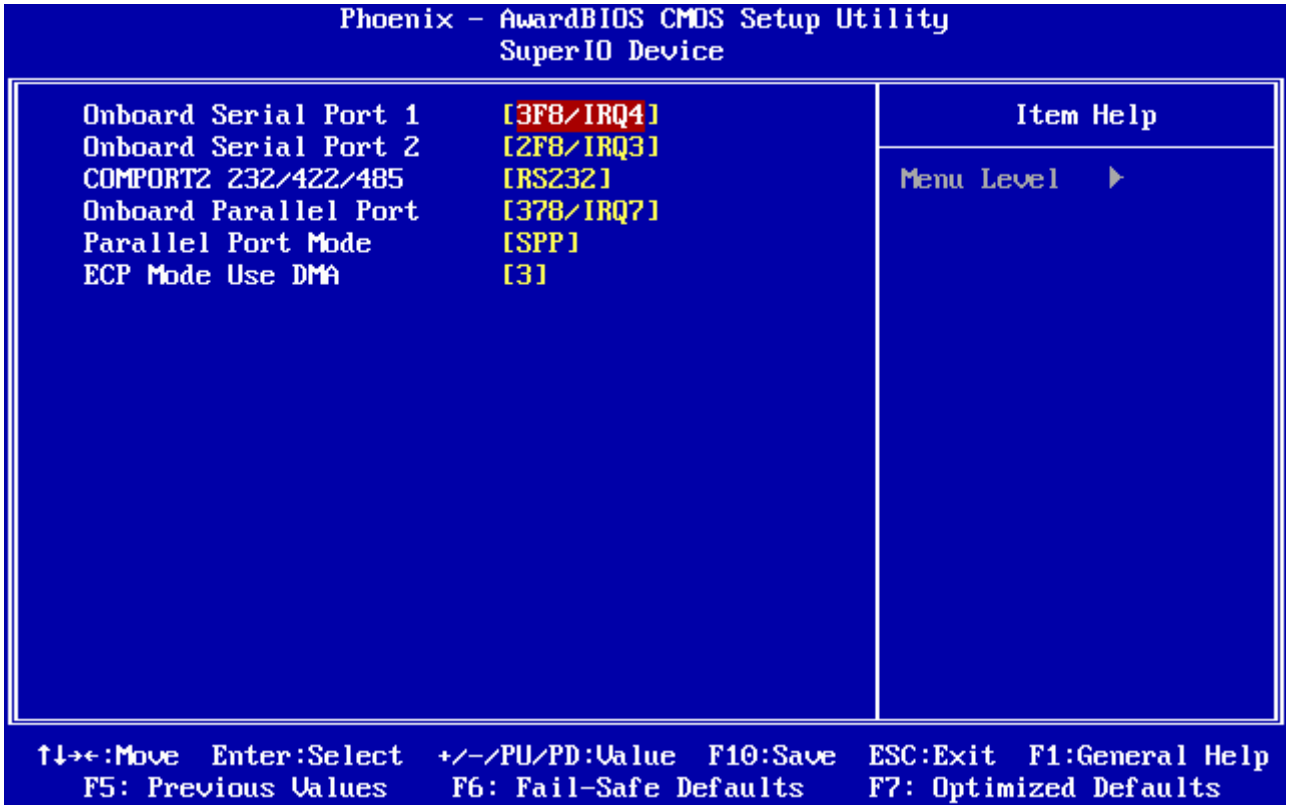
Phoenix - AwardBIOS CMOS Setup Utility
SuperIO Device
Onboard Serial Port 1 [3F8/IRQ4]
Onboard Serial Port 2 [2F8/IRQ3]
COMPORT2 232/422/485 [RS232]
Onboard Parallel Port [378/IRQ7]
Parallel Port Mode [SPP]
ECP Mode Use DMA [3]
Item Help
Menu Level
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

Item	Options	Description
Onboard Serial Port 1 Onboard Serial Port 2	Disabled, 3F8/IRQ4 2F8/IRQ3, 3E8/IRQ4 2E8/IRQ3, Auto	Select an address and corresponding interrupt for the first and second serial ports.
COM PORT 232/422/485	RS232 RS422 RS485	It allows you to select the COM Port mode
Onboard Parallel Port	Disabled, 378/IRQ7 278/IRQ5, 3BC/IRQ7	Select a matching address and interrupt for the physical parallel (printer) port.
Parallel Port Mode	SPP, EPP ECP, ECP+EPP	Select an operating mode for the onboard parallel port. Select Compatible or Extended unless you are certain both your hardware and software support EPP or ECP mode.
ECP Mode Use DMA	1, 3	Select a DMA channel for the port.

3.5.4.4 Watch Dog Timer

This option will determine watch dog timer.

The choices: Disabled, 30,40,50,60 Sec, 1, 2, 4 Min.

3.5.4.5 USB Device Setting

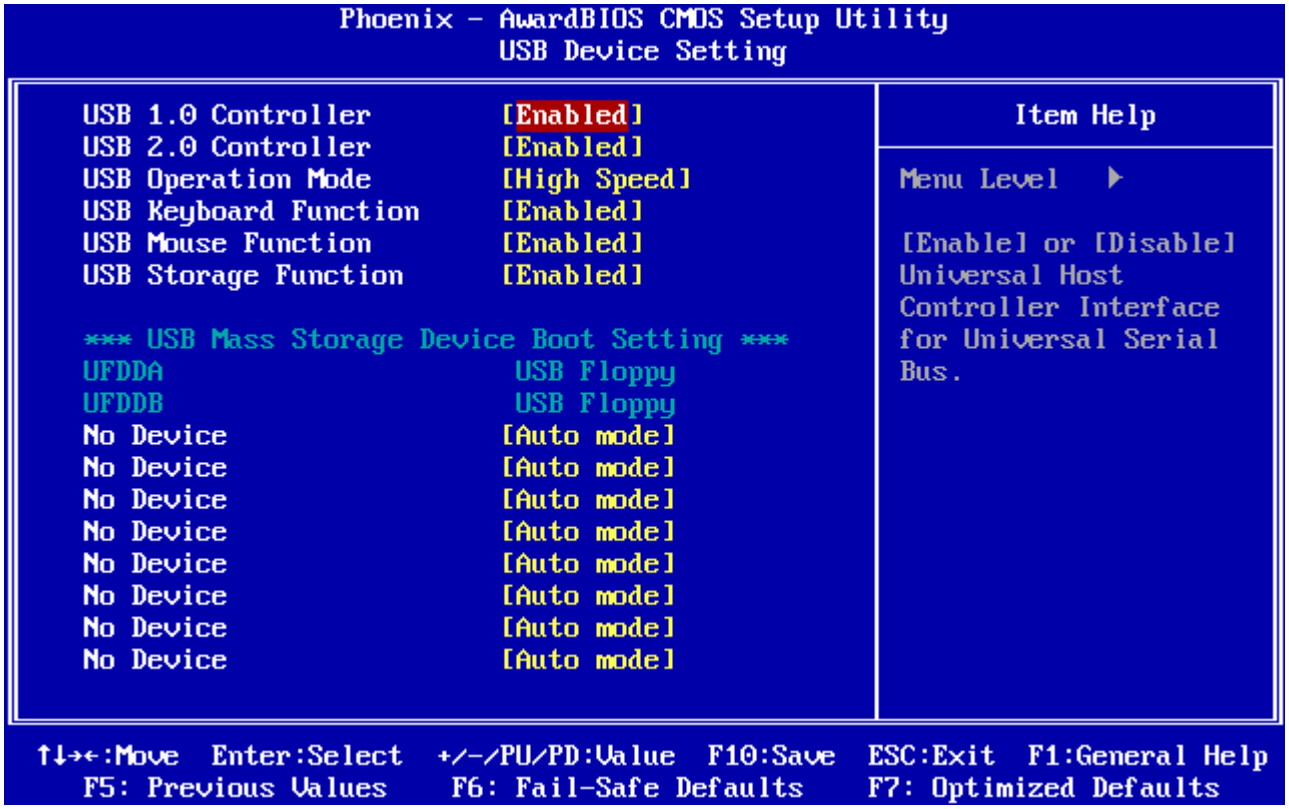
Phoenix - AwardBIOS CMOS Setup Utility
USB Device Setting
USB 1.0 Controller [Enabled]
USB 2.0 Controller [Enabled]
USB Operation Mode [High Speed]
USB Keyboard Function [Enabled]
USB Mouse Function [Enabled]
USB Storage Function [Enabled]
*** USB Mass Storage Device Boot Setting ***
UFDDA USB Floppy
UFDDB USB Floppy
No Device [Auto mode]
No Device [Auto mode]
No Device [Auto mode]
No Device [Auto mode]
No Device [Auto mode]
No Device [Auto mode]
No Device [Auto mode]
No Device [Auto mode]
Item Help
Menu Level ▶
[Enable] or [Disable] Universal Host Controller Interface for Universal Serial Bus.
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

Item	Options	Description
USB 1.0 Controller	Disabled Enabled	This item enables you to use the onboard USB 1.0 controller to communicate with your USB devices
USB 2.0 Controller	Disabled Enabled	This item enables you to use the onboard USB 2.0 controller to communicate with your USB devices
USB Operation Mode	Full/Low Speed High Speed	This item allows you to select the USB mode.
USB Keyboard Function	Disabled Enabled	This BIOS feature determines if support for the USB keyboard should be provided by the operating system or the BIOS.
USB Mouse Function	Disabled Enabled	This BIOS feature determines if support for the USB mouse should be provided by the operating system or the BIOS.
USB Storage Function	Disabled Enabled	This BIOS feature determines if support for the USB Storage should be provided by the operating system or the BIOS.

3.5.5 Power Management Setup

The Power Management Setup allows you to configure you system to most effectively save energy while operating in a manner consistent with your own style of computer use.

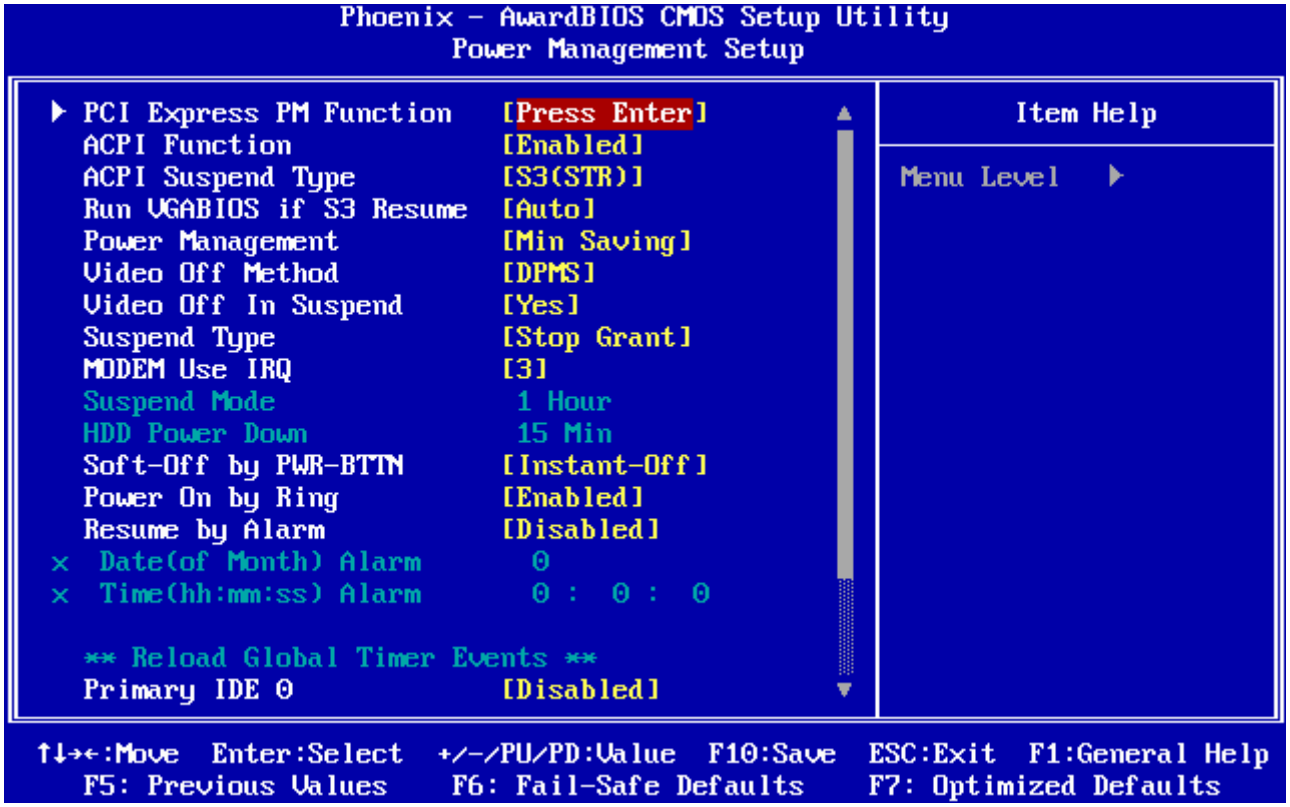
Phoenix - AwardBIOS CMOS Setup Utility
Power Management Setup
PCI Express PM Function [Press Enter]
ACPI Function [Enabled]
ACPI Suspend Type [S3(STR)]
Run VGABIOS if S3 Resume [Auto]
Power Management [Min Saving]
Video Off Method [DPMS]
Video Off In Suspend [Yes]
Suspend Type [Stop Grant]
MODEM Use IRQ [3]
Suspend Mode 1 Hour
HDD Power Down 15 Min
Soft-Off by PWR-BTTN [Instant-Off]
Power On by Ring [Enabled]
Resume by Alarm [Disabled]
x Date(of Month) Alarm 0
x Time(hh:mm:ss) Alarm 0 : 0 : 0
** Reload Global Timer Events **
Primary IDE 0 [Disabled]
Item Help
Menu Level
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

3.5.5.1 PCI Express PM Function

This item allows you to enable/disable the PCI Express PME Function.

The choices: Enabled, Disabled.

3.5.5.2 ACPI Function

This item allows you to enable/disable the ACPI function.

The choices: Enabled, Disabled.

3.5.5.3 ACPI Suspend Type

This item will set which ACPI suspend type will be used.

The choices: S1(POS), S3(STR).S1&S3.

3.5.5.4 Run VGABIOS if S3 Resume

There are 3 modes for you to decide to operate VGABIOS or not when the ACPI suspend type is S3.

The choices: Auto, Yes, No.

3.5.5.5 Power Management

This category allows you to select the type (or degree) of power saving and is directly related to the following modes:

Item	Description
User Defined	Allows you to set each mode individually. When not disabled, each of the ranges are from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min. and disable.
Min. Saving	Minimum power management, HDD Power Down = 15 Min,
Max. Saving	Maximum power management, HDD Power Down =1 Min,

3.5.5.6 Video Off Method

This determines the manner in which the monitor is blanked.

The choices: Blank Screen, V/H SYNC+Blank, DPMS.

3.5.5.7 Video Off In Suspend

This determines the manner in which the monitor is blanked.

The choice: No, Yes.

3.5.5.8 Suspend Type

This function allows to select Suspend type.

The choices: Stop Grant, PwrOn Suspend.

3.5.5.9 MODEM Use IRQ

This determines the IRQ in which the MODEM can use.

The choices: NA, 3, 4, 5, 7, 9, 10, 11.

3.5.5.10 Suspended Mode

It specifies the length of time of system inactivity while in full power on state before the computer enters suspend mode and motivates the enable 'Wake Up Events In Doze & Standby' / 'PM Events'.

The choices: Disabled, 1, 2, 4, 8, 12, 20, 30, 40 mins, 1 hr.

3.5.5.11 HDD Power Down

When enable and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

The choices: Disabled, 1 ~ 15 mins.

3.5.5.12 Soft-Off by PWR-BTTN

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state when the system has “hung”.(Only could working on ATX Power supply)
The choices: Delay 4 Sec, Instant-Off.

3.5.5.13 Wake Up by PCI Card

This will enable the system to wake up through PCI Card peripheral.
The choices: Enable, Disabled.

3.5.5.14 Power On By Ring

This determines whether the system boot up if there’s an incoming call from the Modem.
The choices: Enable, Disabled.

3.5.5.15 Resume By Alarm

This function is for setting date and time for your computer to boot up.
The choices: Enabled, Disabled.

3.5.5.16 Date<of Month>/Time<hh:mm:ss> Alarm

After enabled “Resume By Alarm”, set the specific date/hour/minute/second specified in these fields.
The choices: Alarm Date: 01-31, Every Day / Alarm Hour: 00-23 /
Alarm Minute: 00-59/ Alarm Second: 00-59

3.5.5.17 Primary/Secondary IDE 0/1, FDD,COM,LPT PORT, PCI PIRQ[A-D]#

Reload Global Timer events are I/O events whose occurrence can prevent the system from entering a power saving mode or can awake the system from such a mode. In effect ,the system remain alert for anything which occurs to a device which is configured as Enabled ,even when the system is in a power down mode.
The choices: Enabled, Disabled.

3.5.6 PnP / PCI Configuration

This section describes configuring the PCI bus system. PCI, or **P**ersonal **C**omputer **I**nterconnect, is a system which allows I/O devices to operate at speeds nearing the speed the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

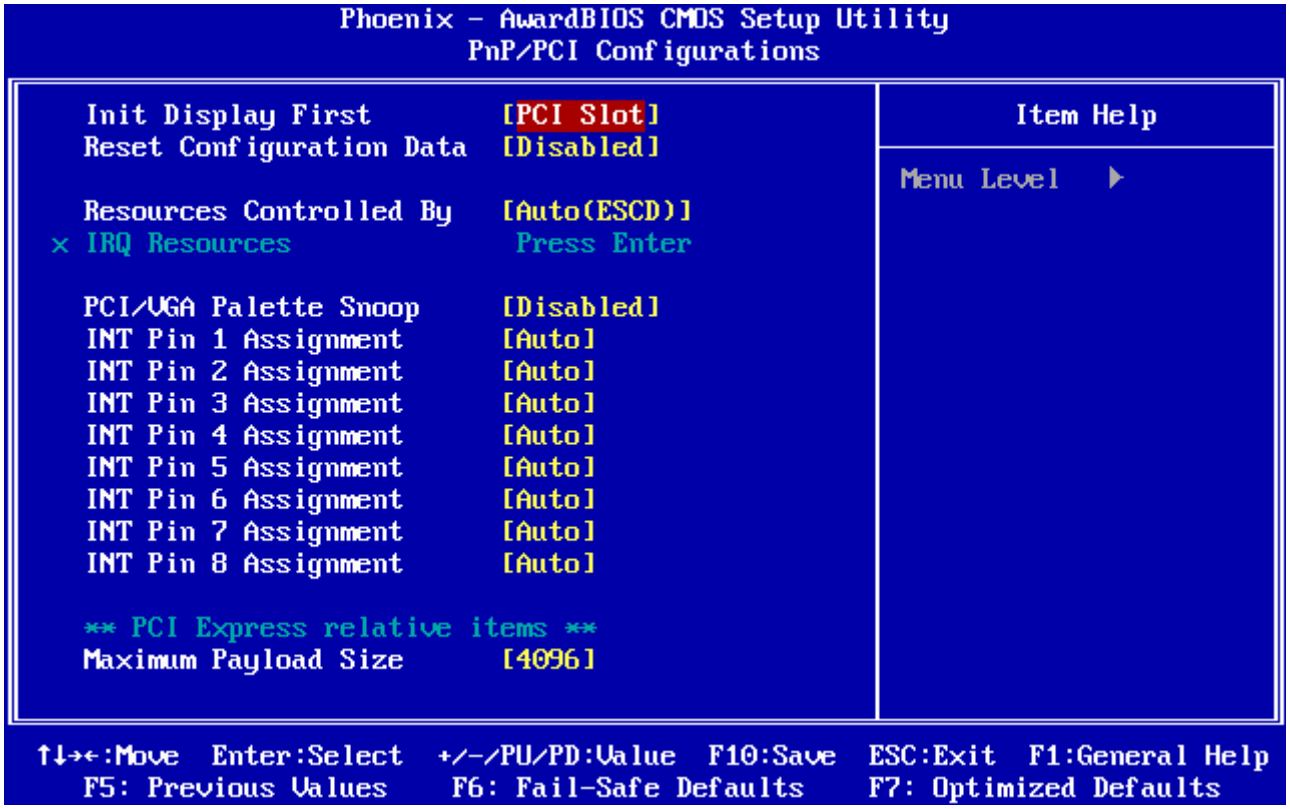
Phoenix - AwardBIOS CMOS Setup Utility
PnP/PCI Configurations
Init Display First [PCI Slot]
Reset Configuration Data [Disabled]
Resources Controlled By [Auto(ESCD)]
x IRQ Resources Press Enter
PCI/VGA Palette Snoop [Disabled]
INT Pin 1 Assignment [Auto]
INT Pin 2 Assignment [Auto]
INT Pin 3 Assignment [Auto]
INT Pin 4 Assignment [Auto]
INT Pin 5 Assignment [Auto]
INT Pin 6 Assignment [Auto]
INT Pin 7 Assignment [Auto]
INT Pin 8 Assignment [Auto]
** PCI Express relative items **
Maximum Payload Size [4096]
Item Help
Menu Level
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

3.5.6.1 Init Display First

It allows you to select whether to boot the system using the AGP graphics card or the PCI graphics card. This is particularly important if you have AGP and PCI graphics cards but only one monitor.

The choices: PCI Slot, Onboard, PCIEx.

3.5.6.2 Reset Configuration Data

Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the operating system cannot boot.

The choices: Enabled, Disabled.

3.5.6.3 Resources Controlled By

The Award Plug and Play BIOS has the capacity to automatically configure all of the boot and Plug and Play compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play operating system such as Windows®95. If you set this field to “manual” choose specific resources by going into each of the sub menu that follows this field (a sub menu is preceded by a “➢”).
The choices: Auto(ESCD), Manual.

3.5.6.4 PCI / VGA Palette Snoop

Leave this field at Disabled.
The choices: Enabled, Disabled.

3.5.6.5 INT Pin 1/2/3/4/5/6/7/8 Assignment

This feature allows you to assign the PCI IRQ numbers for PCI slots. Selecting the default, Auto, allows the PCI controller to automatically allocate the IRQ numbers.
The choices: Auto, 3, 4, 5, 7, 9, 10, 11, 12, 14, 15.

3.5.6.6 Maximum Payload Size

This setting defines the maximum payload size.
The choices: 128, 256, 512, 1024, 2048, 4096.

3.5.7 PC Health Status

This section shows the status of your CPU, Fan & System.

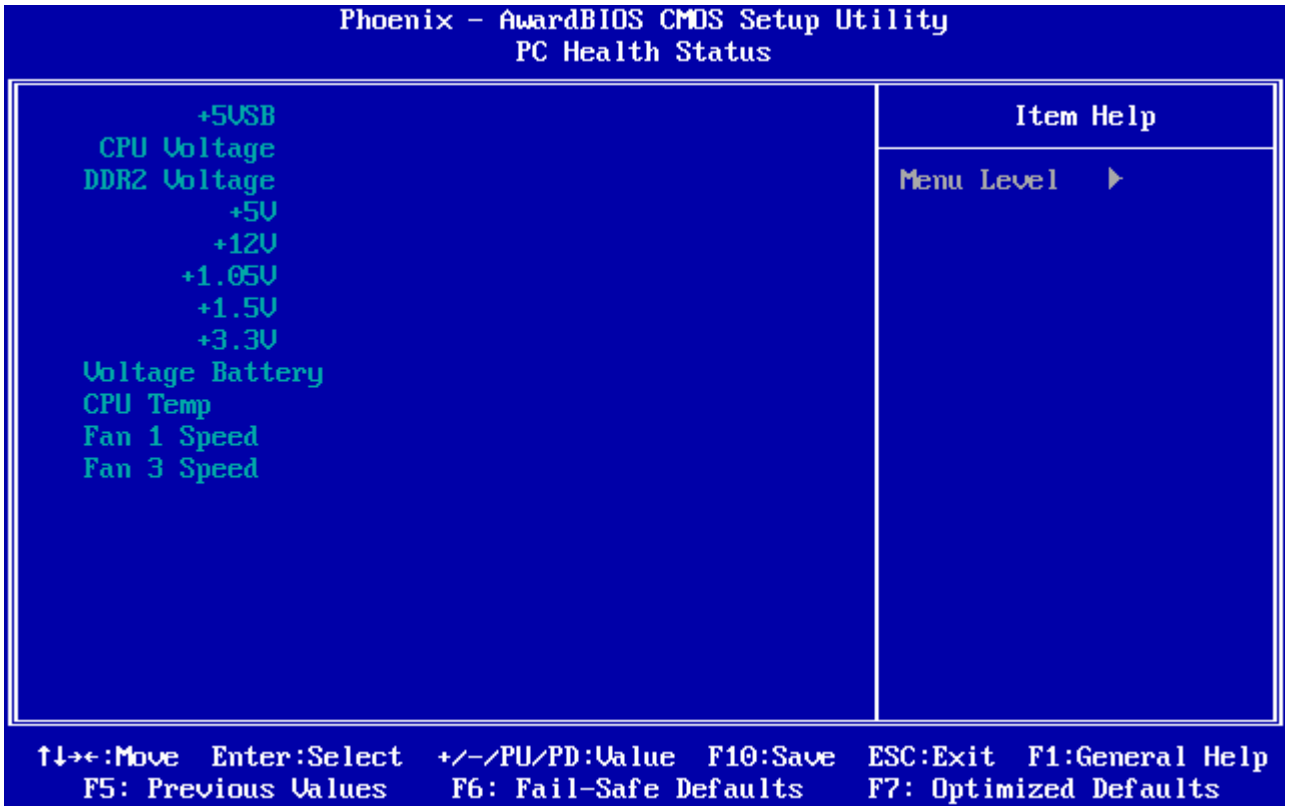

Load Fail-Safe Defaults

Use this menu to load the BIOS default values for the minimal/stable performance for your system to operate.

Press <Y> to load the BIOS default values for the most stable, minimal-performance system operations.

ECM-945GSE

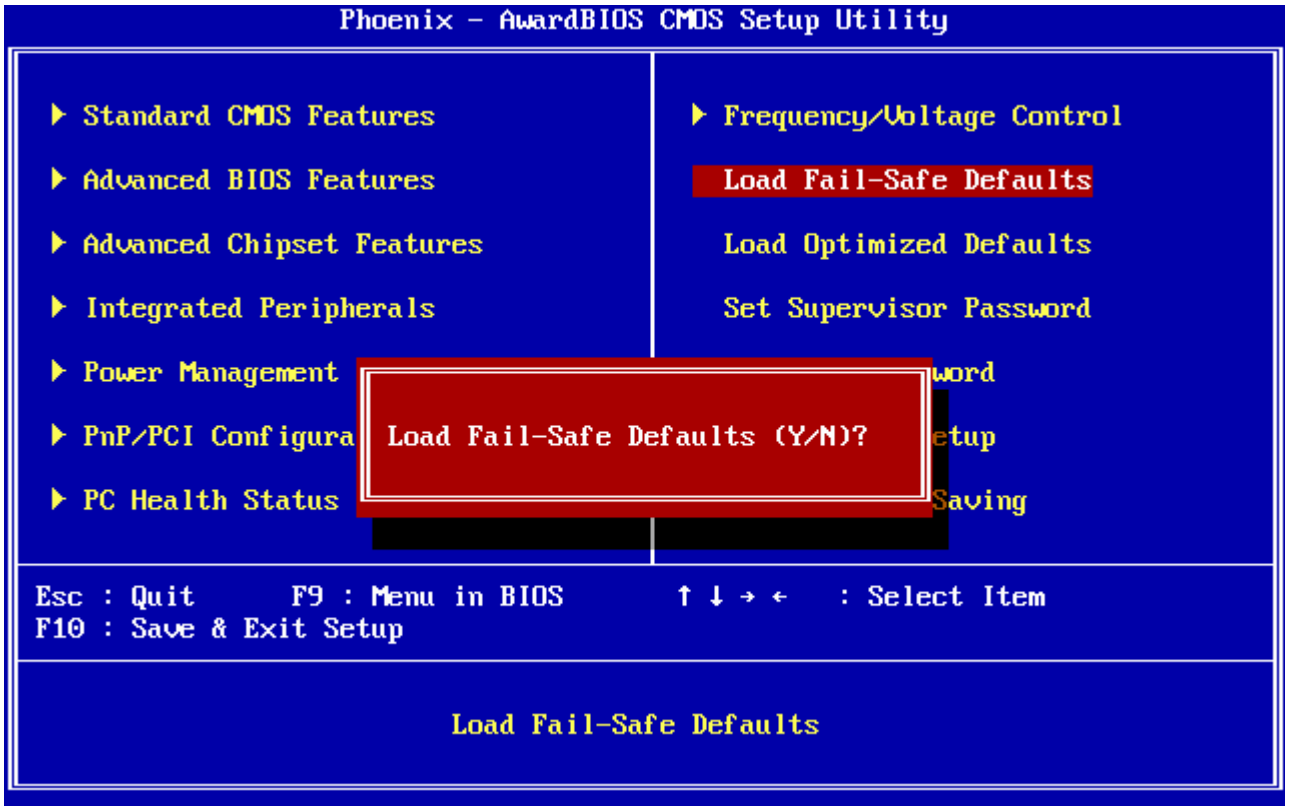

3.5.8 Load Optimized Defaults

Use this menu to load the BIOS default values that are factory settings for optimal performance system operations. While Award has designed the custom BIOS to maximize performance, the factory has the right to change these defaults to meet their needs.

Press <Y> to load the default values setting for optimal performance system operations.

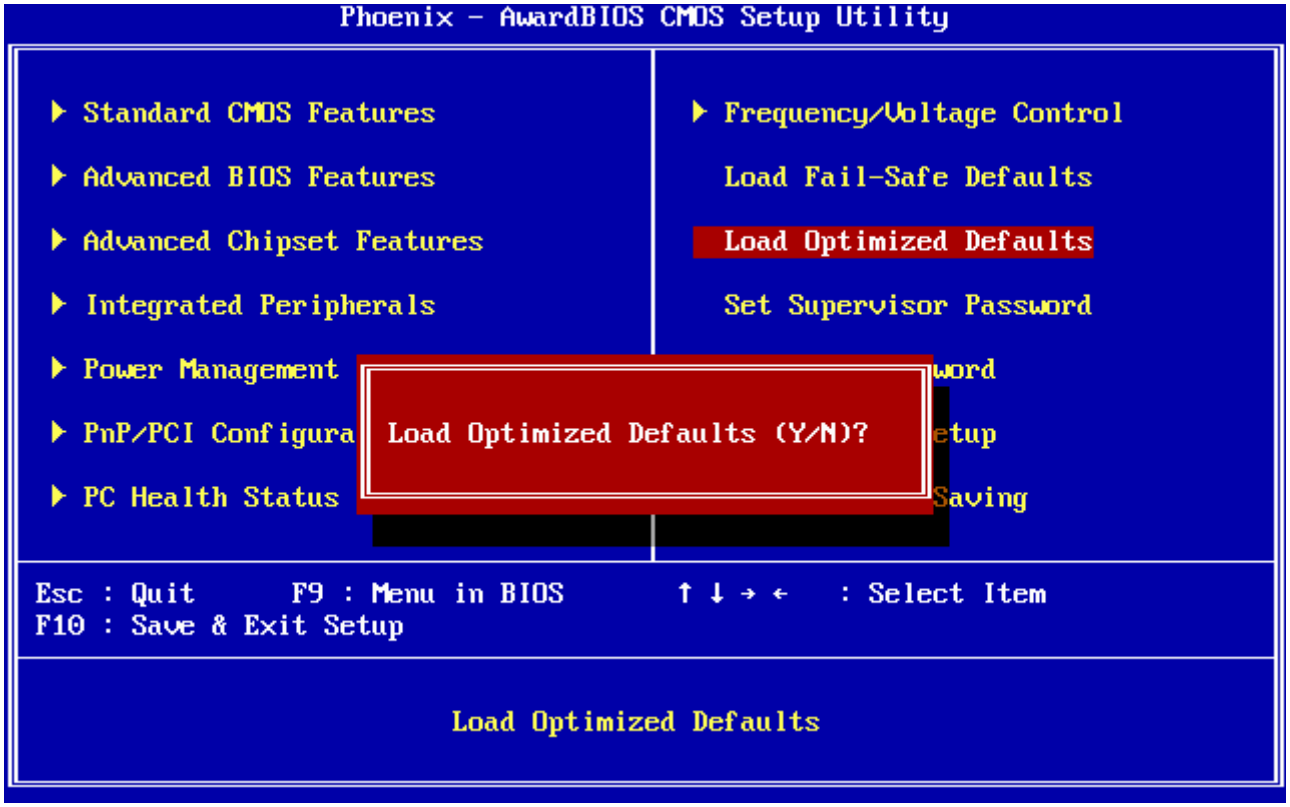

3.5.9 Set Supervisor / User Password

You can set either supervisor or user password, or both of them.

Supervisor Password: able to enter/change the options of setup menus.

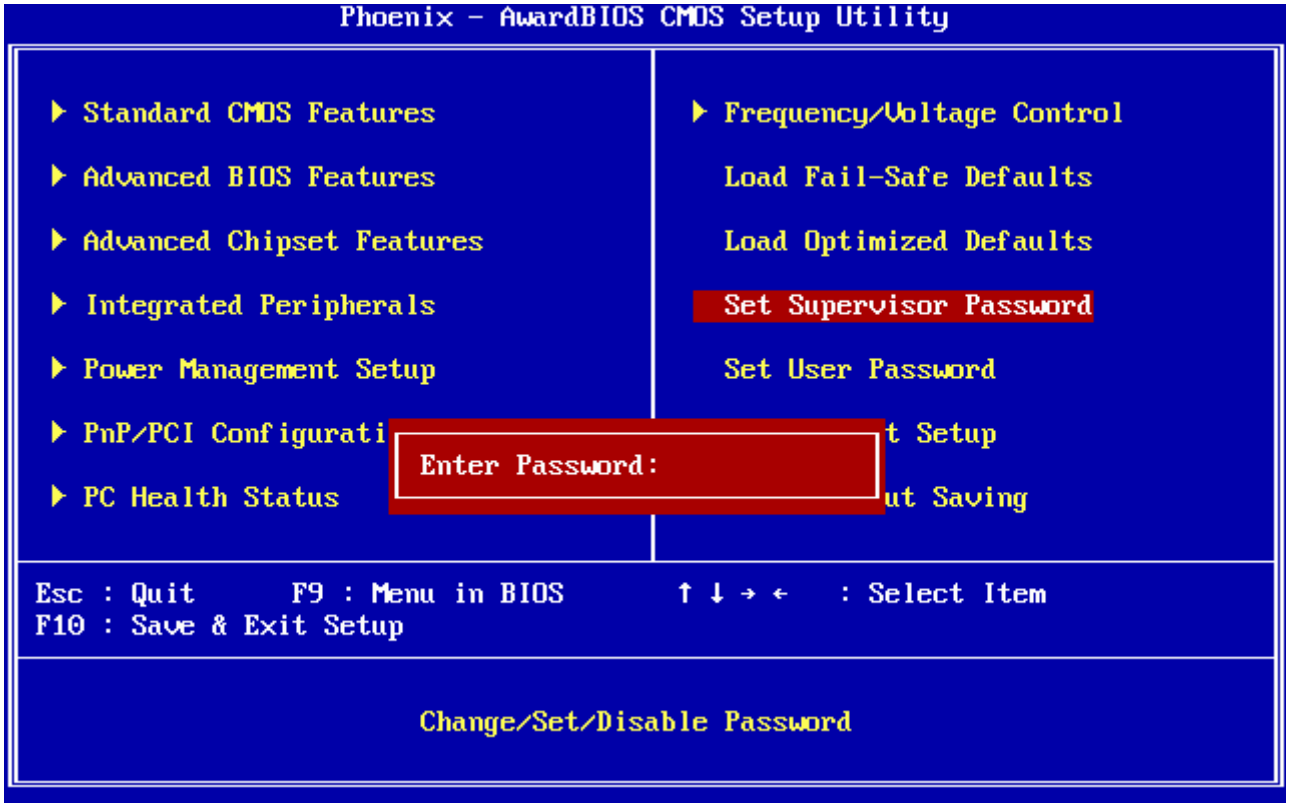

User Password: able to enter but no right to change the options of setup menus.

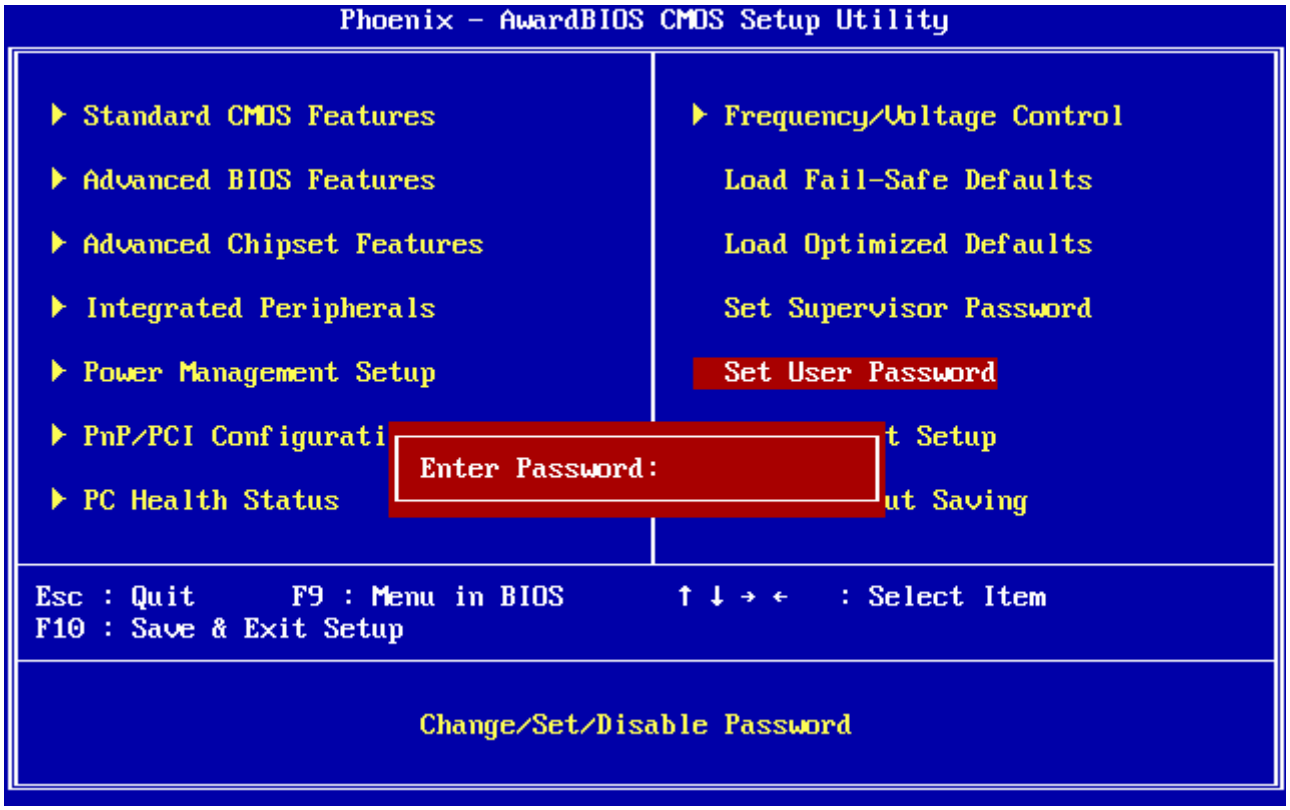

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password. To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

PASSWORD DISABLED.

When a password has been enabled, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration. Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer. You determine when the password is required within the BIOS Features Setup Menu and its Security option (see Section 3). If the Security option is set to “System”, the password will be required both at boot and at entry to Setup. If set to “Setup”, prompting only occurs when trying to enter Setup.

3.5.10 Save & Exit Setup

Save CMOS value changes to CMOS and exit setup.

Enter <Y> to store the selection made in the menus in CMOS, a special section in memory that stays on after turning the system off. The BIOS configures the system according to the Setup selection stored in CMOS when boot the computer next time.

The system is restarted after saving the values.

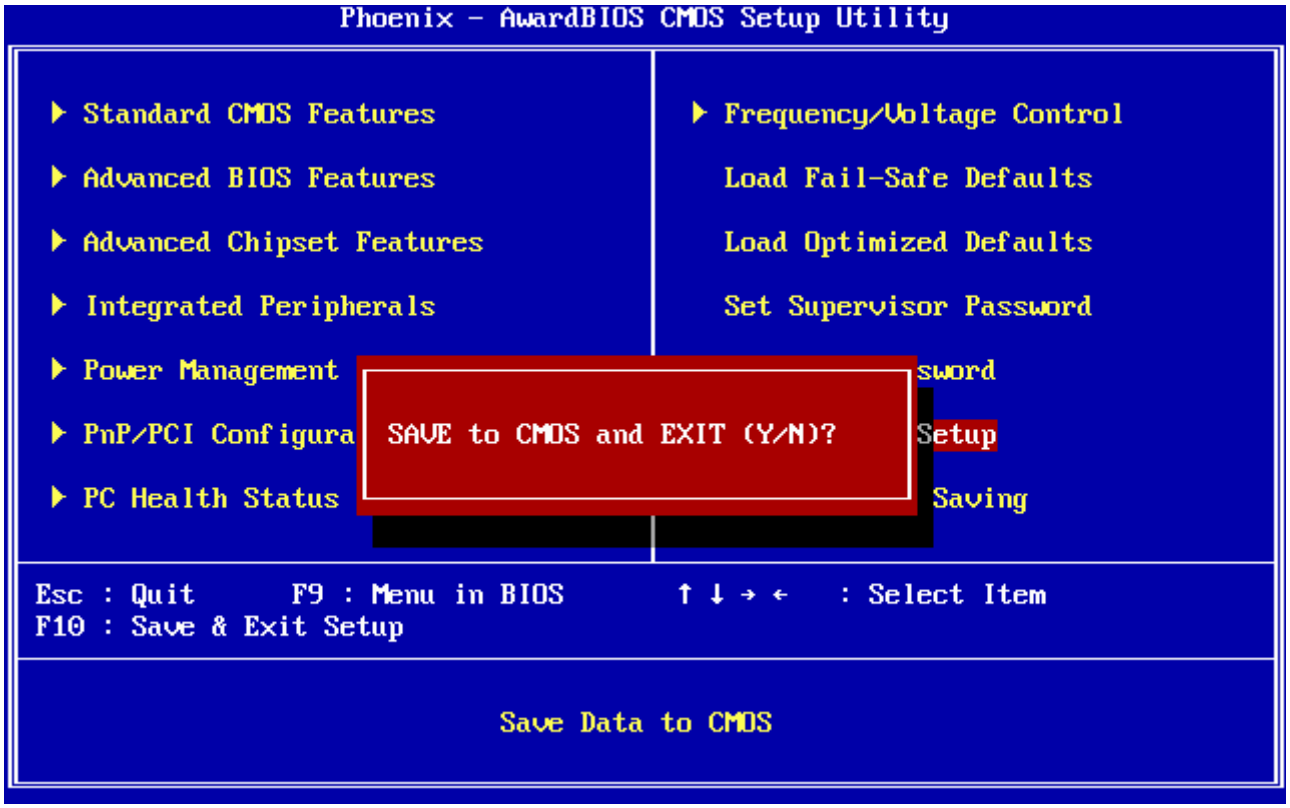

3.5.11 Exit Without Save

Abandon all CMOS value changes and exit setup, and the system is restarted after exiting.

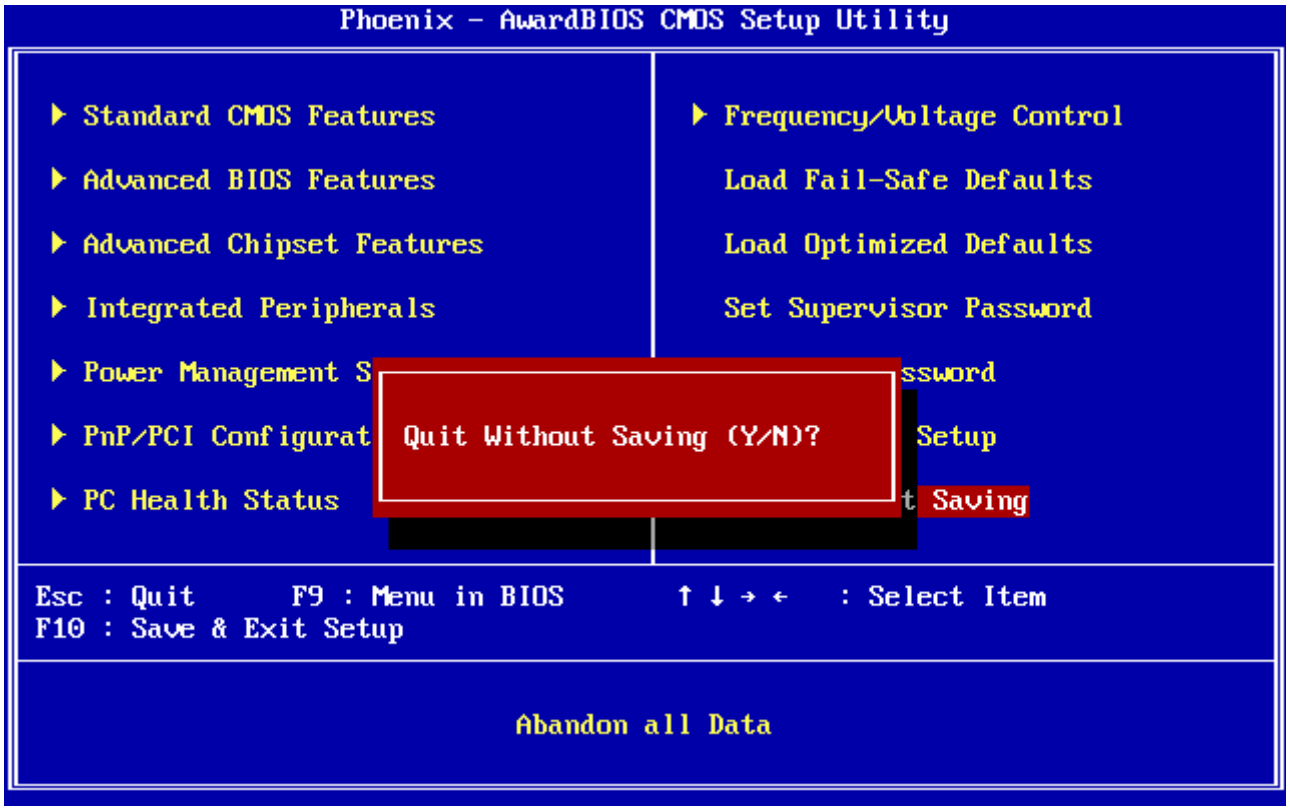

4. Drivers Installation

Note: Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.

4.1 Install Chipset Driver (For Intel 945GSE)

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\Driver_Chipset\Intel\ 945GSE**.

Note: The installation procedures and screen shots in this section are based on Windows XP operation system. If the warning message appears while the installation process, click Continue to go on.

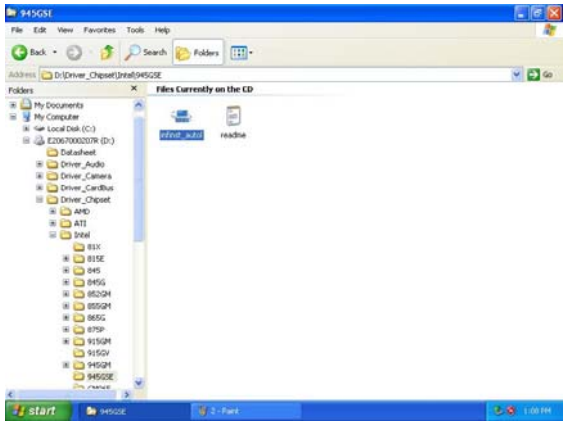

Step1. Locate 「\Driver_Chipset\Intel\ 945GM\ \infinst_autol.exe」.

Intel® Chipset Device Software
Intel® Chipset Device Software
Welcome to the Setup Program
This setup program will install the Intel® Chipset Device Software onto this computer. It is strongly recommended that you exit all Windows* programs before continuing.
< Back
Next >
Cancel
Intel® Installation Framework

Step 2. Click **Next**.

Intel® Chipset Device Software
Intel® Chipset Device Software
Readme File Information
Refer to the Readme file below to view the system requirements and installation information.
Press the Page Down key to view the rest of the file.
* Product: Intel(R) Chipset Device Software
* Release: Production Version
* Version: 8.3.0.1013
* Target Chipset#: Q33/G33/G31/P35
* Date: March 05 2007
< Back
Next >
Cancel
Intel® Installation Framework

Step 3. Click **Next**.

Intel® Chipset Device Software
Intel® Chipset Device Software
Setup Is Complete
You must restart this computer for the changes to take effect. Would you like to restart the computer now?
Yes, I want to restart this computer now.
No, I will restart this computer later.
Click Finish, then remove any installation media from the drives.
Finish
Intel® Installation Framework

Step 4. Click **Finish** to complete setup.

4.2 Install Display Driver (For Intel 945GSE)

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\Driver_Video\Intel\945GSE**.

Note: The installation procedures and screen shots in this section are based on Windows XP operation system.

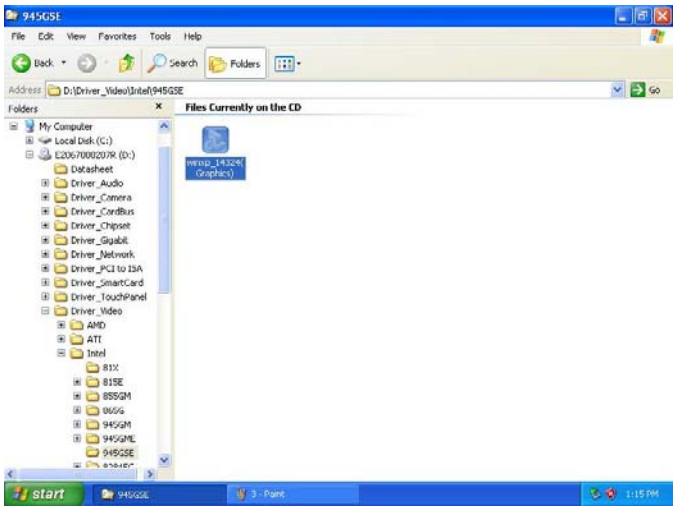

Step 1. Locate「Driver_Video\Intel\945GSE\winxp_14324(Graphics).exe」.

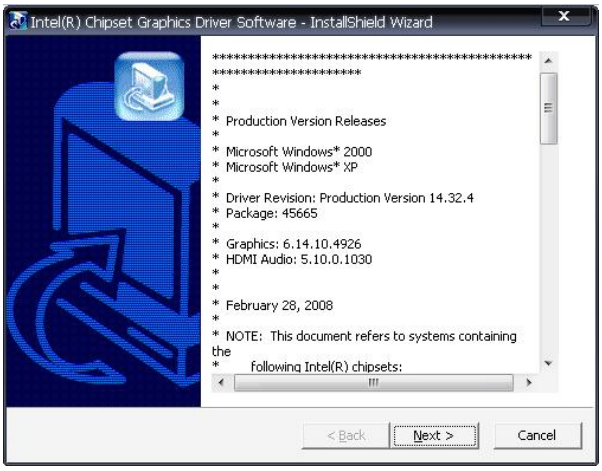
Intel(R) Chipset Graphics Driver Software - InstallShield Wizard
* Production Version Releases
* Microsoft Windows* 2000
* Microsoft Windows* XP
* Driver Revision: Production Version 14.32.4
* Package: 45665
* Graphics: 6.14.10.4926
* HDMI Audio: 5.10.0.1030
* February 28, 2008
* NOTE: This document refers to systems containing the
following Intel(R) chipsets:
< Back
Next >
Cancel

Step 2. Click **Next**.

Intel® Graphics Media Accelerator Driver
Intel® Graphics Media Accelerator Driver
Welcome to the Setup Program
This setup program will install the Intel® Graphics Media Accelerator Driver onto this computer. It is strongly recommended that you exit all programs before continuing. Click Next to continue.
< Back
Next >
Cancel
Intel® Installation Framework

Step 3. Click **Next**.

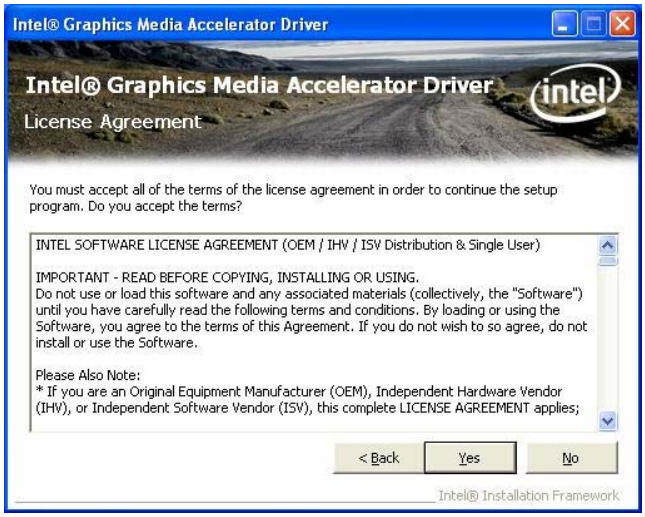
Intel® Graphics Media Accelerator Driver
Intel® Graphics Media Accelerator Driver
License Agreement
You must accept all of the terms of the license agreement in order to continue the setup program. Do you accept the terms?
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not use or load this software and any associated materials (collectively, the "Software") until you have carefully read the following terms and conditions. By loading or using the Software, you agree to the terms of this Agreement. If you do not wish to so agree, do not install or use the Software.
Please Also Note:
* If you are an Original Equipment Manufacturer (OEM), Independent Hardware Vendor (IHV), or Independent Software Vendor (ISV), this complete LICENSE AGREEMENT applies;
< Back
Yes
No
Intel® Installation Framework

Step 4. Click **Yes**.

Intel® Graphics Media Accelerator Driver
Intel® Graphics Media Accelerator Driver
Setup Is Complete
You must restart this computer for the changes to take effect. Would you like to restart the computer now?
Yes, I want to restart this computer now.
No, I will restart this computer later.
Click Finish, then remove any installation media from the drives.
Finish
Intel® Installation Framework

Step 5. Click **Finish** to complete setup.

4.3 Install Ethernet Driver (For Marvell 88E8053 Gigabit LAN)

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of AVALUE's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\Driver_Gigabit\Marvell\88E8053**.

Note: The installation procedures and screen shots in this section are based on Windows XP operation system.

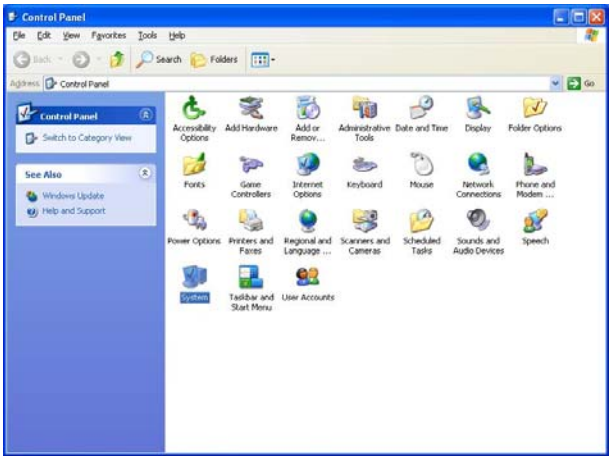

Step 1. Click **Start** of the task bar, then the **System** of **Performance and Maintenance** in **Control Panel**.

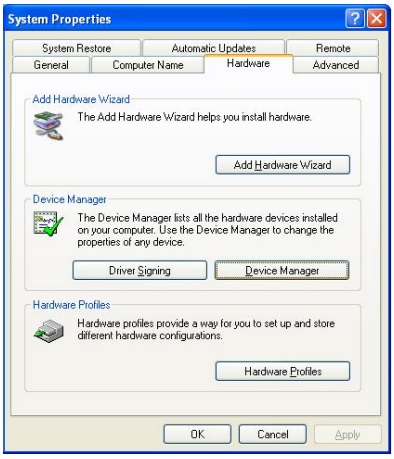

Step 2. Click **Device Manager** of **Hardware**.

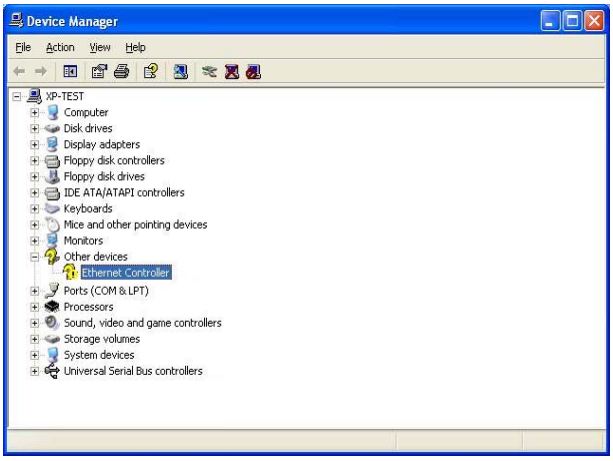

Step 3. Double click **Ethernet Controller**.

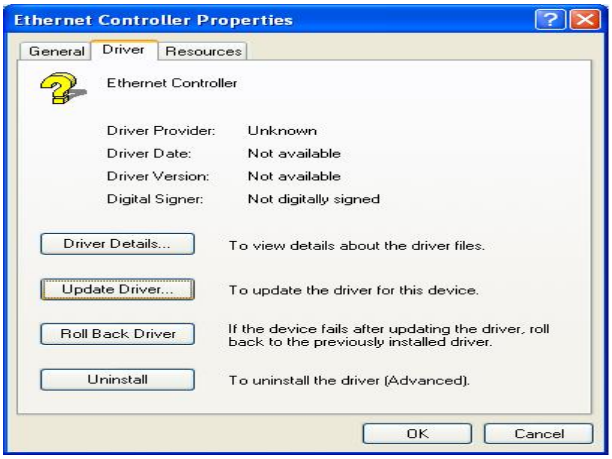

Step 4. Click **Update Driver**.

Hardware Update Wizard
Welcome to the Hardware Update Wizard
This wizard helps you install software for:
Ethernet Controller
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

Step 5. Select the **Advanced** item and click **Next**.

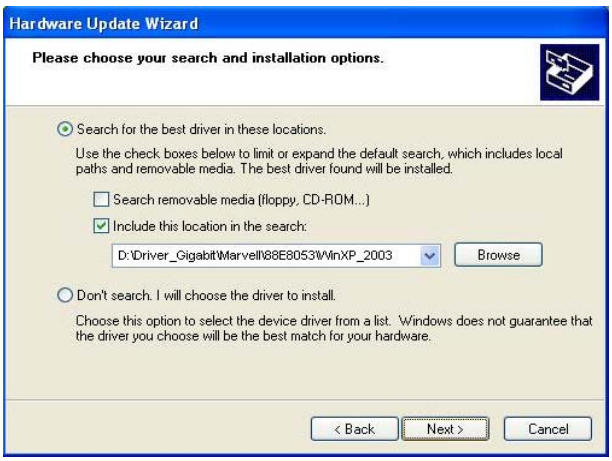
Hardware Update Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM...)
Include this location in the search:
D:\Driver_Gigabit\Marvell\88E8053\WinXP_2003
Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back
Next >
Cancel

Step 6. Select the specific location to **Next**.

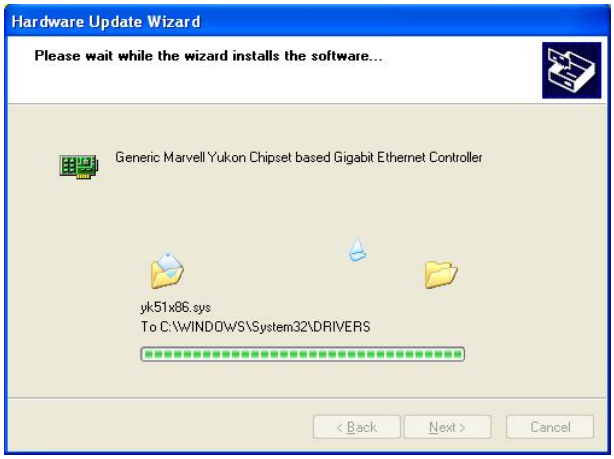

Step 7. The wizard runs the setup automatically.

Hardware Update Wizard
Completing the Hardware Update Wizard
The wizard has finished installing the software for:
Generic Marvell Yukon Chipset based Gigabit Ethernet Controller
Click Finish to close the wizard.
< Back
Finish
Cancel

Step 8. Click **Finish** to complete the installation.

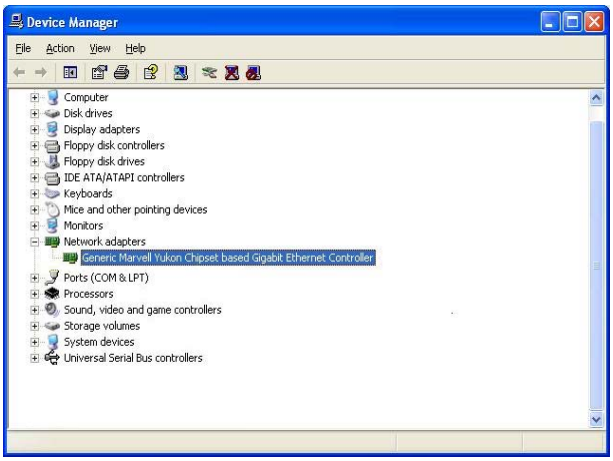

Step 9. Repeat the Step 1 ~ Step 3 to confirm the Generic Marvell is ready.

4.4 Install Audio Driver (For Realtek ALC655)

Insert the Supporting CD-ROM to CD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\Driver_Audio\Intel\6300ESB \ALC655.**

Note: The installation procedures and screen shots in this section are based on Windows 2000 operation system.

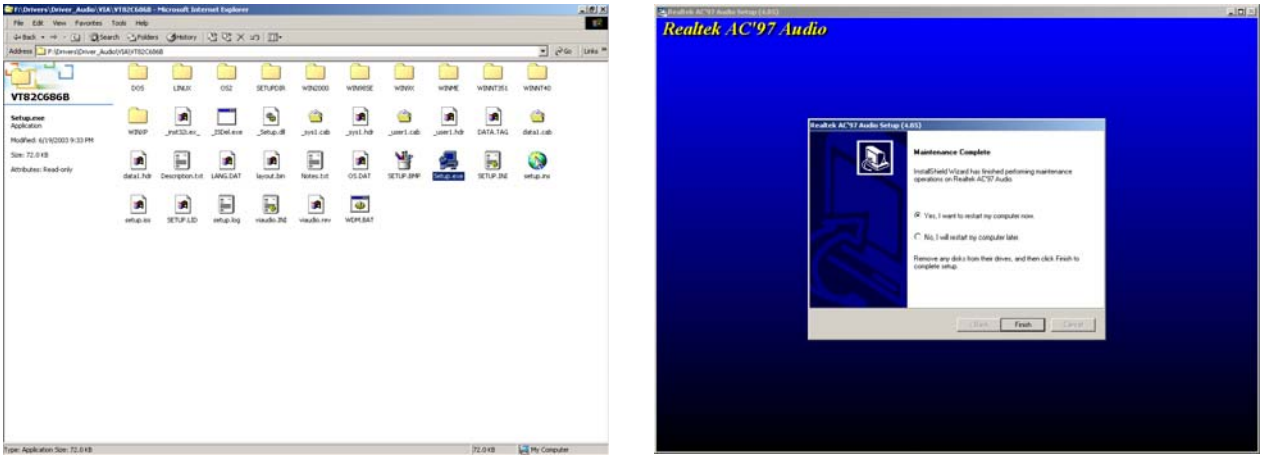

Step 3. Select **Yes** to the next step.

Step 1. Locate 「\Driver_Audio\Intel\ 6300ESB ALC655\setup.exe」.

Step 4. Click **Finish** to complete the setup.

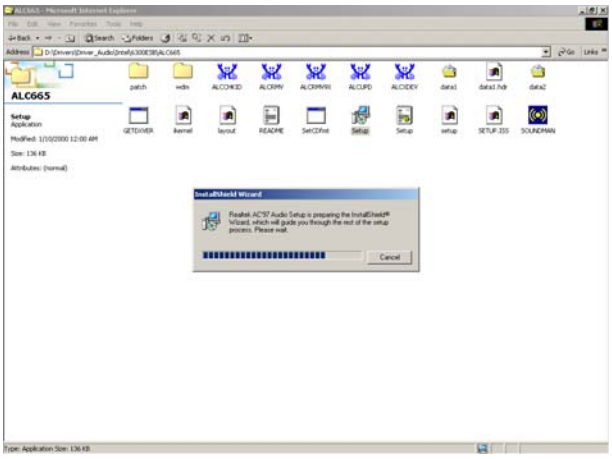

Step 2. The program executes the Setup automatically.

5. Mechanical Drawing

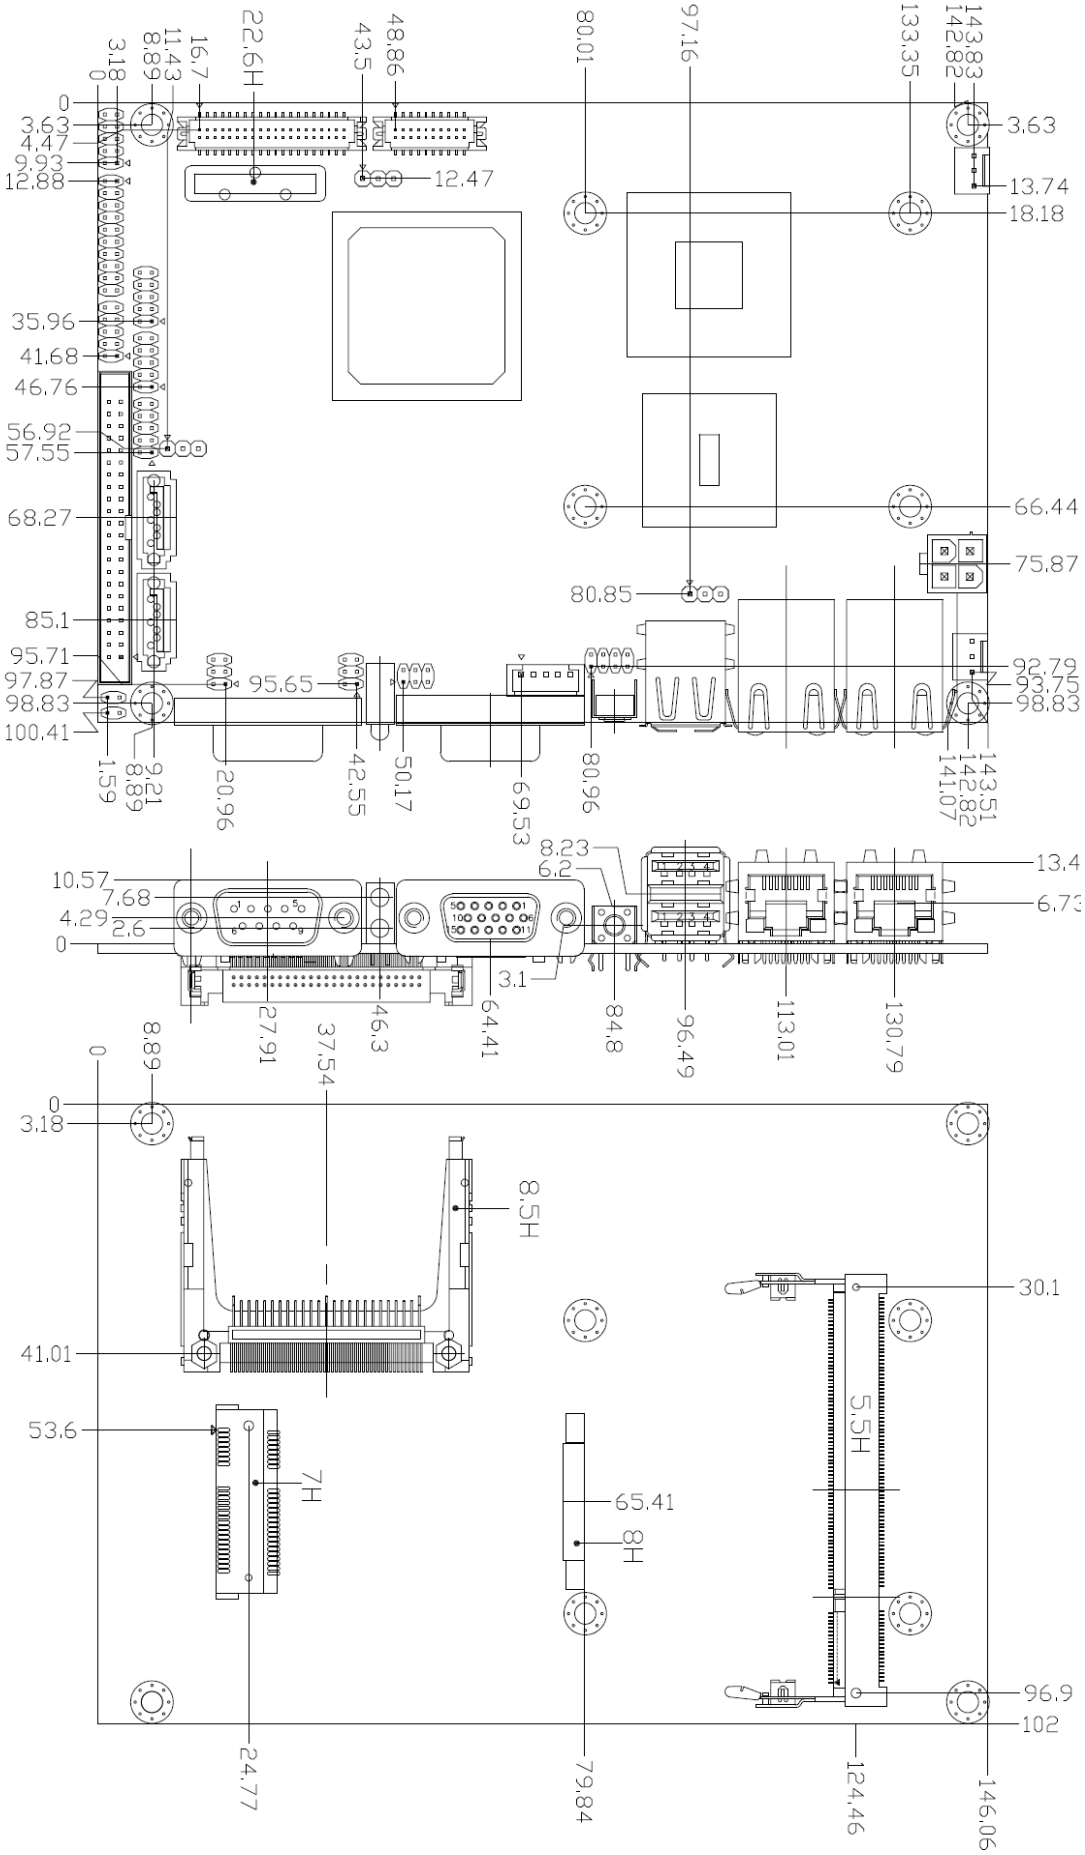
Unit: mm

With Heatsink

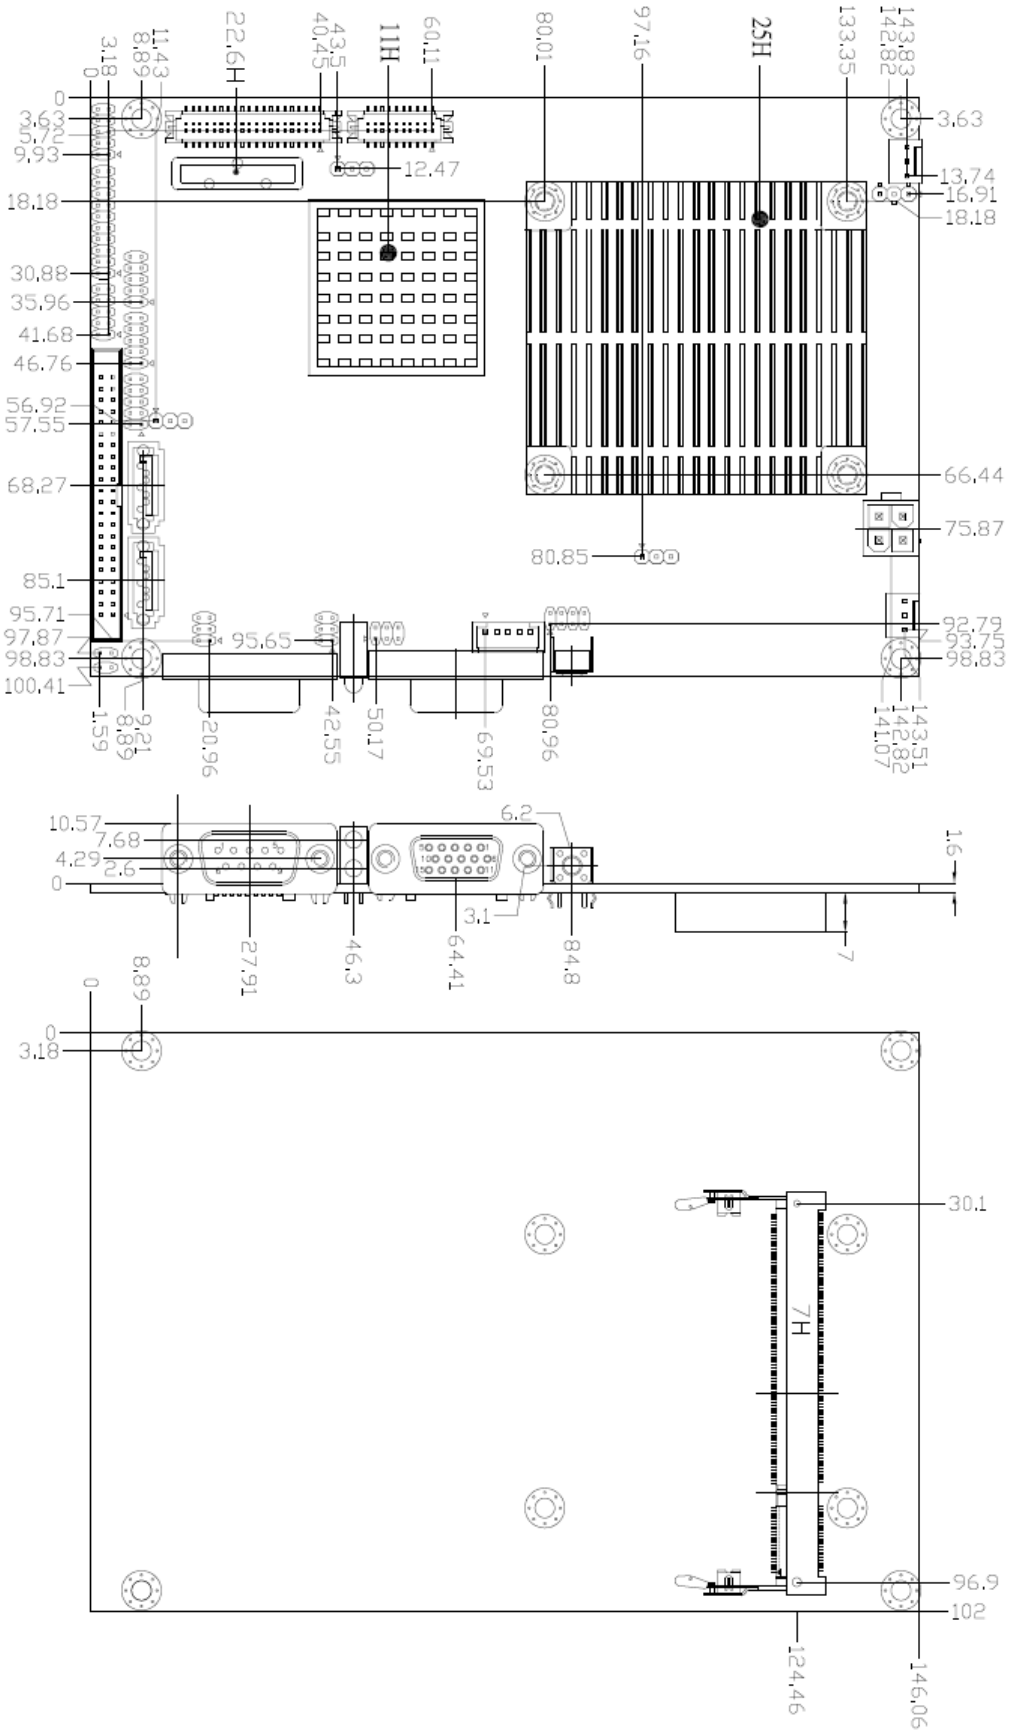

Appendix A: AWARD BIOS POST Messages

Overview

During the Power On Self-Test (POST), if the BIOS detects an error requiring you to do something to fix, it will either sound a beep code or display a message.
If a message is displayed, it will be accompanied by:
PRESS F1 TO CONTINUE, CTRL-ALT-ESC OR DEL TO ENTER SETUP

Post Beep

Currently there are two kinds of beep codes in BIOS. This code indicates that a video error has occurred and the BIOS cannot initialize the video screen to display any additional information. This beep code consists of a single long beep followed by two short beeps. The other code indicates that your DRAM error has occurred. This beep code consists of a single long beep repeatedly.

Error Messages

One or more of the following messages may be displayed if the BIOS detects an error during the POST. This list includes messages for both the ISA and the EISA BIOS.

1. CMOS BATTERY HAS FAILED

CMOS battery is no longer functional. It should be replaced.

2. CMOS CHECKSUM ERROR

Checksum of CMOS is incorrect. This can indicate that CMOS has become corrupt. This error may have been caused by a weak battery. Check the battery and replace if necessary.

3. DISK BOOT FAILURE, INSERT SYSTEM DISK AND PRESS ENTER

No boot device was found. This could mean that either a boot drive was not detected or the drive does not contain proper system boot files. Insert a system disk into Drive A: and press <Enter>. If you assumed the system would boot from the hard drive, make sure the controller is inserted correctly and all cables are properly attached. Also be sure the disk is formatted as a boot device. Then reboot the system.

4. DISKETTE DRIVES OR TYPES MISMATCH ERROR - RUN SETUP

Type of diskette drive installed in the system is different from the CMOS definition. Run Setup to reconfigure the drive type correctly.

5. DISPLAY SWITCH IS SET INCORRECTLY

Display switch on the motherboard can be set to either monochrome or color. This indicates the switch is set to a different setting than indicated in Setup. Determine which setting is correct, and then either turn off the system and change the jumper, or enter Setup and change the VIDEO selection.

6. DISPLAY TYPE HAS CHANGED SINCE LAST BOOT

Since last powering off the system, the display adapter has been changed. You must configure the system for the new display type.

7. EISA Configuration Checksum Error
PLEASE RUN EISA CONFIGURATION UTILITY

The EISA non-volatile RAM checksum is incorrect or cannot correctly read the EISA slot. This can indicate either the EISA non-volatile memory has become corrupt or the slot has been configured incorrectly. Also be sure the card is installed firmly in the slot.

8. EISA Configuration Is Not Complete
PLEASE RUN EISA CONFIGURATION UTILITY

The slot configuration information stored in the EISA non-volatile memory is incomplete.

Note: When either of these errors appears, the system will boot in ISA mode, which allows you to run the EISA Configuration Utility.

9. ERROR ENCOUNTERED INITIALIZING HARD DRIVE

Hard drive cannot be initialized. Be sure the adapter is installed correctly and all cables are correctly and firmly attached. Also be sure the correct hard drive type is selected in Setup.

10. ERROR INITIALIZING HARD DISK CONTROLLER

Cannot initialize controller. Make sure the cord is correctly and firmly installed in the bus. Be sure the correct hard drive type is selected in Setup. Also check to see if any jumper needs to be set correctly on the hard drive.

11. FLOPPY DISK CNTRLR ERROR OR NO CNTRLR PRESENT

Cannot find or initialize the floppy drive controller. Make sure the controller is installed correctly and firmly. If there are no floppy drives installed, be sure the Diskette Drive selection in Setup is set to NONE.

12. Invalid EISA Configuration

PLEASE RUN EISA CONFIGURATION UTILITY

The non-volatile memory containing EISA configuration information was programmed incorrectly or has become corrupt. Re-run EISA configuration utility to correctly program the memory.

Note: When either of these errors appears, the system will boot in ISA mode, which allows you to run the EISA Configuration Utility.

13. KEYBOARD ERROR OR NO KEYBOARD PRESENT

Cannot initialize the keyboard. Make sure the keyboard is attached correctly and no keys are being pressed during the boot.

If you are purposely configuring the system without a keyboard, set the error halt condition in Setup to HALT ON ALL, BUT KEYBOARD. This will cause the BIOS to ignore the missing keyboard and continue the boot.

14. Memory Address Error at ...

Indicates a memory address error at a specific location. You can use this location along with the memory map for your system to find and replace the bad memory chips.

15. Memory parity Error at ...

Indicates a memory parity error at a specific location. You can use this location along with the memory map for your system to find and replace the bad memory chips.

16. MEMORY SIZE HAS CHANGED SINCE LAST BOOT

Memory has been added or removed since the last boot. In EISA mode use Configuration Utility to reconfigure the memory configuration. In ISA mode enter Setup and enter the new memory size in the memory fields.

17. Memory Verify Error at ...

Indicates an error verifying a value already written to memory. Use the location along with your system's memory map to locate the bad chip.

18. OFFENDING ADDRESS NOT FOUND

This message is used in conjunction with the I/O CHANNEL CHECK and RAM PARITY ERROR messages when the segment that has caused the problem cannot be isolated.

19. OFFENDING SEGMENT:

This message is used in conjunction with the I/O CHANNEL CHECK and RAM PARITY ERROR messages when the segment that has caused the problem has been isolated.

20. PRESS A KEY TO REBOOT

This will be displayed at the bottom screen when an error occurs that requires you to reboot. Press any key and the system will reboot.

21. PRESS F1 TO DISABLE NMI, F2 TO REBOOT

When BIOS detects a Non-maskable Interrupt condition during boot, this will allow you to disable the NMI and continue to boot, or you can reboot the system with the NMI enabled.

22. RAM PARITY ERROR - CHECKING FOR SEGMENT ...

Indicates a parity error in Random Access Memory.

23. Should Be Empty But EISA Board Found
PLEASE RUN EISA CONFIGURATION UTILITY

A valid board ID was found in a slot that was configured as having no board ID.

Note: When either of these errors appears, the system will boot in ISA mode, which allows you to run the EISA Configuration Utility.

24. Should Have EISA Board But Not Found
PLEASE RUN EISA CONFIGURATION UTILITY

The board installed is not responding to the ID request, or no board ID has been found in the indicated slot.

Note: When either of these errors appears, the system will boot in ISA mode, which allows you to run the EISA Configuration Utility.

25. Slot Not Empty

Indicates that a slot designated as empty by the EISA Configuration Utility actually contains a board.

Note: When either of these errors appears, the system will boot in ISA mode, which allows you to run the EISA Configuration Utility.

26. SYSTEM HALTED, (CTRL-ALT-DEL) TO REBOOT ...

Indicates the present boot attempt has been aborted and the system must be rebooted. Press and hold down the CTRL and ALT keys and press DEL.

27. Wrong Board In Slot
PLEASE RUN EISA CONFIGURATION UTILITY

The board ID does not match the ID stored in the EISA non-volatile memory.

Note: When either of these errors appears, the system will boot in ISA mode, which allows you to run the EISA Configuration Utility.

28. **FLOPPY DISK(S) fail (80) → Unable to reset floppy subsystem.**
29. **FLOPPY DISK(S) fail (40) → Floppy Type dismatch.**
30. **Hard Disk(s) fail (80) → HDD reset failed.**
31. **Hard Disk(s) fail (40) → HDD controller diagnostics failed.**
32. **Hard Disk(s) fail (20) → HDD initialization error.**
33. **Hard Disk(s) fail (10) → Unable to recalibrate fixed disk.**
34. **Hard Disk(s) fail (08) → Sector Verify failed.**
35. **Keyboard is locked out - Unlock the key.**

BIOS detect the keyboard is locked. P17 of keyboard controller is pulled low.

36. **Keyboard error or no keyboard present.**

Cannot initialize the keyboard. Make sure the keyboard is attached correctly and no keys are being pressed during the boot.

37. **Manufacturing POST loop.**

System will repeat POST procedure infinitely while the P15 of keyboard controller is pull low. This is also used for M/B burn in test.

38. **BIOS ROM checksum error - System halted.**

The checksum of ROM address F0000H-FFFFFH is bad.

39. **Memory test fail.**

BIOS reports the memory test fail if the onboard memory is tested error.

40. **POST Codes**

Please take reference to Phoenix-Award website for the latest post codes.
http://www.phoenix.com/en/OEM-ODM/Customer+Services/BIOS/AwardBIOS/Award+Error+Codes.htm

40.1Normal POST Code

Note: EISA POST codes are typically output to port address 300h. ISA POST codes are output to port address 80h.

Code (hex)	Name	Description
C0	Turn Off Chipset and CPU test	OEM Specific-Cache control cache Processor Status (1FLAGS) Verification. Tests the following processor status flags: Carry, zero, sign, overflow, the BIOS sets each flag, verifies They are set, then turns each flag off and verifies it is off. Read/Write/Verify all CPU registers except SS, SP, and BP with data pattern FF and 00. RAM must be periodically refreshed to keep the memory from decaying. This function ensures that the memory refresh function is working properly.
C1	Memory Presence	First block memory detect OEM Specific-Test to size on-board memory. Early chip set initialization Memory presence test OEM chip set routines clear low 64K of memory Test first 64K memory.
C2	Early Memory Initialization	OEM Specific- Board Initialization
C3	Extend Memory DRAM select	OEM Specific- Turn on extended memory Initialization Cyrix CPU initialization, Cache initialization
C4	Special Display Handling	OEM Specific- Display/Video Switch handling so that switch handling display switch errors never occurs
C5	Early Shadow	OEM specific- Early shadow enable for fast boot
C6	Cache presence test	External cache size detection
CF	CMOS Check	CMOS checkup
B0	Spurious	If interrupt occurs in protected mode.
B1	Unclaimed NMI	If unmasked NMI occurs, display Press F1 to disable NMI, F2 reboot.
BF	Program Chip Set	To program chipset from defaults values
E1-EF	Setup Pages	E1- Page 1, E2 - Page 2, etc.
1	Force load Default to chipset	Chipset defaults program
2	Reserved	

Code (hex)	Name	Description
3	Early Superio Init	Early Initialized the super IO
4	Reserved	
5	Blank video	Reset Video controller
6	Reserved	
7	Init KBC	Keyboard controller init
8	KB test	Test the Keyboard
9	Reserved	
A	Mouse Init	Initialized the mouse
B	Onboard Audio init	Onboard audio controller initialize if exist
C	Reserved	
D	Reserved	
E	CheckSum Check	Check the intergraty of the ROM, BIOS and message
F	Reserved	
10	Auto detec EEPROM	Check Flash type and copy flash write/erase routines to 0F000h segments
11	Reserved	
12	Cmos Check	Check Cmos Circuitry and reset CMOS
13	Reserved	
14	Chipset Default load	Program the chipset registers with CMOS values
15	Reserved	
16	Clock Init	Init onboard clock generator
17	Reserved	
18	Identify the CPU	Check the CPU ID and init L1/L2 cache
19	Reserved	
1A	Reserved	
1B	Setup Interrupt Vector Table	Initialize first 120 interrupt vectors with SPURIOUS_INT_HDLR and initialize INT 00h-1Fh according to INT_TBL
1C	Reserved	
1D	Early PM Init	First step initialize if single CPU onboard
1E	Reserved	
1F	Re-initial KB	Re-init KB
20	Reserved	
21	HPM init	If support HPM, HPM get initialized here
22	Reserved	
23	Test CMOS Interface and battery Status	Verifies CMOS is working correctly, detects bad battery. If failed, load CMOS defaults and load into chipset
24	Reserved	

Code (hex)	Name	Description
25	Reserved	
26	Reserved	
27	KBC final Init	Final Initial KBC and setup BIOS data area
28	Reserved	
29	Initialize Video Interface	Read CMOS location 14h to find out type of video in use. Detect and Initialize Video Adapter.
2A	Reserved	
2B	Reserved	
2C	Reserved	
2D	Video memory test	Test video memory, write sign-on message to screen. Setup shadow RAM - Enable shadow according to Setup.
2E	Reserved	
2F	Reserved	
30	Reserved	
31	Reserved	
32	Reserved	
33	PS2 Mouse setup	Setup PS2 Mouse and reset KB
34	Reserved	
35	Test DMA Controller 0	Test DMA Controller 0
36	Reserved	
37	Test DMA Controller 1	Test DMA Controller 1
38	Reserved	
39	Test DMA Page Registers	Test DMA Page Registers.
3A	Reserved	
3B	Reserved	
3C	Test Timer Counter 2	Test 8254 Timer 0 Counter 2.
3D	Reserved	
3E	Test 8259-1 Mask Bits	Verify 8259 Channel 1 masked interrupts by alternately turning off and on the interrupt lines.
3F	Reserved	
40	Test 8259-2 Mask Bits	Verify 8259 Channel 2 masked interrupts by alternately turning off and on the interrupt lines.
41	Reserved	
42	Reserved	

Code (hex)	Name	Description
43	Test Stuck 8259's Interrupt Bits Test 8259 Interrupt Functionality	Turn off interrupts then verify no interrupt mask register is on. Force an interrupt and verify the interrupt occurred.
44	Reserved	
45	Reserved	
46	Reserved	
47	Set EISA Mode	If EISA non-volatile memory checksum is good, execute EISA initialization. If not, execute ISA tests an clear EISA mode flag.
48	Reserved	
49	Size Base and Extended Memory	Size base memory from 256K to 640K and extended memory above 1MB.
4A	Reserved	
4B	Reserved	
4C	Reserved	
4D	Reserved	
4E	Test Base and Extended Memory	Test base memory from 256K to 640K and extended memory above 1MB using various patterns. NOTE: This test is skipped in EISA mode and can be skipped with ESC key in ISA mode.
4F	Reserved	
50	USB init	Initialize USB controller
51	Reserved	
52	Memory Test	Test all memory of memory above 1MB using Virtual 8086 mode, page mode and clear the memory
53	Reserved	
54	Reserved	
55	CPU display	Detect CPU speed and display CPU vendor specific version string and turn on all necessary CPU features
56	Reserved	
57	PnP Init	Display PnP logo and PnP early init
58	Reserved	
59	Setup Virus Protect	Setup virus protect according to Setup
5A	Reserved	
5B	Awdflash Load	If required, will auto load Awdflash.exe in POST
5C	Reserved	
5D	Onboard I/O Init	Initializing onboard superIO

Code (hex)	Name	Description
5E	Reserved	
5F	Reserved	
60	Setup enable	Display setup message and enable setup functions
61	Reserved	
62	Reserved	
63	Initialize & Install Mouse	Detect if mouse is present, initialize mouse, install interrupt vectors.
64	Reserved	
65	PS2 Mouse special	Special treatment to PS2 Mouse port
66	Reserved	
67	ACPI init	ACPI sub-system initializing
68	Reserved	
69	Setup Cache Controller	Initialize cache controller.
6A	Reserved	
6B	Setup Entering	Enter setup check and auto- configuration check up
6C	Reserved	
6D	Initialize Floppy Drive & Controller	Initialize floppy disk drive controller and any drives.
6E	Reserved	
6F	FDD install	Install FDD and setup BIOS data area parameters
70	Reserved	
71	Reserved	
72	Reserved	
73	Initialize Hard Drive & Controller	Initialize hard drive controller and any drives.
74	Reserved	
75	Install HDD	IDE device detection and install
76	Reserved	
77	Detect & Initialize Serial/Parallel Port	Initialize any serial and parallel ports (also game port).
78	Reserved	
79	Reserved	
7A	Detect & Initialize Math Coprocessor	Initialize math coprocessor.
7B	Reserved	
7C	HDD Check for Write protection	HDD check out

Code (hex)	Name	Description
7D	Reserved	
7E	Reserved	
7F	POST error check	Check POST error and display them and ask for user intervention
80	Reserved	
81	Reserved	
82	Security Check	Ask password security (optional).
83	Write CMOS	Write all CMOS values back to RAM and clear screen.
84	Pre-boot Enable	Enable parity checker. Enable NMI, Enable cache before boot.
85	Initialize Option ROMs	Initialize any option ROMs present from C8000h to EFFFFh. NOTE: When FSCAN option is enabled, ROMs initialize from C8000h to F7FFFh.
86	Reserved	
87	Reserved	
88	Reserved	
89	Reserved	
8A	Reserved	
8B	Reserved	
8C	Reserved	
8D	Reserved	
8E	Reserved	
8F	Reserved	
90	Reserved	
91	Reserved	
92	Reserved	
93	Boot Medium detection	Read and store boot partition head and cylinders values in RAM
94	Final Init	Final init for last micro details before boot
95	Special KBC patch	Set system speed for boot. Setup NumLock status according to Setup
96	Boot Attempt	Set low stack Boot via INT 19h.
FF	Boot	

40.2 Quick POST Codes

Code (hex)	Name	Description
65	Init onboard device	Early Initialized the super IO. Reset Video controller. Keyboard controller init Test the Keyboard Initialized the mouse Onboard audio controller initialize if exist. Check the intergraty of the ROM, BIOS and message Check Flash type and copy flash write/erase routines to 0F000h segments Check Cmos Circuitry and reset CMOS Program the chipset registers with CMOS values Init onboard clock generator
66	Early Sytem setup	Check the CPU ID and init L1/L2 cache. Initialize first 120 interrupt vectors with SPURIOUS_INT_HDLR and 10 initialize INT 00h-1Fh according to INT_TBL First step initialize if single CPU onboard. Re-init KB If support HPM, HPM get initialized here.
67	KBC and CMOS Init	Verifies CMOS is working correctly, detects bad battery. If failed, load CMOS defaults and load into chipset. Final Initial KBC and setup BIOS data area.
68	Video Init	Read CMOS location 14h to find out type of video in use. Detect and Initialize Video Adapter. Test video memory, write sign-on message to screen. Setup shadow RAM - Enable shadow according to Setup.
69	8259 Init	Init 8259 channel 1 and mask IRQ 9
6A	Memory test	Quick Memory Test
6B	CPU Detect and IO init	CPU vendor specific version string and turn on all necessary CPU features Display PnP logo and PnP early init Setup virus protect according to Setup. If required, will auto load Awdflash.exe in POST Initializing onboard superIO
6C	Reserved	
6D	Reserved	
6E	Reserved	
6F	Reserved	
70	Setup Init	Display setup message and enable setup functions Detect if mouse is present, initialize mouse, install interrupt vectors. Special treatment to PS2 Mouse port ACPI sub-system initializing
71	Setup Cache Controller	Initialize cache controller.

Code (hex)	Name	Description
72	Install FDD	Enter setup check and auto11 configuration check up Initialize floppy disk drive controller and any drives. Install FDD and setup BIOS data area parameters
73	Install FDD	Initialize hard drive controller and any drives. IDE device detection and install Initialize any serial and parallel ports (also game port).
74	Detect & Initialize Math Coprocessor	Initialize math coprocessor.
75	HDD Check for Write protection	HDD check out
76	Reserved	
77	Display POST error	Check POST error and display them and ask for user intervention Ask password security (optional).
78	CMOS and Option ROM Init	Write all CMOS values back to RAM and clear screen. Enable parity checker Enable NMI, Enable cache before boot. Initialize any option ROMs present from C8000h to EFFFFh. NOTE: When FSCAN option is enabled, ROMs initialize from C8000h to F7FFFh.
79	Reserved	
7A	Reserved	
7B	Reserved	
7C	Reserved	
7D	Boot Medium detection	Read and store boot partition head and cylinders values in RAM
7E	Final Init	Final init for last micro details before boot
7F	Special KBC patch	Set system speed for boot. Setup NumLock status according to Setup.
80	Boot Attempt	Set low stack Boot via INT 19h.
FF	Boot	

40.3 S4 POST Codes

Code (hex)	Name	Description
5A	Early Chipset Init	Early Initialized the super IO. Reset Video controller. Keyboard controller init. Test the Keyboard Initilized the mouse
5B	Cmos Check	Check Cmos Circuitry and reset CMOS
5C	Chipset default Prog	Program the chipset registers with CMOS values. Init onboard clock generator
5D	Identify the CPU	Check the CPU ID and init L1/L2 cache Initialize first 120 interrupt vectors with SPURIOUS_INT_HDLR and INT 00h-1Fh according to INT_TBL. First step initialize if single CPU Onboard. Re-init KB If support HPM, HPM get initialized Here.
5E	Setup Interrupt Vector Table	Initialize first 120 interrupt vectors with SPURIOUS_INT_HDLR and INT 00h-1Fh according to INT_TBL. First step initialize if single CPU Onboard. Re-init KB If support HPM, HPM get initialized here.
5F	Test CMOS Interface and Battery status	Verifies CMOS is working correctly, detects bad battery. If failed, load CMOS defaults and load into chipset.
60	KBC final Init	Final Initial KBC and setup BIOS data area
61	Initialize Video Interface	Read CMOS location 14h to find out type of video in use. Detect and Initialize Video Adapter.
62	Video memory test	Test video memory, write sign-on Test video memory, write sign-on message to screen. Setup shadow RAM - Enable shadow according to Setup.
63	Setup PS2 mouse and test DMA	Setup PS2 Mouse and reset KB Test DMA channel 0
64	Test 8259	Test 8259 channel 1 and mask IRQ 9
65	Init Boot Device	Detect if mouse is present, initialize mouse, install interrupt vectors. Special treatment to PS2 Mouse port ACPI sub-system initializing Initialize cache controller.
66	Install Boot Devices	Enter setup check and auto-configuration check up Initialize floppy disk drive controller and any drives. Install FDD and setup BIOS data area Parameters Initialize hard drive controller and any drives. IDE device detection and install
67	Cache Init	Cache init and USB init
68	PM init	PM initialization
69	PM final Init and issue SMI	Final init Before resume
FF	Full on	

40.4 BootBlock POST Codes

Code (hex)	Name	Description
1	Base memory test	Clear base memory area (0000:0000--9000:ffffh)
5	KB init	Initialized KBC
12	Install interrupt vectors	Install int. vector (0-77), and initialized 00-1fh to their proper place
0D	Init Video	Video initializing
41	Init FDD	Scan floppy and media capacity for onboard superIO
FF	Boot	Load boot sector